

Appendix B: Photographs of EUT


Product: SPEAKER
Model: Party System 210
External Photos









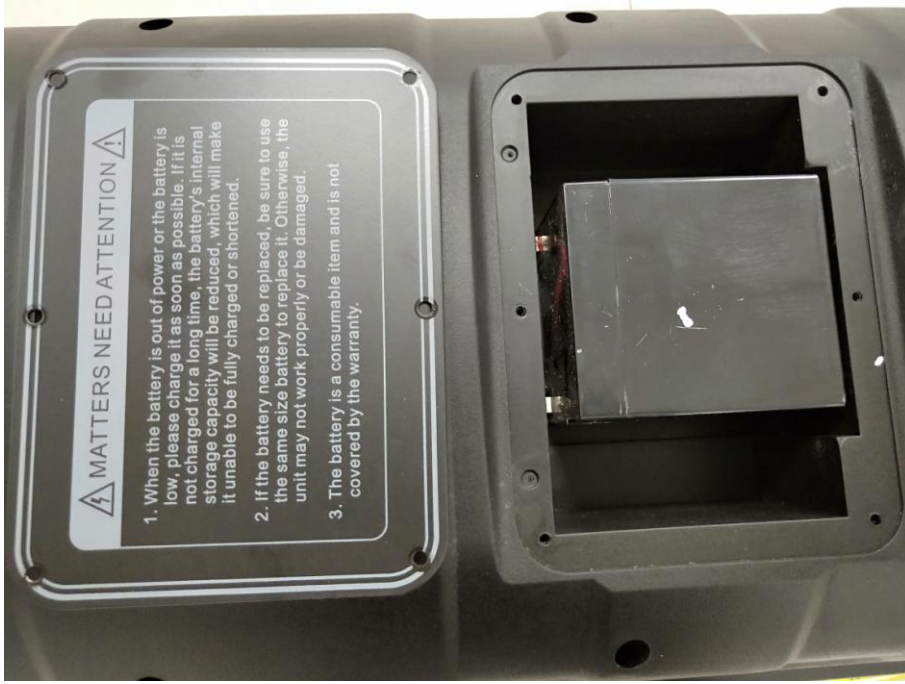

⚠ MATTERS NEED ATTENTION ⚠

1. When the battery is out of power or the battery is low, please charge it as soon as possible. If it is not charged for a long time, the battery's internal storage capacity will be reduced, which will make it unable to be fully charged or shortened.
2. If the battery needs to be replaced, be sure to use the same size battery to replace it. Otherwise, the unit may not work properly or be damaged.
3. The battery is a consumable item and is not covered by the warranty.