

PC Wireless Controller

HD-151 001+

FOR:Xbox-one/X-input/PC/PS3/Android



I Mode and indicator light status

HOME indicator light : Xbox one: (red) X-input:(blue)
PC/PS3/Android: (Purple)

Warning:Press "HOME " button for 5 seconds to exchange Xbox one、 X-input、 PC mode.PS3 or Android device usage, automatic identification of insertion devices.

II Turn on/off the gamepad

Turn on: Press "HOME" to start the gamepad.

Turn off: Automatic turn off after 5 minute without any operation;Long press "BACK" + "B" to turn off the gamepad.

III Connection

Plug USB receiver and press "HOME" button, the indicator light is always means connected. Use OTG adaptor for Android phone or other Micro USB interface devices first, then press "HOME" button, the indicator light is always means connected.

Warning: Please re-operate the above steps or long press "HOME" button to connect forcibly.

IV Drive Specifications

PC platform: Plug and play except of windows XP.Please download and install the ONE controller driver on Microsoft's official site first; Vibration feedback only works with X-input mode.

If you use the Xbox one mode on the PC, you need to use the Win10 system.

PS3 & Android platform: Plug and play.

V Reset Gamepad

Please restart the gamepad and device, or reset the gamepad when there is an exception, such as dysfunction,crash or disconnected.

How to reset your gamepad: Insert a needle to the "RESET" button on the back.

VI Automatically Fire Function

 
Press "TURBO" + any button to turn on fire function,(e.g. Press button "TURBO" + "A") to activate and "A" button is enabled Re-operate it to turn off the function.when you press the button, the button function will be repeated.

Press "TURBO + START"to cancel all the function keys set.

Press "AUTO " + any button to turn on auto-fire function,(e.g. Press button "AUTO + A") to activate and "A" button is enabled Re-operate it to turn off the function.There is no need to press the button, the button function will be auto-repeated.

Press "AUTO + START" to cancel all the function keys set.

Fire and auto-fire function buttons can be set up to 8pcs at the same time(A/B/X/Y/LT/LB/RT/RB).

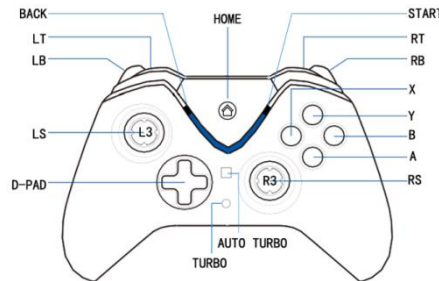

VII Accessibility Options

press "BACK + R3" to turn on/off the vibration mode.

press "BACK + A" to turn on/off the "ABXY" button light.

press "BACK + X" to turn on/off the decorative light.

Long press "BACK + B" to turn off the gamepad.

Press "HOME" to change the main/deputy gamepad when you play double gamepads.

Under X-input mode, press "BACK" + "L3" to exchange LS and D-Pad functions.

Warning: L3 and R3 refer to vertical downward pressure LS and RS.

VIII FAQ

How to choose different modes?

Xbox-one:default mode.

PC: Recommend using X-input mode for PC360 platform: <NARUTO> <Need For Speed><Pro Evolution Soccer> ,etc.

Otherwise choose Direct-input mode for ROMS or Dynasty Warriors,etc.

PS3: Only support Direct-input mode.

Android : Recommend using Android mode, part of games require button reset or game platform's software. Please contact us if you need further help.

Why my android device unable to use?

- 1) Be sure your device is android version 4.0 or above.
- 2) Be sure your device support OTG function and gamepad entirely.
- 3) Be sure the gamepad is working properly with right mode.
- 4) Full charge your device.

Some android devices would not support our gamepad for hardware or chip problem, for more details please contact the device manufacturers.

IX Button Test

Windows XP: Select "Start"->"Control Panel", then double-click or right-click the icon "game controller" to open and test.

Windows 7/8/10: Select "control panel"->"Devices and Printers", then right click the icon "game controller settings" to open and test.

X Product Specification

Model	HD-151 001+	Humidity	20~80%
Temperature	-10℃~+60℃	Working current	<150mA
Product size	156×112×59mm	Interface	USB
Packing size	160*172*69mm	Agreement	USB 2.0/3.0
N.W	208g	Working mode	Xbox One

Federal Communications Commission Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.