


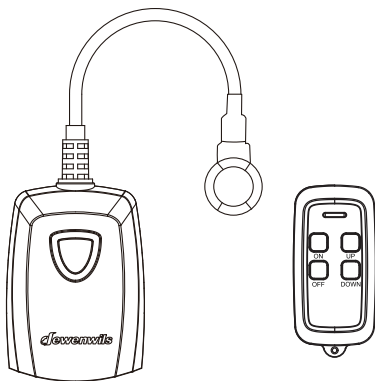

Outdoor Remote Control Dimmer

SKU:HORD01A
[Instruction Manual]



Thank you for your purchase.
Please contact us if you have any questions.
We will get back to you within 24 hours.
Please attach your Order ID so that
we can serve you better.

Note:


This dimmer switch only works for dimmable LED bulbs and Incandescent bulbs. Do not use it with non-dimmable bulbs.

Warning:

To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.

1. To prevent water immersion, the dimmer must be mounted in a vertical position with the outlets facing downwards and at least 2ft above the ground level.
2. Do not immerse in water.
3. To avoid overheating or possible damage to other equipment, do not use it to control motor-operated or transformer-supplied appliances.
4. Do not connect any bulbs which may exceed the maximum ratings of this dimmer.
5. Do not disassemble or repair the product except by authorized service staff.
6. Children are not allowed to use the remote outlets without supervision.
7. To prevent children suffocation and choking, keep them away from packaging materials.
8. Used batteries should be disposed safely and environmentally.

Product Layout

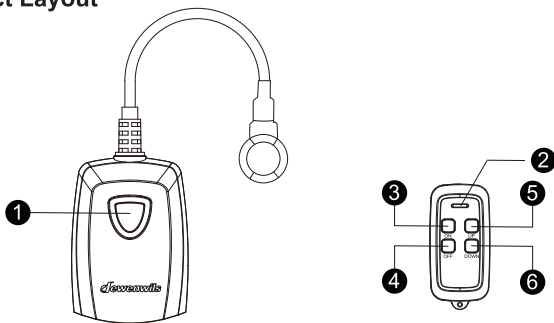

- 1 Program/ON/OFF Button/ Indicator
- 2 Indicator
- 3 ON Button
- 4 OFF Button
- 5 UP Button: Make the light brighter
- 6 DOWN Button: Make the light darker

Operating Instructions

Notes: The receiver must be located within 100 feet of the remote transmitter. Actual functional range may be affected by the following factors: weather, radio frequency interference, low remote battery, and obstructions between the transmitter and receiver.

1. Remove the isolation tap in the battery compartment on the transmitter.
2. Plug the receiver into a powered outlet.
3. Plug your light into the socket of the receiver.
4. To control your matching devices:
 - 1) Use ON/OFF buttons to turn the light ON/OFF.
 - 2) Use the UP and DOWN buttons to find desired dimming level.
Short press for slow dimming, long press for fast dimming.

Programming the Dimmer

Note: The transmitter and receiver have been pre-programmed for immediate use, but the configuration could be customized to meet your needs.

To program a remote transmitter and receiver:

1. Press and hold the programming button on the receiver, and plug the receiver into an outlet.
2. After you plug it in, keep pressing the button, the indicator would flash after 5 seconds.
3. Release the button, and press any button on your transmitter.

4. The indicator stops flashing, your dimmer has been successfully paired. Repeat the steps above, the dimmer allows you to pair with up to 4 transmitters.

Cancelling All Programming

1. Press and hold the programming button on the receiver, and plug the receiver into an outlet.
2. Hold the button for 8 seconds, the indicator would start flashing.
3. Keep holding the programming button until the indicator is off and then release the programming button.

Specifications

- Input Voltage: 125VAC 60Hz
- Max. Load Power: Tungsten 400w, LED 200W
- Transmission Frequency: 433.92MHz
- Remote Battery: CR2032

FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

One Year Limited Warranty

DEWENWILS warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase.

Warranty is void if damage is caused by misuse or improper installation. Our dedicated customer service team will get back to you within 24 hours.



Made in China