 


Disney CRUISE LINE



## FLOATING SHIP WIRELESS SPEAKER USER GUIDE

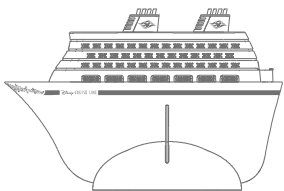

**IP67**  
Water & Dustproof

Dear Guest,

Thank you for purchasing our Disney Cruise Line Floating Ship Wireless Speaker. To make your experience more enjoyable, we recommend you read and follow the instructions before using. Also, please keep the volume at a moderate level when playing music in common areas. This way, we can all have a pleasant and Magical Voyage!

With Much Appreciation,

 
Disney Cruise Line

### Warnings

- ★ Please make sure that the grey rubber cover for the power input and headset/Aux. output is properly secured before any use on water.
- ★ Avoid dropping or hitting the speaker.
- ★ Avoid contact with any chemicals.
- ★ Please keep away from strong magnetic and electric fields.
- ★ Please avoid direct contact with electrical appliances or excessive heat.
- ★ Do not open or disassemble as this may cause permanent damage.
- ★ Do not submerge under water for long periods of time.
- ★ Do not submerge under salt water.


NOTE: ALTHOUGH THIS SPEAKER IS WATERPROOF AND DUSTPROOF (IP67), IF IT BECOMES COMPLETELY SUBMERGED, THE SOUND QUALITY MAY BE TEMPORARILY AFFECTED. SIMPLY TURN THE SHIP UPSIDE DOWN TO ALLOW ALL EXCESS WATER TO DRAIN. WAIT AROUND 30 MINUTES AND THE SOUND SHOULD GO BACK TO NORMAL.

### Product description

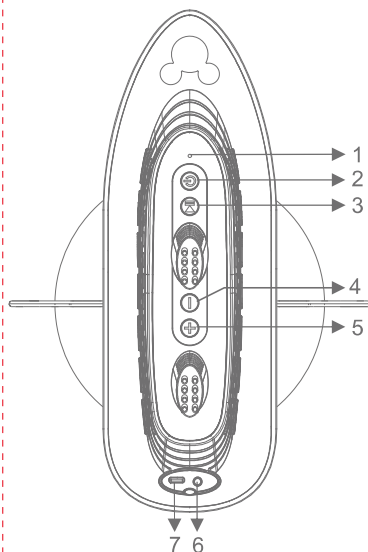

- 1: Status light indicator  
2: Power ON/OFF  
3: Play/Pause  
4: Volume down  
5: Volume up  
6: Headset/Aux. output  
7: Power input

### Direction for use

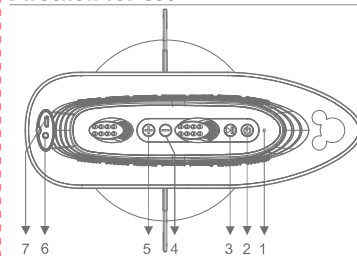 

#### 1 Status indicator

- Startup: The blue light lights up and flashes slowly.
- Pairing: The blue light stops flashing after successful wireless pairing.
- Remark: The red light will always be on when charging, and will turn green when battery is full.

#### 2 Power supply

- Power ON/OFF
- Short press: LED lights mode switching  
Long press: ON/OFF

#### 3 Play/Pause

- Play/Pause
- Long press: Disconnect/Reconnect wireless;  
Short press: Play/Pause

### Direction for use

#### 4 Volume reduction

- Volume reduction
- Short Press: Volume Down  
Long press: Previous Track

 
#### 5 Volume up

- Volume up
- Short press: Volume up  
Long press: Next track

#### 6 Headset/Aux. output

- Headset/Aux. output
- Support audio output

#### 7 Power input

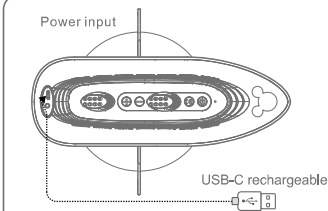

### Wireless connection

1. Turn on the Bluetooth® function of mobile devices (mobile phones, computers, etc.) and search for DCL Ship Speaker.
2. The Wireless mode will be entered by default when starting up the ship. The ship will sound a prompt tone and the status indicator will flash slowly.
3. Click manually, the speaker will be automatically paired and connected, and a prompt tone will be heard when the connection is successful. (In general, you do not need to enter a password; in some instances, you will be prompted to enter a password, please enter "0000").
4. When the speaker has been successfully paired, it will be automatically connected the next time it's turned ON.

### Technical specifications

Horn Power Output	5W (RMS)
Frequency Response	90Hz - 15KHz
Driver Unit	45mm
Distortion	<0.2% @ 1KHz / 1.0W
Separation	≥80 dB @ 1KHz / 1.0W
Input Impedance	≥15k ohm
Size	280(L) x 100(W) x 175(H) (mm)
Bluetooth Ver.	5.3

**FCC Caution:**  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Designed Exclusively for:  
**Disney CRUISE LINE**  
© DISNEY

FCC  
FCC ID: 2AU4F-180M1  
PATENT PENDING  
Printed in China