

WARNINGS

The Wave Roller™ is intended for commercial or home use. We strive to make the Wave Roller as safe as possible. This is an advanced mechanical device with electric components. If the Wave Roller and its accessories are not used or maintained properly, there is a risk of fire, electric shock, or injury. Do not place your finger or any objects near the metal piston above the attachment while the Wave Roller is in use or immediately after use. The metal piston can become extremely hot. Do not use any attachments other than the ones provided by Therabody and only as instructed by Therabody. Do not use the Wave Roller on your head or near your genitals. Do not use the Wave Roller above the waist during pregnancy. Do not get hair caught in any moving part of the Wave Roller. Do not use the Wave Roller above your Adam's apple or C4. Do not get the Wave Roller wet. Only clean the Wave Roller with a magic eraser or a lightly damp towel. Do not block the vents of the motor. Never attempt to disassemble the Wave Roller. Never store the Wave Roller at temperatures above 40°C/104°F. Only charge the Wave Roller when the ambient temperature is between 0°C/32°F and 40°C/104°F. Never expose the Wave Roller or its adapter to water. For long-term storage, the Wave Roller should be fully charged. This product is not intended to diagnose, treat, or prevent any diseases. BEFORE USING OR CHARGING THE Wave Roller, READ ALL THE INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL, ON THE ADAPTER, AND ON THE Wave Roller. When using the Wave Roller, these basic precautions should always be followed including:

1. USE ONLY AS INSTRUCTED. Use the Wave Roller as described in this Wave Roller Instruction Manual. Do not carry out any maintenance other than what is shown in the Wave Roller Instruction Manual or advised by Therabody.
2. NOT FOR CHILDREN. The Wave Roller and adapter are not intended for use by young children or persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person. Do not allow the Wave Roller to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the Wave Roller or adapter.
3. REDUCING RISK OF INJURY. Charge the Wave Roller only with the Wave Roller adapter. Other adapters may cause personal injury or damage. Do not connect the Wave Roller to a different power supply plug or car cigarette lighter. The internal battery will be permanently disabled or damaged.
4. CHARGING LOCATIONS. The Wave Roller should be charged indoors in a well ventilated, dry location. Do not charge the Wave Roller outdoors, in a bathroom or within 10 feet (3.1 meters) of a bathtub, or pool. Do not use the Wave Roller or adapter on wet surfaces and do not expose the adapter to moisture, rain, or snow. Do not use the Wave Roller or adapter in the presence of explosive atmospheres (gaseous fumes, dust, or flammable materials). Sparks may be generated, possibly causing a fire.
5. UNPLUGGING THE Adapter. Pull the plug, not the cable, to reduce the risk of damage to the electrical plug and cable. Never carry the adapter by its cable. Keep the cable from heat, oil, and sharp edges. Do not use or charge with a damaged cable. Do not stretch the adapter cable or place the cable under strain. Keep cable away from heated surfaces. Do not handle the adapter, including the adapter terminals or Wave Roller with wet hands. Only charge with AC Adapter : EA1046SAR or with the Theragun Multi-Device Wireless Charger.
6. Adapter CARE. Unplug the adapter when not in use. Unplug the adapter from the outlet when not in use for extended periods. Make sure the adapter cable is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress. Have a damaged adapter replaced immediately.
7. DO NOT OVERCHARGE. Do not leave the Wave Roller connected to the adapter for more than an hour after the Wave Roller has been fully charged. The Wave Roller includes a protection system to avoid the risk of overcharging. However, overcharging the Wave Roller may reduce its life over time.
8. DO NOT BURN OR INCINERATE THE Wave Roller. The internal battery may explode, causing personal injury or damage. Toxic fumes and materials are created when battery is burned.
9. DO NOT CRUSH, DROP, OR DAMAGE THE Wave Roller Adapter. Do not use a adapter that has received a sharp blow, been dropped, run over, or damaged in any way.
10. BATTERY CHEMICALS CAUSE SERIOUS BURNS. Never allow the internal battery to come into contact with the skin, eyes, or mouth. If a damaged battery leaks chemicals, use rubber or neoprene gloves to dispose of it. If skin is exposed to battery fluids, wash with soap and water then

rinse with vinegar. If eyes are exposed to battery chemicals, immediately rinse with water for 20 minutes and seek medical attention. Remove and dispose of contaminated clothing.

11. **DO NOT OPERATE UNDER BLANKET AND PILLOW.** Excessive heating can occur and cause fire, electric shock, or injury to persons.

12. **STORING THE Wave Roller AND Adapter.** Store in a cool, dry place. Do not store the Wave Roller where temperatures may exceed 40°C/104°F such as in direct sunlight, in a vehicle, or metal building during the summer.

13. **DISPOSING OF BATTERIES.** The internal Theragun Lithium-ion batteries for the Wave Roller are more environmentally friendly than some other types of batteries (e.g. nickel-cadmium). Always dispose of the Wave Roller according to government, regional, and local regulations. Contact a recycling agency in your area for recycling locations. Even discharged batteries contain some energy. Before disposing, use electrical tape to cover the Wave Roller's 12V connector to prevent the battery from shorting, which could cause a fire or explosion.

14. **DO NOT DISASSEMBLE.** Disassembly or incorrect reassembly may result in the risk of electric shock, fire, or exposure to battery chemicals. The warranty will be void if the Wave Roller or adapter are disassembled or if any parts have been removed.

15. **SERVICE.** If the Wave Roller or adapter is not working properly, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact Therabody by emailing info@therabody.com for repair or service. Do not attempt to repair or disassemble the Theragun Wave Roller which may result in an electric shock or fire.

16. **DO NOT USE WHILE BATHING OR IN THE SHOWER, TUB, OR SINK.** Do not place or store the Wave Roller where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid. Do not reach for an appliance that has fallen into water. Unplug immediately.

17. **THERMAL LIMITER.** The Wave Roller employs an automatic reset thermal limiter that shuts off the Wave Roller to prevent overheating and fire.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LIMITED WARRANTY

For full warranty information, please visit www.therabody.com/warranty. To request a copy of the warranty by mail, you may send a request to the following address: Therabody - Warranty Attn: Customer Service 3003 W. Olympic Blvd., Suite 106-140 Los Angeles, CA 90006 Please note, this is not a return address or a retail location. No products or packages will be accepted at this location.