# **User Manual**

## (Fold Inward) \_ \_ \_ \_ \_

## (Back Cover)

### Media Playback

 
- Press either earbud's MULTI button to PLAY/PAUSE media
- 2x Press the LEFT earbud's MULTI button to skip to the PREVIOUS track
- 2x Press the RIGHT earbud's MULTI button to skip to the NEXT track
- 3x Press the LEFT earbud's MULTI button to DECREASE volume
- 3x Press the RIGHT earbud's MULTI button to INCREASE volume

### Phone Calls

- Press either earbuds' MULTI button to ANSWER an incoming phone call
- Press either earbuds' MULTI button to END an ongoing phone call
- · Long-Press (2s) either earbuds' MULTI button to REJECT an incoming phone call.

### Voice assistant

• If your device has a voice assistant feature, **Long-Press (2s)** either earbuds' MULTI button to activate voice assistant



### Compliance Information

### FCC Information This device complies with Part 15 of the FCC Rules,

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC flules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or or adio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction,

WAHNING Li-ion Battery Inside
This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery
and do not use it in damp and/or corrosive conditions. Use only with compatible chargers,
Never dispose of batteries in a fire, and never expose them to high temperatures. Do not
expose the product to temperatures exceeding 60°C (140°F).

### Rating Label Definitions

=== Direct current symbol.

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural sources, human health and the environment.



BC This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.

Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology.

### Warranty Information

### 90-Day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchase against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

   Visit our customer support portal: www.customersupport123.com

   Select the brand and model of your device

   Select Teavice Request\* and fill out the form to begin your inquiry

   Exchanges require dated proof of purchase from an authorized retailer

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unsulthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, afters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTES WHETHER EVPORESS OF IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTES OF MEDICANTAMENT. WHETHER EVPORESS OF MEDICANTAMENT OF THE THAT THOSE EVPRESSY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTION FURTHER DISCLAMS ALL WARRANTES AFTER THE EVPRESS WARRANT PERSON STAFFE ABOVE SHALL APPLY. DISTRIBUTION FURTHER DISCLAMS ALL WARRANTES AFTER THE EVPRESS WARRANT PERSON STAFFE ABOVE THAT AND THE EVPRESS WARRANTY OF GUARANTY OF ME BY ANY PERSON. FIRM DIS ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BRINDING ON DISTRIBUTION REPAIR. REPLACEMENT OR REPUND OF THE ORIGINAL PURCHASE PRICE. AT DISTRIBUTIONS SOLE DISCRETION. ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTION OR ITS MANUFACTURES BE LUBLE FOR ANY MICROENTAL DISTRIBUTION FOR THE MEDICAN SOLE DISCRETION ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTION OR ITS MANUFACTURES BE LUBLE FOR ANY MICROENTAL DISTRIBUTION STAFF. AND AND ANY OF THE PRODUCT LIMITED TO LAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS. CAUSED BY THE USE, MUSICS OF INABILITY TO USE THE PRODUCT EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTION SHALL NOT EXCEED THE PRODUCT SAULD BY DISTRIBUTION THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERBLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow wome suntrues, states or provinces do not allow the exclusion of initiation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty opens you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Designed in US Printed in China

**Getting Started** 

## **ART+SOUND**



Instruction Manual

**LED TWS Light-Up Earbuds & Case** 

### Before You Begin...

### READ CAREFULLY AND KEEP THIS MANUAL


### 

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with
- Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- · Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The case and earbuds include built-in batteries should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of batteries.

- ARTWS107 True Wireless Earbuds (L & R)
- · Charging Case (x1)
- USB Charging Cable (x1)

### Location of Controls

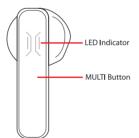


USB Charging Port

(Back of Case)

### Charging the Case

 Insert the small connector of the included USB charging cable into the charging port on the back of the case. Insert the large connector into a USB power source such as the USB port on a computer, or into a 5V USB adapter (not included) and plug into a wall



### Charging the Earbuds


- Use the included charging case to protect and charge your earbuds.
- To charge the earbuds, open the case. Place the earbuds into the correct earbud charging ports. The earbuds will automatically power OFF and begin charging.

### Powering ON/OFF

- When removed from the case, the earbuds will automatically power ON
- · Alternatively, you may Long-Press (3s) the earbuds' MULTI button to manually power
- When replaced into the case, the earbuds will automatically power OFF
- · Alternatively, you may Long-Press (5s) the earbuds' MULTI button to manually power

### Bluetooth Pairing

- 1. The earbuds will automatically power on and pair with one another when removed from the case. After a few seconds, a tone should be heard indicating that the earbuds have connected to each other.
- 2. Open your device's Bluetooth menu and select ARTWS107 when it appears.
- 3. Another tone will be heard, indicating that the earbuds are successfully connected to your device.

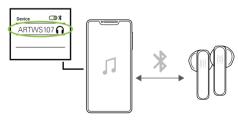

### Pairing Troubleshooting

Trouble Pairing the Earbuds to Each Other? Try these steps:

- 1. Place both earbuds back into the case to power them OFF.
- 2. You may need to go into your device's Bluetooth settings and manually "Forget" one or both of the earbuds, and turn your device's Bluetooth OFF while the earbuds pair
- 3. Turn your device's Bluetooth back ON if necessary, and follow the Bluetooth Pairing steps above again.