

REDIGLE

LED Flexable Gooseneck Desk Lamp with Display



Thank you for your purchase.
Please contact us if you have any questions,
and we will get back to you within 24 hours.
Email: best@tianhualighting.com
Please attach your Order ID so that we can serve you better.

Caution

1. Before assembly, place all parts out on a clean flat surface and inspect each part for defects that may have occurred during shipping.
2. Inspect wire insulation for any cuts, abrasions or exposed copper that may have resulted during shipping. If there are any defects in the wire, DO NOT continue assembly. Please send an email to our Customer Service immediately (best@tianhualighting.com).
3. Consult a qualified electrician if you have any electrical questions.
4. Never drape clothes over the lamp.
5. To reduce the likelihood of tipping over, we recommend placing the lamp behind furniture and keep children and pets away.
6. To prevent children from suffocating and choking, keep them away from packing materials.

Specifications

 
- Product Height: 60.5 cm
- Base Diameter: 12.6*18 cm
- CCT: 5,000±100K
- Max. Wattage: 24 W
- Materials: Plastic & Metal
- Voltage of Remote: DC 12V2A
- Input Voltage: 100-240VAC 50/60Hz

One-year Limited Warranty

REDIGLE warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty will be void if damage is due to misuse or improper installation. Please contact us if you have any questions.
Email: best@tianhualighting.com

Operation

Connect the supplied DC power adapter to the corresponding input in the rear of the lamp base.

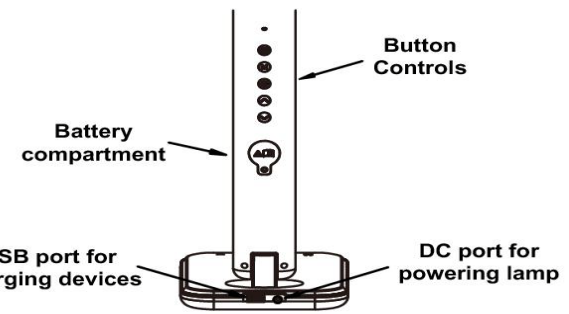

Operation-Wireless Charging

Note:Phone must have wireless charging capability.

Place your phone onto the charging pad and charging will start automatically.

The phone does not need to be Wifi or Bluetooth to charge.

The wireless charging indicator will blink white when charging and turn solid white when fully charged.if a connection error occurs, the light will turn Solid red.

Note:

- . If charging does not begin,try adjusting the phone so its receiver can be detected.
- .Different model phones have receivers in different areas of the phone, Align the center of your phone with the Qi logo to achieve the fastest charging.

Caution:

- .Use the supplied DC power adapter only.
- .Do not dismantle the product by yourself,always ask a professional electrician or authorized technician for repair assistance.
- .If you smell a bad odor or anything unusual,turn off the unit immediately.
- .Do not remove the power plug with wet hands as it may cause electrical shock. Keep away form children.
- .Do not put this unit near extreme heat sources,moisture,or corrosives substances.
- .Regularly clean the lamp with damp cloth.
- .Store in dry and cool place if not using for an extended period of time.




Note: Charging with a phone case, especially a thick one, may cause the phone to not charge. The LED indicator will flash red if the phone is placed incorrectly or if the case is too thick and will not charge.

Lamp Adjustments


Lamp Arm and head Adjustment

Be sure to hold the lamp base while adjusting the angle of the light head.

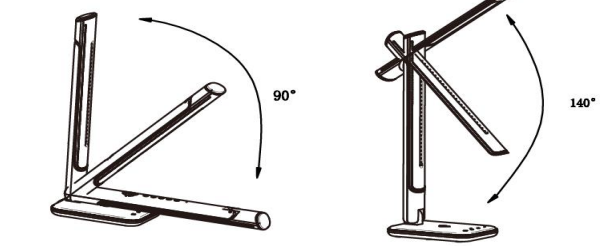

Touch Controls

 Touch controls are located on the front of the base of the lamp

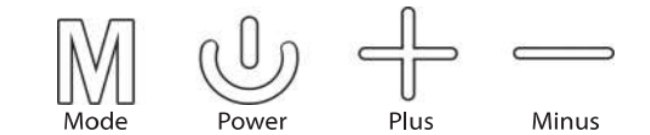

Adjusting the Brightness

- 1.Press the POWER touch control(on the front of the base of the lamp)to turn the light on.
- 2.Press PLUS or MINUS on the touch controls to increase or decrease the brightness of the LED lights.

Adjusting Light Color Temperature.

Press the MODE touch control(on the front of the base of the lamp)to select the color temperature.The color temperatures are set in the following order.

- . Warm light
- .Cool light
- .Natural light

Lamp Settings

Button Controls

Button controls are located on the back of the neck of the lamp.



Adjusting Clock Brightness

At any time press the SCREEN button in back of unit to change brightness of the clock and temperature screens.

12 or 24 Hour Clock Setting

Press the UP button in the back of the unit to toggle between 12 or 24 hour clock.

12 Hour Clock Date&Time Setting

- 1.Press the SET button on the back of lamp,and the hours will begin flashing on the display screen. Press UP or DOWN to adjust hours up or down,Press the SET button when you get to the desired hour.
- 2.Minutes will then begin flashing.Press UP or DOWN buttons to get to the desire minute. Press the SET button when you get to the desired minute.
- 3.Year will begin flashing.Set year,month,and date.Press UP or DOWN to get to the desired date. Press the SET button when you get to the desired date.After the date is set,the display will stop flashing.

NOTE:If no buttons are pressed for 60 seconds during set up,the display will go back to standard mode.

24 Hour Clock Date&Time Setting

- 1.Press the SET button, on the back of lamp,and the hours will begin flashing on the display screen. Press UP or DOWN to adjust hours up or down,Press the SET button when you get to the desired hour.
- 2.Minutes will then begin flashing.Press UP or DOWN buttons to get to the desired minute. Press the SET button when you get to the desired minute.
- 3.Year will begin flashing.Set year,month,and date.Press UP or DOWN to get to the desired date. Press the SET button when you get to the desired date. After the date is set,the display will stop flashing.

NOTE:If no buttons are pressed for 60 seconds during set up,the display will go back to standard mode.

Setting Fahrenheit or Celsius Temperature

Press UP or DOWN button to toggle between Fahrenheit and Celsius.

Lamp Settings

Alarm Function

- 1.Press the MODE button in the back of the unit.The Alarm Mode icon will Appear on the display.

 


- 2.In Alarm Mode,press the SET button.The hour will begin flashing.Press the UP or DOWN button to set the desired hour and press SET.Minutes will start flashing.Press the UP and DOWN to set the desired minutes,then press SET.
- 3.The display will now begin flashing the length for the alarm snooze function between rings.You can set from 1-60 minutes by pressing the UP or DOWN button.Press SET once you reach the desired minutes,then press SET.
- 4.The number 1 will begin flashing on the display.You can choose between eight different alarm tones by using the UP or DOWN button on the back of the unit.Press UP or DOWN button to toggle through the alarm tones and hear them play.Press SET when you get to the desired alarm tone.
- 5.Press UP or DOWN button twice in Alarm Mode to turn the alarm on,the Alarm indicator(Zz) will appear on the display.The alarm is now set and will go off at the set time.

- 6.If you do not want the alarm on,press the MODE button on back of the lamp. The Alarm Mode icon will appear.Press the UP or DOWN button until the Alarm indicator(Zz) is no longer visible on the display.The alarm is now turned off.

Warning:

- 1.The lamp included one piece coin battery inside of the bottom of lamp to power on the display screen.
- 2.The type of coin battery is CR2025, please only replace with same type of battery.
- 3.The battery is to be replaced by an adult.
- 4.To replace new battery, please remove the screw from the battery compartment and remove the compartment cover. when assembling the cover do not over tighten the screw. Insert a new CR2025 battery.

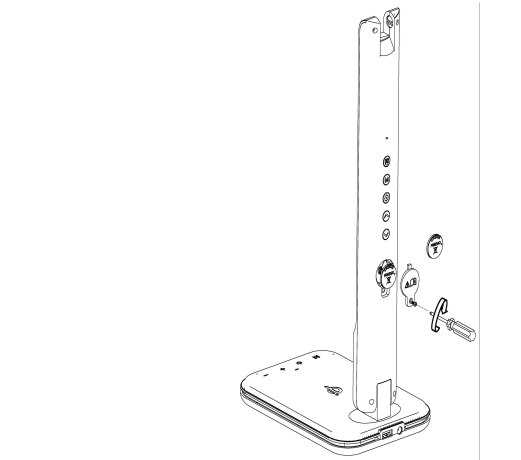

- 5.Ensure the polarity(+/-) of battery is correct when inserting the battery.
- 6.Do not dispose the used battery in your household waste. Your local authority has made special arrangements for the disposal of electrical waste.
- 7.Non-rechargeable batteries are not to be recharged.
- 8.Handle leaking or damaged batteries with extreme caution and dispose of them properly as soon as possible. Wearing gloves when removing the leaking or damaged batteries.
- 9.The supply terminals are not to be short-circuited.
- 10.The battery must be removed from the luminaire before it is scrapped.
- 11.The appliance must be dis-connected from the supply mains when removing the battery.
- 12.The battery is to be disposed of safely.
- 13.The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- 14.If the luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- 15.Risk of fire or explosion if the battery is replaced by an incorrect type.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation.This equipment generates uses and can radiate radio frequency energy and ,if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.Operation is subject to the following two conditions:

 
- (1)This device may not cause harmful interference,and(2) this device must accept any interference received,including interference that many cause undesired operation.
- RF Exposure Statement
To Maintain compliance with FCC's RF Exposure guidelines,This equipment should be installed and operated with minimum distance of 15cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Mfr: Dongguan Tianhuaguangdiankeji youxiangongsi
Add: JiTiGang JinQianLing 2Lu3Hao,Huangjiang zhen
Guangdong China 523000
Mb: +86189 2820 0163
Tel: +86 769 38854328
FAX: +86 769 82607338
E-mail:best@tianhualighting.com
Made in China



Operation

Connect the supplied DC power adapter to the corresponding input in the rear of the lamp base.

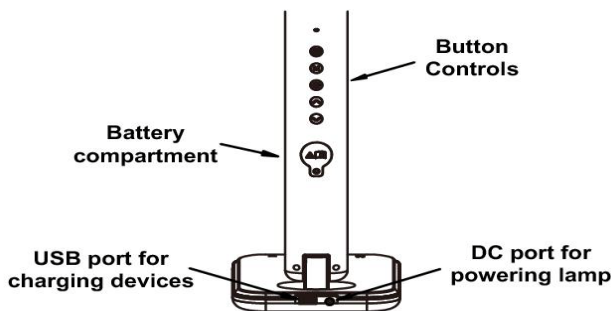

Operation-Wireless Charging

Note: Phone must have wireless charging capability.

Place your phone onto the charging pad and charging will start automatically.

The phone does not need to be Wifi or Bluetooth to charge.

The wireless charging indicator will blink white when charging and turn solid white when fully charged. If a connection error occurs, the light will turn Solid red.

Note:

. If charging does not begin, try adjusting the phone so its receiver can be detected.

. Different model phones have receivers in different areas of the phone, Align the center of your phone with the Qi logo to achieve the fastest charging.

- 5.Ensure the polarity(+/-) of battery is correct when inserting the battery.
- 6.Do not dispose the used battery in your household waste. Your local authority has made special arrangements for the disposal of electrical waste.
- 7.Non-rechargeable batteries are not to be recharged.
- 8.Handle leaking or damaged batteries with extreme caution and dispose of them properly as soon as possible. Wearing gloves when removing the leaking or damaged batteries.
- 9.The supply terminals are not to be short-circuited.
- 10.The battery must be removed from the luminaire before it is scrapped.
- 11.The appliance must be dis-connected from the supply mains when removing the battery.
- 12.The battery is to be disposed of safely.
- 13.The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- 14.If the luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- 15.Risk of fire or explosion if the battery is replaced by an incorrect type.