

CAMPER TROLLEY(EN)

CT Remoter

Technical Data

Product name	CT remoter
Product type	Remoter control
Remote control battery	2 x AA 1.5 Volt
Safety function	3 min. Auto shut-off.
Signal Frequency	2476M Hz
Signal Power	-20~4dbm
FCC ID	2AU9Q-CTREMOTER

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Activating and Pairing the Camper Trolley with the remote control

The Camper Trolley comes pre-paired with the remote control.

- Turn on the Camper Trolley by simply pressing the Start/Stop button for maximum 1-2 seconds.
- Turn on the remote control by pushing the forward button (↑) once.
- The Camper Trolley is now ready to use.

IMPORTANT

Re-pairing the Camper Trolley

1. Turn on the Remote Control by pushing the Forward button (↑) once. The green light on the Remote Control will turn on.
2. Turn on the Camper Trolley by clicking the Start/Stop button. The green light on the Camper Trolley will turn on.
3. Now simultaneously press and hold the Turn Right button (→) on the Remote Control and press and hold the Start/Stop button on the Camper Trolley, both LED lights start to blink for 8 seconds, after which the LED lights will light constantly. Now the Camper Trolley and Remote Control have been re-paired and are ready to use. If this pairing procedure is unsuccessful, the Remote Control will turn off automatically in around 15 seconds, and the user needs to redo the procedure from step 1.

The start/stop button and operating status indicator are located on the front of the Camper Trolley
(The diode lighting can be difficult to see in strong sunlight):



The maneuvering buttons on the remote control:

Forward: (↑); **Turn right:** (→)
Backward: (↓); **Turn left:** (←)



Battery Indicator

The battery indicator shows the Camper Trolley's remaining battery status. If the capacity is too low, the CT may not respond correctly. If the indicator itself weakens, the remote control battery needs to be replaced, otherwise the CT may not respond correctly.

Maneuvering the Camper Trolley

The Camper Trolley logo on the remote control must always point toward the trolley. Use both hands on the remote control, and hold it horizontally during use.

- **Forward:** To move forward, in the same direction as the antenna, hold down forward button (↑).
- **Backward:** To move backward/reverse, hold down the back button (↓).
- **Turn:** To turn, hold down the forward (↑) or backward (↓) button while at the same time holding down one of the turn buttons of the remote control to turn right (→) or left (←). The Camper Trolley will only turn if you first hold the forward or backward button, followed by a turn button.
- **Stop:** To stop the Camper Trolley from moving, simply release the forward or backward button.

Deactivating the Camper Trolley remoter

- Turn off the Remote Control LED light by holding down the Right Button (→), and then pressing the left button (←) at the same time

Kronings ApS

Susaavaenget 1, DK-6710 Esbjerg V, Denmark

www.kronings.com