

GETTING STARTED

EN



Smart Scale records and tracks weight changes




It is an enjoyable and healthy way to manage weight with support from the Friends

PREPARATION FOR CONNECTION

STEP 1


- Prepare the scale, a smartphone, and a Wi-Fi router.
- Connect to Wi-Fi when in strong signal or near the Wi-Fi router.
- Please scan the QR code with a compatible smartphone and download the KAKAO FRIENDS HOMEKIT app.

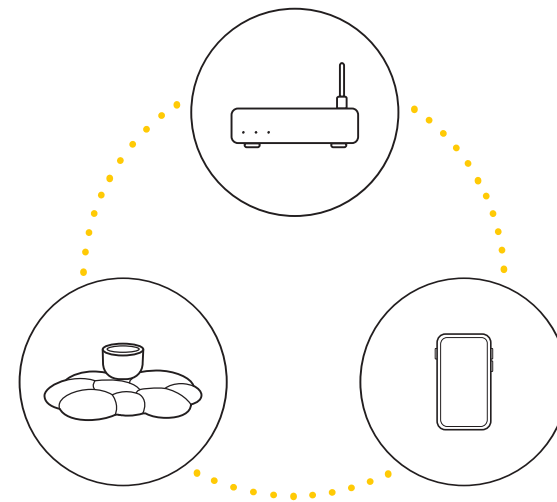

ACTIVATION

STEP 2

- 1 Turn to open the cap in the center on the bottom of the scale and insert batteries.

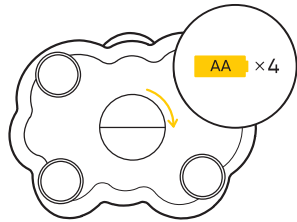


- 2 Place the scale on a hard, flat surface.



- 3 To activate the scale, briefly stand on top of it and then step off.



- 4 The screen will display 0.0 when activated.

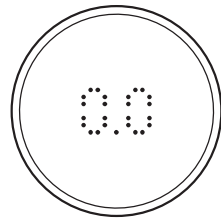

LOGIN

STEP 3


- Open the KAKAO FRIENDS HOMEKIT app and choose [Sign in with KakaoTalk]
You can use your KakaoTalk ID to login and begin.



CONNECTING TO Wi-Fi

STEP 4

- 1 After opening the center cap on the bottom of the scale, press and hold the Wi-Fi Reset button for 5 seconds.

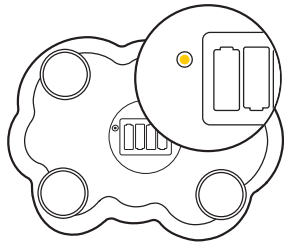


- 2 Select [Connect to Device] on the KAKAO FRIENDS HOMEKIT.



- 3 Follow the instruction on the screen to connect to Wi-Fi.




- 4 Enjoy a healthy lifestyle with Smart Scale.

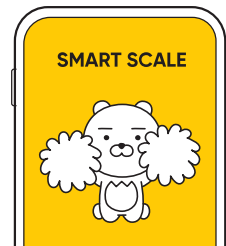

USE WITHOUT HAVING TO LINK AN ACCOUNT

- 1 Turn to open the cap in the center on the bottom of the scale and insert batteries.

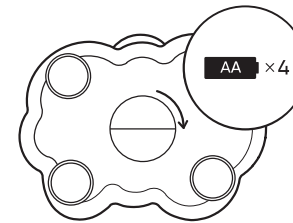


- 2 Place the scale on a hard, flat surface.



- 3 To activate the scale, briefly stand on top of it and then step off.




- 4 The screen will display 0.0 when activated.

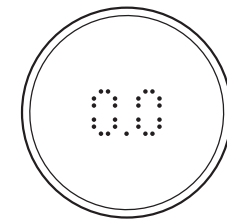


DISPLAY


Main Screen

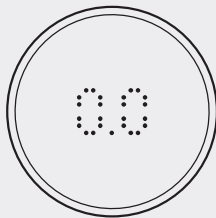


Firmware Update

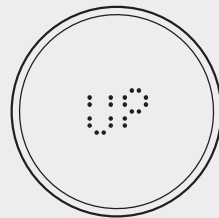

Low Battery

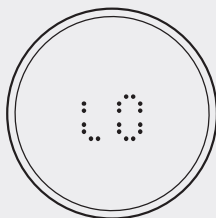

Failed to connect to Wi-Fi/
Exceeds measurement range

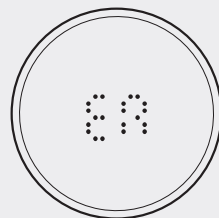

FAQ

- **Nothing is showing on the screen.**
The scale may be out of battery. Please replace the batteries.
- **My scale is not working, even with new batteries.**
Please check that you have placed the + and - in the correct positions.
Please replace the batteries.
- **I cannot connect to Wi-Fi.**
Make sure that the router is working properly,
then reconnect from a nearby location.
Press the reset button to reset the Wi-Fi on the bottom of the product.
- **The firmware is not updating.**
Firmware updates will not work if the battery level is less than 30%.
Please replace the battery.
- **My weight is not being measured properly.**
Please place the scale on a hard and flat surface.
- **The scale is dirty.**
Please wipe with a dry towel to prevent water from
getting inside the body of the device.

PRECAUTIONS

- Due to the nature of the material, it is vulnerable to sunlight.
Do not place the product in direct sunlight.
- The material is subject to discoloration.
- Remove the batteries out when not in use for a long period of time.
- Use a dry towel to clean the product and
make sure that water does not get inside the body of the device.
- Do not disassemble, fix, or alter.
- Do not use in a place where excessive electromagnetic waves are generated.
- Hold the main, cloud-shaped part with both hands when moving the product.
- Please make sure the product is not subject to excessive impact.



PRODUCT WARRANTY

PRODUCT NAME	SMART SCALE	MODEL NAME	KFH_SC01
---------------------	-------------	-------------------	----------

PURCHASE LOCATION	DATE OF PURCHASE
--------------------------	-------------------------

CUSTOMER NAME	PHONE NUMBER
----------------------	---------------------

ADDRESS

REPAIR POLICIES AND REGULATIONS

Free services are available for products in which an abnormality occurs within one year of the date of purchase. After the Customer Care/Service Team checks the product and determines it to be defective, the defective product will be replaced with an identical product. However, free repair services are only available with the provision of the product warranty, purchase receipt, and serial number. The free repair services do not apply in the following cases.

- Change in mind after opening the package or if a part is missing at the time of repair.
- Damages caused by using product for anything other than its purpose or abuse of the product.
- Damages caused by altering, modifying, or fixing the product.
- Damages caused by external factors such as natural disasters.
- Minor defects that do not interfere with use.
- Discoloration and wearing out due to the environment or wear and tear.
- Damages caused by user
(while moving, dropping, causing shock, damaging, misusing, water damage, etc.)

PAID SERVICE

In the case that repairs are required due to user negligence, any service fees (repair costs, return shipping costs) will be charged to the customer.

Supported OS	Android 6.0+ / IOS 10.0+
Supported of measure	kg
Weight display	First decimal place
Minimum unit notation	100g
Measurement range	5kg - 150kg
Battery type	AA 1.5V × 4
Communication method	Wi-Fi IEEE 802.11 b/g / n 2.4GHz
Product size	336.8 × 253.5 × 91.8(mm)
Product weight	1.5kg



Please scan the QR code with a compatible smartphone and download the KAKAO FRIENDS HOMEKIT app.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2AUC2-KFHSC01