

# 使用说明书-BM21-G-MAXHUB

## 技术参数

尺寸	成型尺寸：85×85 mm；成型尺寸：170×85mm
材质	105g双铜纸
工艺	单黑印刷
成型方式	骑马钉24P
特殊说明	

## 公差设定

TOLERANCES					
(UNLESS OTHERWISE STATED)					
units: mm					
RANGE	>0-60	>60-100	>100-150	>150-200	>200-300
TOLERANCE	±1.0	±1.5	±2.0	±2.5	±3

最后一页的二维码编码规则为：XX\$004.046.XXXXXXX

1. XX为供应商简称，按料号描述中的供应商简称为准；

2. \$——固定不变，

3. 004.046.XXXXXXX为实物物料料号

如上二维码需要供应商在印刷时自行添加。来料时需体现。

二维码规格：8 X 8 MM

**\*此页非印刷&刻录页**



广州视源电子科技股份有限公司  
GUANGZHOU SHIYUAN ELECTRONIC CO.,LTD.


文件图号	BM21-G-P14-N46602-V1.0 MAXHUB海外说明书	适用于			
制作人	薛家蓉	审核人	郭阳丽	批准人	赵虎

变更履历：

版本	更新内容	日期	创建人
V1.0	第一版	2019-11/16	薛家蓉

\*此页非印刷&刻录页

# MAXHUB

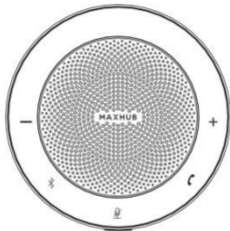

## Speakerphone User Manual

Note: All the pictures in this manual are for reference only, please refer to the actual product.

# Contents

Important Information.....	1
Safety Warnings and Precautions.....	2
Maintenance & servicing.....	8
Special statement.....	9
1. Product Appearance.....	11
2. Product Usage.....	13
3. Common faults and troubleshooting.....	22

## ➤ **Important Information**

This manual describes the precautions and the product usage. Please read and understand all the instructions before using the equipment. The damage caused by failure to follow the instructions is not covered by the warranty. Please also keep this manual properly.

## ➤ **Safety Warnings and Precautions**

### **Be careful of electric shock or fire!**

(1) This equipment is not waterproof, please keep it dry; if water is immersed in this product, please shut down immediately and contact the customer service center. Please process the equipment according to the prompt provided by the customer service center before using it again.

(2) Never place this equipment and accessories near open flame or other heat sources, including under direct sunlight.

(3) This equipment should be turned off before lightning storms.

### **Be careful of short circuit or catching fire!**

(1) Before connecting this equipment to an electrical outlet, please make sure that the power supply voltage matches the voltage value printed on the back or bottom of the product. Never connect the product to an electrical outlet when the voltage is different.

## **Be careful of injury or damaging this speaker!**

- (1) Never place this equipment or any objects on a power cord or other electronic devices.
- (2) If this product is transported at a temperature below 5°C, please unpack the product and wait until the temperature reaches room temperature before connecting it to a power outlet.
- (3) This product comes with sharp objects, please handle it carefully so as to avoid injury to the user, or scratching the appearance of the product or damaging the internal parts of the product!



## **Be careful not to overheat!**

(1) Never install this equipment in an enclosed space. Always leave at least 4 inches space around the product for ventilation.

## **Children's health**

(1) This equipment and accessories may contain some small parts, so please keep them out of the reach of children to avoid danger.

## Care for the environment!

(1) This equipment applies recyclable high performance materials and components.

(2) Never dispose of this product with other household waste. Please understand the local regulations on the sorting collection of electronic, electrical products and batteries.

(3) Proper disposal of these products helps to avoid potential negative effects on the environment and human body health.

## Care for the product!

(1) Clean this equipment only with a piece of microfiber cleaning cloth.

## ➤ **Maintenance & servicing**

- (1) Please contact professional service personnel for all repair services;
- (2) Please do not insert any sharp object into the inside of the equipment;
- (3) Please do not drop or hit the equipment to avoid damaging it.

## ➤ **Special statement**

(1) Intellectual property statement: the hardware design and software programs of this product are copyright protected. Anyone copying the contents of this product and instructions without the authorization of this Company will bear the corresponding legal responsibilities.


(2) This manual is for reference only. The actual final functions are subject to the actual ordering of the customer and the actual functions of the product received.

(3)The pictures are for reference only,please refer to the actual product. The company reserves the right to make improvements on and changes to the product appearance and design without prior notice.



Bluetooth words and trademarks are owned by Bluetooth SIG, Inc.

# 1. Product Appearance

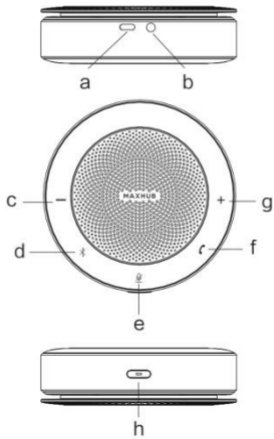

- a. Type-C port
- b. 4-section 3.5 mm audio input/output hole
- c. Volume down key
- d. Bluetooth key
- e. Microphone mute key
- f. Answer/hang up key/wake up cloud  
conference key
- g. Volume up key
- h. Power key



## 2. Product Usage

(1) Turn on/off the machine

Long press and hold the power key for 2 seconds to turn on or off the machine.

(2) Bluetooth function

1> When Bluetooth is not connected, long press to turn Bluetooth on/off;

2> When Bluetooth is connected, long press to disconnect the current Bluetooth connection.

### (3) Three types of connection modes

1> Mode 1: Connect the computer/conference plat (windows or Mac) to this equipment via USB cable;

2> Mode 2: Connect this equipment with Bluetooth. The Bluetooth indicator will flash to indicate that the equipment is in Bluetooth pairing state. Enable Bluetooth functions on mobilephone/other equipment, and select to connect this equipment from the Bluetooth equipment list;

3> Mode 3: Connect this equipment with the original AUX audio cable (4 sections).

Note: After connecting the computer/conference plat (Windows or Mac) with Mode1 and Mode 2,it is necessary to set the equipment as default playback and recording equipment in the computer/tablet sound setting interface.

(4)Function of supporting multi-party conference  
It supports multi-channel data fusion of USB,Bluetooth and audio ports. It can work in three connection modes at the same time so as to support simultaneous access of multiple parties for the conference.

(5) Answer/hang up call/one-click wake-up cloud conference

1> When there is an incoming call, press the “ $\epsilon$ ” key to answer the call;

2> When it is in calling state, press the “ $\epsilon$ ” key to hang up the call;

3> When there is an incoming call, long press and hold the “ $\epsilon$ ” key for 3 seconds to reject the call;

4> The equipment is connected to the MAXHUB conference plat through USB Bluetooth audio adapter. In the non-calling state, long press the “ $\epsilon$ ” key for 2seconds to wake up the cloud

meeting software of the MAXHUB conference plat (It only supports MAXHUB conference plat with one-click wake-up cloud conference function) .

#### (6) Mute function of microphone

Short press the microphone mute key to turn the microphone on or off.

#### (7)Volume adjustment function

Press volume "+" and volume "-" keys to increase or decrease the volume accordingly.

## (8)Equipment charging

1> Connect the original power adapter(5V/2A) with USB cable for charging;

2>Use the selected wireless charging base to charge the equipment (this equipment has the wireless charging function. In order to ensure the charging quality and charging safety, it is suggested that you purchase this wireless charging base via proper channel);

3>When charging, the white indicator of the power key will flash; when fully charged, the green indicator of the power key will be normally on.

### (9) View the electric quantity

In the power-on state, short press the power key to view the current remaining electric quantity.

When the light bar displays 5 squares, the battery is full. When the electric quantity is relatively low, the power key's red indicator light will flash and the low electric quantity prompt tone is broadcast.

### (10) USB Bluetooth audio adapter (supporting win7/8/10 and Mac OS)

1> Insert the USB Bluetooth audio adapter into the computer, and turn on the equipment to enter the Bluetooth pairing status (If you use a USB

Bluetooth adapter to connect to the conference plat, please connect it to the front-mounted USB port of the conference plat to ensure best use effect);

2>USB Bluetooth audio adapter will be automatically connected to the equipment(which is the only equipment bound by USB Bluetooth audio adapter);

3>If it is necessary to rebind the USB Bluetooth audio adapter to the new wireless omni-directional speaker, the distance between the USB Bluetooth audio adapter and the wireless omni-drectional speaker should be



controlled within 3 meters. When Bluetooth is disconnected from the wireless omni-directional speaker, long press and hold the Bluetooth key for 9 seconds to enter the binding mode. After plugging the USB Bluetooth audio adapter, the USB Bluetooth audio adapter will be rebound successfully within 30 seconds.

Note: to connect computer/conference plat with USB Bluetooth audio adapter, it is necessary to set this equipment as the default playback and recording equipment in the computer/conference plat sound setting interface.

### 3. Common faults and troubleshooting

The following table contains common faults and their solutions. Please read it carefully.

Fault	Possible Cause	Solution
Unable to turn on the machine	Low or no electricity	Connect the adapter to charge
Shut down automatically after running for a while	Insufficient electric quantity	Connect the adapter to charge

No sound	Is the connection correct? Is the volume turned on?	Select the correct sound source input; adjust the equipment
Unable to work with USB	Is there any mistake in using the USB cable?	Please use the original USB cable to make a call.
Unable to work with AUX	Is there any mistake in using the AUX cable?	Please use the original AUX cable(4 sections) to make a call.

Invalid key	The key may be accidentally touched.	Long press and hold the power button for 8seconds to reset the system.
Unable to charge the equipment	The charging device is in fault or the battery is already full.	Replace it with a charging device with normal functions

## **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**FCC Caution:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Radiation Exposure Statement:**

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction.

## Safety information

- A. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type
- B. batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like

To prevent overheating, please do not install the speaker in enclosed spaces. Be sure to set aside at least 10cm around the product for ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

Do not place this device in or close to sources of excessive heat or fire. (Such as: candles, fireplaces or direct sunlight)

This product contains a battery. The product cannot be discarded as general living garbage. Please understand the local classification about collecting the provisions of battery. The correct disposal of the battery helps to avoid the potentially negative impact on the environment and human health.



This symbol, affixed to the product or its packaging, indicates that the product must not be processed with household waste. It must be brought to an electric and electronic waste collection point for recycling and disposal. By ensuring the appropriate disposal of this product you also help in preventing potentially negative consequences for the environment and human health. The recycling of materials helps preserve our natural resources. For further information regarding the recycling of this product, please contact your municipality, local waste disposal centre or the store where the product was purchased.