

User Manual

Global Enterprise Device (GED)

Model: CTGED01



 
ABOUT

This document contains only the instructions necessary for setting up and safe use of your GED device. Enjoy your GED and be cautious.

WHAT'S IN THE BOX

1. DC+5V Adaptor *1
2. USB Cable*1
3. Rechargeable battery *1
4. Earphone *1
5. User manual *1

GED AT A GLANCE

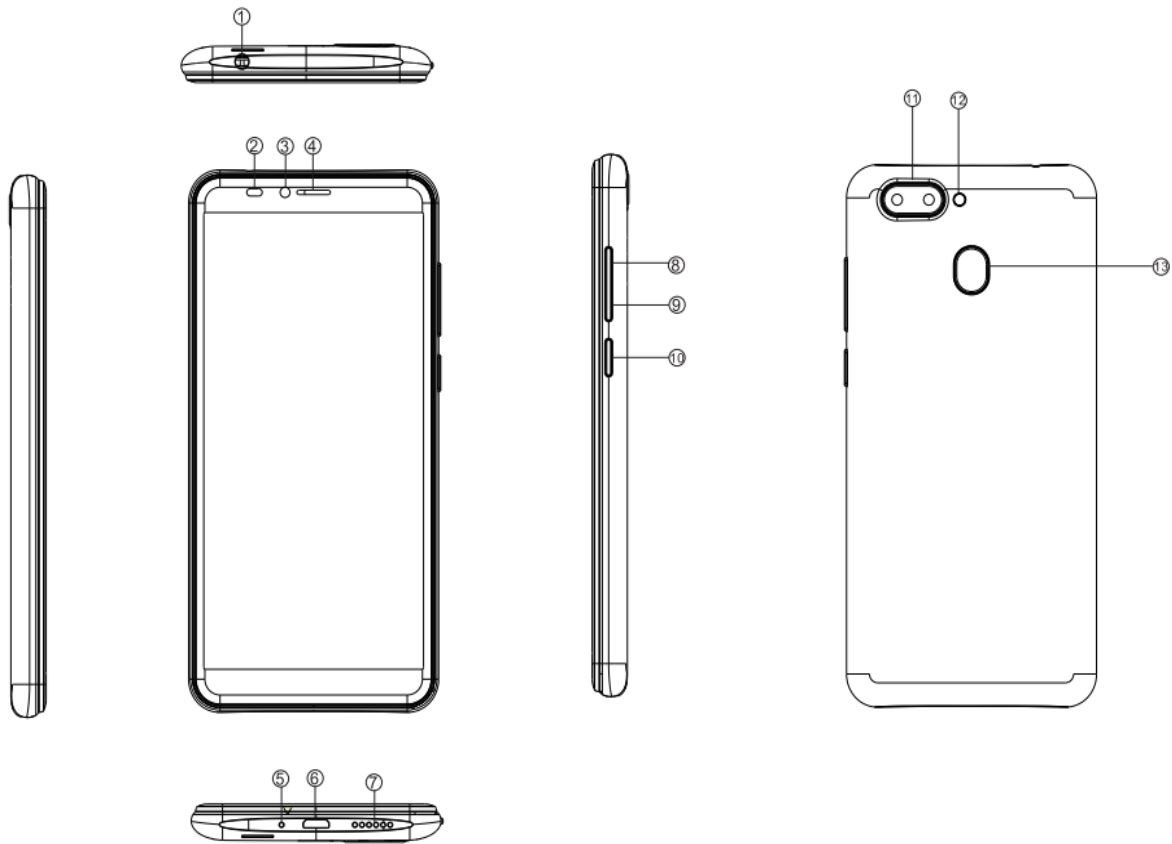

1 - Earphones Jack

2 - Proximity sensor

3 - Front Camera

4 - Receiver

5 - Mic

6 - USB Port

7 - Speaker

8 - Volume+ Control Key

9 - Volume- Control Key

10 - Power On/Off

11 - Rear Camera

12 - Flash Light

13 - Fingerprint Key Sensor

CHARGING THE BATTERY

Connect one end of the USB cable (supplied) to the USB port of the DC+5V adaptor (supplied). Connect the other end of the USB cable to the USB port of the device. Plug the DC+5V adaptor into the wall socket (AC 180-240V). Charging will start.

You can also charge the device via a USB cable connected to a computer. The device should only be connected via a USB 2.0 connector.

You can charge the phone via USB cable connected to a computer as well.

NOTE

When the battery capacity is low, you will see the prompt "Battery is low". Please charge your device immediately to ensure proper device use.

CAUTION

 
Do not throw the battery into the fire; otherwise it may cause fire breakout or explosion of the battery. Do not place the battery together with metal necklaces or with other metal objects, otherwise it may cause liquid leakage, overheat, fire breakout or explosion of the battery. Do not use or put the battery near the fire, oven or other places with high temperature; otherwise it may cause liquid leakage, overheat, and fire breakout or explosion of the battery. If you notice, when charging the battery or using the device, that the temperature of the battery is abnormally high; the color of the battery casing has changed; the battery casing is distorted or any other unusual phenomena, please stop using the device and replace the battery.

Do not charge the battery continuously for more than 24 hours.

Risk of explosion if battery is replaced by an incorrect type.

Dispose used batteries according to your local municipality instructions.

INSTALLING A SIM /SD CARD

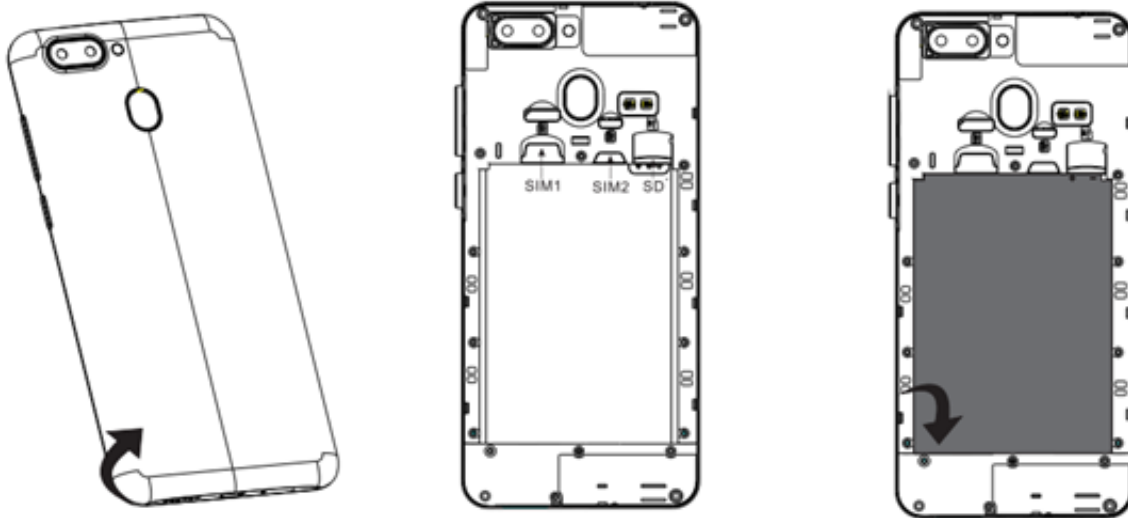


1. Turn off the mobile phone and unplug the external power supply.
2. Remove the back cover using the groove on the side of the phone.
3. Remove the battery.
4. Insert the SIM card with Gold-colored contacts facing down.
5. Insert the optional SD card (not included) with the Gold-colored contact facing down.
6. Insert the battery making sure the connectors align.
7. Replace the back cover.

WARNING

Do not insert or remove the SIM card or the SD card when the device is connected to an external power supply as this may cause damage to the SIM card or to the SD card.

POWER ON/OFF







 
 



To turn on the device, long press Power On/Off key.

To unlock, Swipe up the  con to the top.

To lock the screen, short press the Power On/Off key.

To turn off the mobile phone, long press Power On/Off button, then tap Power Off.


MAIN ICONS

| ICON | DESCRIPTION |
|---|--|
|  | Indicates the strength of the network signals. |
|  | Shows missed calls. |
|  | A new message has been received. |
|  | Indicates that an application is being downloaded. |
|  | The alarm clock has been set and activated. |
|  | A call is in progress. |
|  | A music item is playing. |
|  | Shows battery level. |
|  | Access is blocked. |
|  | Connected to a Wi-Fi network. |
|  | Bluetooth is turned on. |

CALLS OPERATIONS

Mute: Press  to mute the voice.

Hands-free: Press  to switch on the hands-free speaker.

New call: Press  to add a new attendee in a call.

End a call: Press  to end the ongoing call.


CONNECTIONS

DATA

In the main menu, tap Settings then Network & Internet.

Tap SIM cards and select a SIM card.


Tap Cellular data to select a SIM for data connectivity.


To turn off data connection, tap  near SIM slot 1 or 2.

Note: data connection requires SIM card presence in the device.

WI-FI

In the main menu, tap Settings then Network & Internet.

Tap Wi-Fi off  to turn on and search a network.

To turn Wi-Fi off, tap  gain.

To add a hidden SSID:

Tap Settings then Network & Internet" then Wi-Fi.

Tap Add Network.

Key-in the SSID in the required data field.

Tap Advanced Options.

Under Hidden Network change No to Yes.

BLUETOOTH



In the main menu, tap Settings then Connected devices

 
Tap Pair New Device to search other Bluetooth devices

Pair the device you desired.

Tap Bluetooth On  gain to turn off your device.

USB COMPUTER CONNECTION

Turn on the device; use the USB cable (supplied) to connect the USB Port of the mobile phone to the USB port of a computer. The icon  appears automatically on the top of the screen of the mobile phone. Pull down from the top screen and touch  to go into the USB connection screen. You can select the Connection type by touching "○" to enable it.

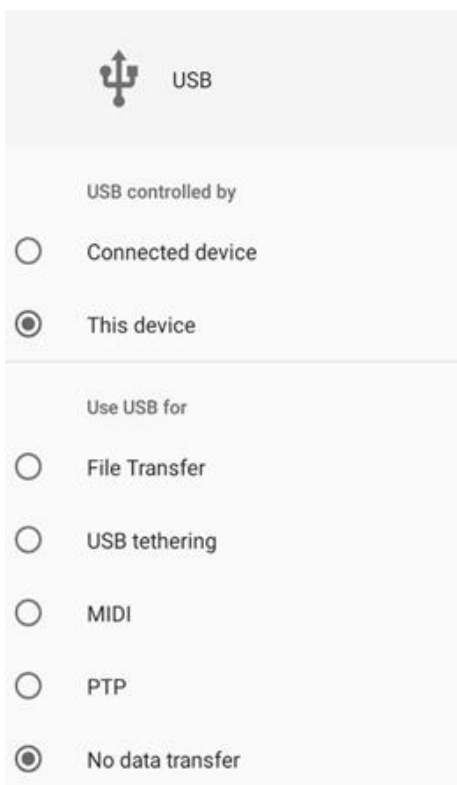

MAIN SPECS

| | |
|---------------------|---|
| Processor: | Quad core 1.3Ghz processor |
| Display: | 5.5 inch two-point Capacitive Display |
| Resolution: | HD+ 720x1440 pixel |
| Storage: | 16 GB |
| Ram: | 2 GB |
| Camera: | Front 2.0 MP; Rear 5.0 MP/0.3MP |
| Battery: | 2500mAh |
| Size: | 147.6 x 70.9 x 10.1mm |
| Expandable Memory: | Up to 32 GB |
| Sensor: | G-sensor |
| Fingerprint sensor: | Yes |
| Sim Slots: | Dual SIM, GSM + GSM |
| Sim Size: | SIM1: Nano |
| Wi-Fi: | Wi-Fi 802.11, b/g/n |
| Bluetooth: | Bluetooth 4.0 |
| GPS: | Yes with A-GPS |
| USB Connectivity: | USB Micro 5Pin x1 |
| Sound Port | 3.5 MM Headphone jack |
| Power Adaptor | AC In 100-240V.50-60HZ, DC Out DC 5V/1A |
| Network Support: | 4G, 3G, 2G |

SAFETY USAGE GUIDELINES

- If the safety of the device has been compromised, it must be immediately withdrawn from use.
- Do not touch the screen of the phone with sharp objects and do not scratch the screen.
- Do not put the device in environments with excessive temperatures:
Operating temperature: -10° C to 70° C
- Do not charge the device near any flammable or explosive substances or in environments with much dust, humidity or excessively high or low temperatures
- Do not expose the device to strong magnetic fields.
- Power off the device and disconnect the charging cable before cleaning the device.
- Do not use any chemical cleaning agents to clean the device. Use a damp and anti-static soft cloth for cleaning.
- Do not attempt to open or repair the device. Only authorized personnel are allowed to repair the device.
- Only use accessories approved for the device.

WARNING

CommuniTake Technologies will not assume any liability for damages caused by disregarding any of these advises or by any inappropriate use of the device.

=====

Manufacturer's Name: Shenzhen JOYHONG Technology CO., Ltd

RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types CTGED01 (FCC ID: 2AUHC-CTGED01) has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.