

User Manual

4G Smart phone

Model: CTIP401



 
ABOUT

This document contains only the instructions necessary for setting up and safe use of your CTIP401 device. Enjoy your CTIP401 and be cautious.

WHAT'S IN THE BOX

1. DC+5V Adaptor *1
2. USB Cable*1
3. Earphone *1
4. User manual *1

CTIP401 AT A GLANCE

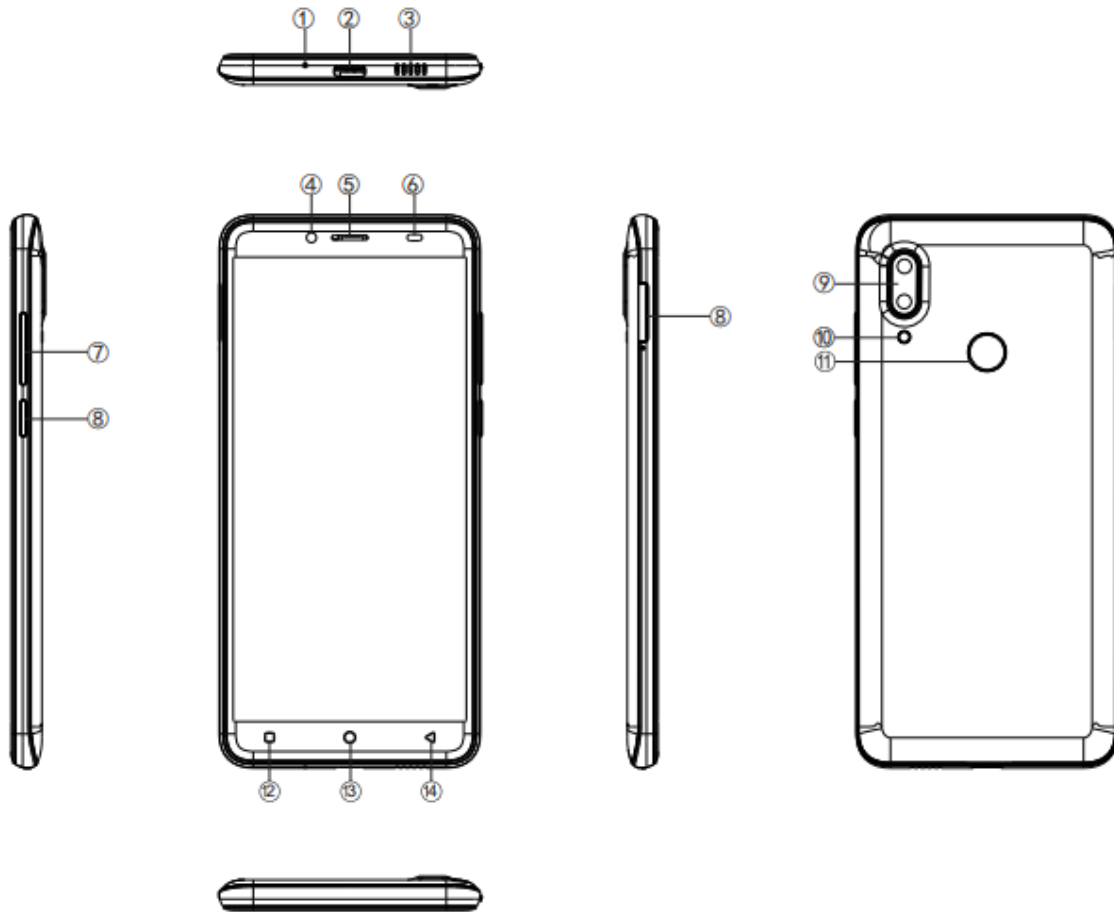

1. Earphone slot
2. USB Port (for charging and connecting to computer)
3. Speaker
4. Front Camera
5. Receiver
6. Proximity sensor
7. Volume+/- Control Key
8. Power On/Off
9. Rear Camera
10. Flash Light

11. Fingerprint Key Sensor
12. Memu
13. Home
14. Back

CHARGING THE BATTERY

Connect one end of the USB cable (supplied) to the USB port of the DC+5V adaptor (supplied). Connect the other end of the USB cable to the USB port of the device. Plug the DC+5V adaptor into the wall socket (AC 180-240V). Charging will start.

You can also charge the device via a USB cable connected to a computer. The device should only be connected via a USB 2.0 connector.

You can charge the phone via USB cable connected to a computer as well.

NOTE

When the battery capacity is low, you will see the prompt "Battery is low". Please charge your device immediately to ensure proper device use.

CAUTION

 
Do not throw the battery into the fire; otherwise it may cause fire breakout or explosion of the battery. Do not place the battery together with metal necklaces or with other metal objects, otherwise it may cause liquid leakage, overheat, fire breakout or explosion of the battery. Do not use or put the battery near the fire, oven or other places with high temperature; otherwise it may cause liquid leakage, overheat, and fire breakout or explosion of the battery. If you notice, when charging the battery or using the device, that the temperature of the battery is abnormally high; the color of the battery casing has changed; the battery casing is distorted or any other unusual phenomena, please stop using the device and replace the battery.

Do not charge the battery continuously for more than 24 hours.

Risk of explosion if battery is replaced by an incorrect type.

Dispose used batteries according to your local municipality instructions.

INSTALLING A SIM /SD CARD

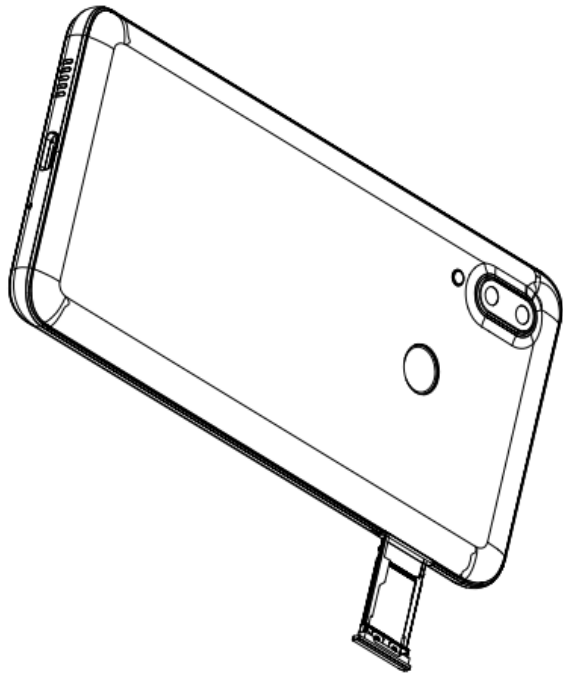


1. Turn off the mobile phone and unplug the external power supply.
2. Inserting needle into the round hole of SIM slot, press the needle gently and the SIM slot is popped out as shown in the picture.
3. Put SIM card or TF card on the SIM slot, push back the SIM slot.
4. If you need to take out the SIM card or TF card, use the needle to insert in the hole of the cassette as picture, press the needle gently, then the SIM card or TF card will be popped out.

WARNING

Do not insert or remove the SIM card or the SD card when the device is connected to an external power supply as this may cause damage to the SIM card or to the SD card.

POWER ON/OFF












To turn on the device, long press Power On/Off key.

To unlock, Swipe up the  con to the top.

To lock the screen, short press the Power On/Off key.

To turn off the mobile phone, long press Power On/Off button, then tap Power Off.

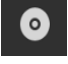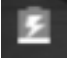
MAIN ICONS

ICON	DESCRIPTION
	Indicates the strength of the network signals.
	Shows missed calls.
	A new message has been received.
	Indicates that an application is being downloaded.
	The alarm clock has been set and activated.
	A call is in progress.
	A music item is playing.
	Shows battery level.
	Access is blocked.
	Connected to a Wi-Fi network.
	Bluetooth is turned on.

CALLS OPERATIONS

Mute: Press  to mute the voice.

Hands-free: Press  to switch on the hands-free speaker.

New call: Press  to add a new attendee in a call.

End a call: Press  to end the ongoing call.


CONNECTIONS

DATA

In the main menu, tap Settings then Network & Internet.

Tap SIM cards and select a SIM card.


Tap Cellular data to select a SIM for data connectivity.


To turn off data connection, tap  near SIM slot 1 or 2.

Note: data connection requires SIM card presence in the device.

WI-FI

In the main menu, tap Settings then Network & Internet.

Tap Wi-Fi off  to turn on and search a network.

To turn Wi-Fi off, tap  gain.

To add a hidden SSID:

Tap Settings then Network & Internet" then Wi-Fi.

Tap Add Network.

Key-in the SSID in the required data field.

Tap Advanced Options.

Under Hidden Network change No to Yes.

BLUETOOTH



In the main menu, tap Settings then Connected devices

 
Tap Pair New Device to search other Bluetooth devices

Pair the device you desired.

Tap Bluetooth On gain to turn off your device.

USB COMPUTER CONNECTION

Turn on the device; use the USB cable (supplied) to connect the USB Port of the mobile phone to the USB port of a computer. The icon  appears automatically on the top of the screen of the mobile phone. Pull down from the top screen and touch  to go into the USB connection screen. You can select the Connection type by touching "" to enable it.

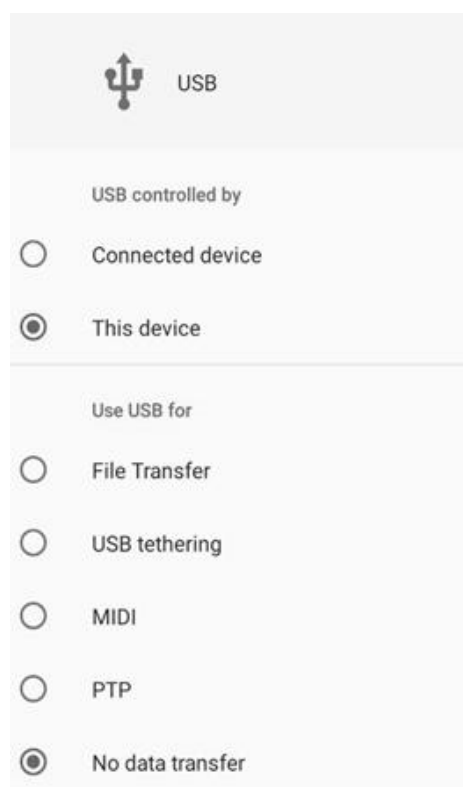

Processor:	Octa core 1.5Ghz processor
Display:	5.7 inch
Resolution:	HD+ IPS 720x1440 pixel
Storage:	32 GB
Ram:	3 GB
Camera:	Front 2.0 MP; Rear 5.0 MP/0.3MP
Battery:	3000mAh
Size:	155.1x7.3x8.6mm
Expandable Memory:	Up to 32 GB
Sensor:	G-sensor
Fingerprint sensor:	Yes
Sim Slots:	Dual SIM, GSM + GSM
Sim Size:	SIM1: Nano
Wi-Fi:	Wi-Fi
Bluetooth:	Bluetooth
GPS:	Yes with A-GPS
USB Connectivity:	Type-C 2.0
Sound Port	Type-C
Power Adaptor	AC In 100-240V.50-60HZ, DC Out DC 5V
Network Support:	4G, 3G, 2G

SAFETY USAGE GUIDELINES

- If the safety of the device has been compromised, it must be immediately withdrawn from use.
- Do not touch the screen of the phone with sharp objects and do not scratch the screen.
- Do not put the device in environments with excessive temperatures:
Operating temperature: -10° C to 40° C
- Do not charge the device near any flammable or explosive substances or in environments with much dust, humidity or excessively high or low temperatures

- Do not expose the device to strong magnetic fields.
- Power off the device and disconnect the charging cable before cleaning the device.
- Do not use any chemical cleaning agents to clean the device. Use a damp and anti-static soft cloth for cleaning.
- Do not attempt to open or repair the device. Only authorized personnel are allowed to repair the device.
- Only use accessories approved for the device.

- WARNING
- CommuniTake Technologies will not assume any liability for damages caused by disregarding any of these advises or by any inappropriate use of the device.
-
- =====
- =====

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: CTIP401 (FCC ID: 2AUHC-CTIP401) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.763 W/kg and when properly worn on the body is 0.948 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.