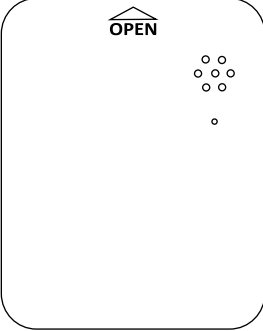
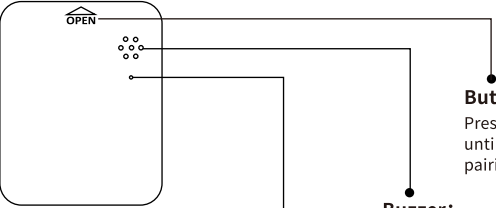
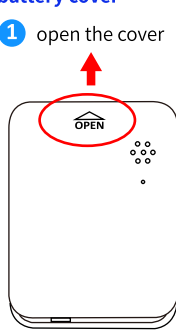
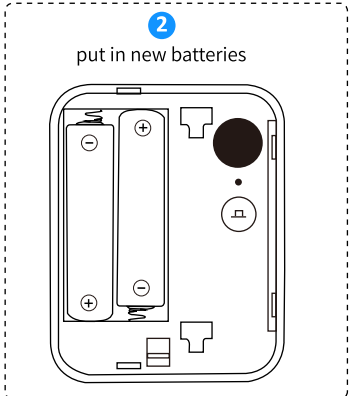
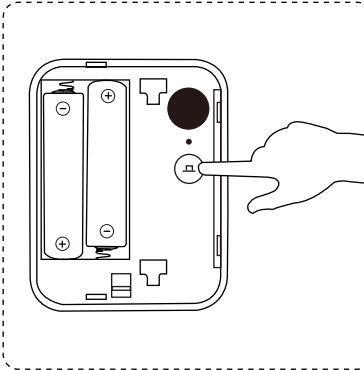
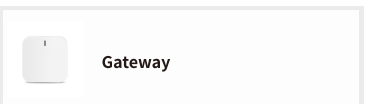
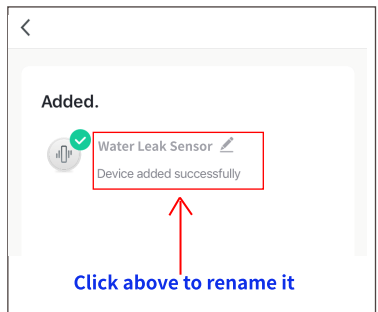
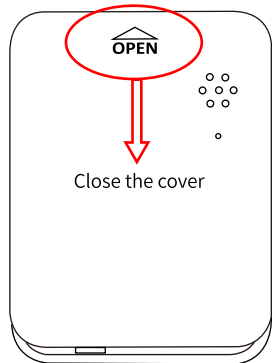
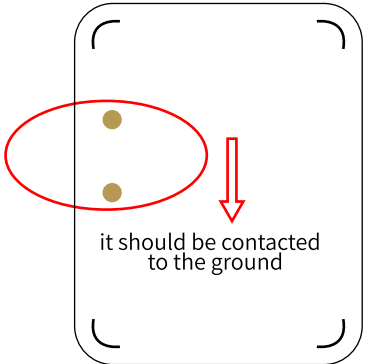


SZIE:58X70mm

正面

<h3>Know about the sensor</h3>  <p>1</p>	 <p>Button: Press and hold the button for 5 seconds until the LED blinks, the device will enter pairing mode</p> <p>Buzzer: Alarm 30 seconds at an interval of one minute when the water leakage appear.</p> <p>LED: Blinking: The device enters pairing mode OFF: The device is under standby status</p> <p>2</p>	<h3>Quick Installation Guide</h3> <p>Note:The Smart Life app should be installed and registered a account first(Smart Life can be searched in APP Store or Google Play).Then make sure the Gateway is added and on-line before the next.</p> <p>1.Power on the sensor with below step:</p> <p>①Open the battery cover</p>  <p>3</p>	<p>②Insert the battery into the battery compartment(please note battery positive and negative) .</p>  <p>4</p>	<p>2.Make device to enter pairing mode</p> <p>Press and hold the button for 5 seconds until the LED blinks .</p>  <p>5</p>
---	---	---	--	--

背面

<h3>3.Device pairing</h3> <p>Open “Smart Life” app,Enter gateway homepage and click "Search new device" or “Add Devices” and follow the in-app instructions to connect the device to your gateway.</p>  <p>6</p>	<p>Waiting for a few seconds, This device is added successfully and you may rename it. Click “Done” to finish the setting.</p>  <p>Click above to rename it</p> <p>7</p>	<h3>4.Device installation</h3> <p>Close the battery cover and put it where you need it. Please note that the side with probe point must be contact to the ground.</p>  <p>8</p>	 <p>it should be contacted to the ground</p> <p>9</p>	<h3>5.How to use</h3> <p>When the water leakage appears,this device should trigger sound alarm for 30 seconds at an interval of one minute and the Smart Life app should receive the water leakage alarm at the same time.To disable the alarm,you must remove the sensor from the area of water leakage .</p> <p>FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,</p> <p>10</p>	<p>which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help. <p>Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>RF Exposure Information This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.</p> <p>11</p>
---	---	---	---	--	--