

148mm (w) x 210mm (h)



# Musical Light-Up Remote Wand

## Instruction Manual

For optimal usage, it is advised to utilize this product in conjunction with various types of lighting, including Christmas lights, ambient lights, string lights, and other decorative lighting.

### Package List:

1. Magic wand (transmitter) 1PCS
2. American socket (receiver) 1PCS
3. User manual 1PCS

American socket specifications

Frequency: 433.92MHz

Rated voltage: 125V AC/60Hz,

Maximum resistive load: 10A/1250W

Maximum inductive load: 5A/625W

Warning: Do not exceed the rated load

Magic wand battery replacement

1. Loosen the screw on the battery cover to remove it.
2. Insert two AA batteries into the designated compartment, ensuring that the "+" and "-" marks on the batteries align with the corresponding marks inside the compartment.
3. Once the batteries are properly positioned, secure the battery cover back in place and tighten the screws.

### Usage Instructions (Light String Example):

1. The magic wand and receiving socket are pre-paired at the factory.
2. Insert the receiving socket into the designated socket near the light string, ensuring a secure connection.
3. Insert the light string into the receiving socket, making sure it is properly seated.
4. Press the ON/OFF button on the magic wand or give it a shake to activate the snowflake lights, accompanied by music, and to turn on the light string.
5. Press the ON/OFF button on the magic wand again or give it a shake to deactivate the snowflake lights, stop the music, and turn off the light string.
6. Alternatively, a short press of the button on the receiving socket can also control the light string's ON/OFF functionality.

### Pairing and Unlocking the Magic Wand and Receiving Socket:

1. To pair the magic wand and receiving socket, press and hold the button on the receiving socket for 3 seconds. The indicator light will start flashing slowly. Then, press the button on the magic wand once to complete the pairing process successfully.
2. If you want to cancel the pairing between the magic wand and receiving socket, press and hold the button on the receiving socket for 5 seconds until the indicator light starts flashing rapidly. Then, press the button on the receiving socket again to cancel the pairing. If you need to re-pair the devices, refer to step 1.

### Common Malfunctions:

1. If there is no sound or flashing from the magic wand, it indicates that the battery is exhausted. Please replace the battery with a fresh one. Also, make sure the battery is inserted correctly with the correct polarity.
2. If the receiving socket (load) is not functioning, it could be due to the receiving socket not being powered. Please ensure the power source for the receiving socket is connected properly.

### Please note the following important instructions:

1. The receiving socket possesses a dustproof and water-resistant rating of IP44. It is advisable to refrain from placing this product in direct contact with humid environments or utilizing it outdoors in the presence of water.
2. If you do not plan to use the product for an extended period, it is recommended to remove the batteries and store the product in a dry and well-ventilated place.
3. To ensure a more stable reception, please install the receiving socket at a height of at least 1.4 meters above the ground.

### Battery Handling and Usage:

#### WARNING: Keep batteries out of reach of children and pets.

1. Always follow the safety and usage instructions provided by the battery manufacturer.
2. Insert the battery into the battery compartment, ensuring the proper alignment of the polarity (+/-) as indicated inside the compartment.
3. CAUTION: Failure to align the battery polarity correctly may result in personal injury or property damage.
4. Remove spent or discharged batteries from the product. When not using the product for an extended period, it is advisable to remove the batteries.
5. Never dispose of batteries in a fire. Avoid exposing batteries to fire or excessive heat.
6. Dispose of spent or discharged batteries following all applicable laws and regulations. For detailed information, contact your local solid waste authority.

#### WARNING:

This device complies with Part 15 of the FCC Rules, which states the following conditions:

- This device must not cause harmful interference.
  - This device must accept any interference received, even if it may cause undesired operation.
- Please take note of the following information:**
- This equipment has been tested and meets the limits for a Class B digital device as outlined in Part 15 of the FCC Rules.
  - These limits are designed to provide reasonable protection against harmful interference in residential installations.
  - This equipment generates, uses, and may emit radio frequency energy. If not installed and used according to the instructions, it may cause interference with radio communications. However, there is no guarantee that interference will not occur in a specific installation.
  - If this equipment causes harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is advised to take the following measures to mitigate the interference:
    - Reorient or relocate the receiving antenna.
    - Increase the distance between the equipment and the receiver.
    - Connect the equipment to an outlet on a different circuit than the one used by the receiver.
    - Seek assistance from the dealer or consult an experienced radio/TV technician for further help.
    - For optimal performance, it is recommended to position the outlets at least 8.5 feet apart.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Printed in China

FRONT

BACK