


# QUICK START GUIDE

## IN THE BOX

Wyze Cam Pan x1  
USB Cable x1  
Power Adapter x1  
Quick Start Guide x1

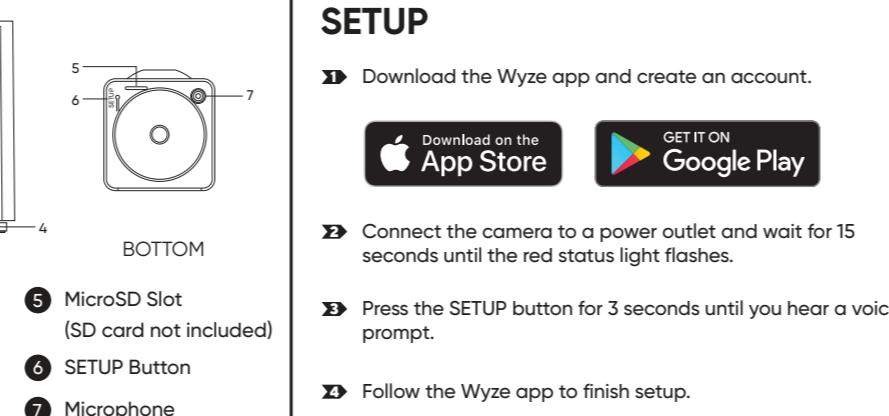

## SETUP

- Download the Wyze app and create an account.

Download on the  
App Store

GET IT ON  
Google Play

- Connect the camera to a power outlet and wait for 15 seconds until the red status light flashes.
- Press the SETUP button for 3 seconds until you hear a voice prompt.
- Follow the Wyze app to finish setup.

## LIGHT INDICATORS DURING INSTALLATION



Solid red light

The device is powered on and initializing



Flashing red light

The device is ready to connect



Quickly flashing red light

Siren is in use



Flashing red and blue lights

Connection is in progress



Flashing blue light

The device is connected and finishing setup



Solid blue light

The device is working properly and no operations are running (edited)



Solid blue light

The device is working properly

## LIGHT INDICATORS AFTER SETUP



Solid red light

Live stream is being viewed or a recording is in progress



Flashing red light

The device is ready to connect



Quickly flashing red light

Siren is in use



Flashing red and blue lights

Connection is in progress



Flashing blue light

The device is connected and finishing setup



Solid blue light

The device is working properly and no operations are running (edited)



Solid blue light

The device is working properly

## FCC WARNING:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## FCC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## NEED HELP?

Contact our support team:  
<https://support.wyze.com>

Join our Community:  
<https://wyze.com/community>



Scan the QR code  
to learn more

## DANS LA BOÎTE

Panneau de la caméra Wyze x1  
Câble USB x1  
Adaptateur d'alimentation x1  
Guide de démarrage rapide x1



## CONFIGURATION

- Téléchargez l'application Wyze et créez un compte.

Download on the  
App Store

GET IT ON  
Google Play

- Connectez la caméra à une prise de courant et attendez 15 secondes jusqu'à ce que la lumière rouge clignote.
- Appuyez sur le bouton SETUP pendant 3 secondes jusqu'à ce que vous entendiez une voix.
- Suivez l'application pour terminer la configuration.

## INDICATEURS LUMINEUX LORS DE L'INSTALLATION



Lumière fixe rouge

Le périphérique est sous tension et est en train de démarrer



Lumière clignotante rouge

Le périphérique est prêt à se connecter



Lumière clignotante rouge et bleue

Connection en cours



Lumière fixe bleue

The device is working properly and no operations are running (edited)



Lumière clignotante bleue

Le périphérique est connecté et fini sa configuration



Lumière fixe bleue

Le périphérique fonctionne correctement

## LIGHT INDICATORS AFTER SETUP



Lumière fixe rouge

Live stream is being viewed or a recording is in progress



Lumière clignotante rouge

Le périphérique est sous tension et est en train de démarrer



Quickly flashing red light

Siren is in use



Flashing red and blue lights

Connection in progress



Solid blue light

The device is working properly and no operations are running (edited)



Flashing blue light

Le périphérique fonctionne correctement

## ISEDC RSS WARNING:

This device complies with ISED licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet émetteur ne doit pas être co-implanté ou fonctionner en conjonction avec toute autre antenne ou transmetteur. Cet équipement doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur & votre corps.

L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire d'interférence, et (2) l'appareil doit accepter toute interférence radioélectrique subie, même si l'interférence est susceptible d'en compromettre le fonctionnement.

## ISEDC RADIATION EXPOSURE STATEMENT:

This equipment complies with ISED RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## VOUS AVEZ BESOIN D'AIDE?

Contactez nos magiciens du soutien:  
<https://support.wyze.com>

Rejoignez notre communauté:  
[wyze.com/community](https://wyze.com/community)



Scan the QR code  
to learn more