

Amount	PN	Description
1		Root-Zone Sensor – assembly
1	6043-2100-8700	Root-Zone Sensor – Certification Label



Place the Certification Label in designated pocket in the Battery Cover.

Make sure the Label is placed in the pocket and is aligned.