

Front

USER MANUAL

Device layout

Wireless charging surface

Indicator light

Fan vent

Charger port (USB Type - C)

LED status light check

Item	Division	LED indication status
Power early recognition	Power connection	Red on → Green on → Red/Green on → off
Charging standby	Disconnected	OFF
Charging	Connected	Red on
Charging Complete	Connected	Green on
Error	Charging Error	Red Flashing

Copyright © 2019 HaAINC Korea.co.Ltd.

- Be sure to read this manual before using the product safely and correctly.
- The illustrations in the User's manual may differ from the real product.
- Before using the product in conjunction with another mobile device, make sure that the mobile device is compatible with the product.
- This product has been developed only for Samsung Galaxy Buds.

How to Use the Product

STEP 01

- Switch on your mobile.
- Swipe to unlock the screen.
- Place the mobile on the middle of the charger.

STEP 02
Connect the charger to the product, and place the mobile device that supports wireless charging to the center of the product.

< PIC 1 >

< PIC 2 >

STEP 03
The Galaxy Friends installation will start once the charging begins.

< PIC 3 >

STEP 04
When the button appears at the bottom, press the Start button.

< PIC 4 >

STEP 05
Check 'I agree to all'.

< PIC 5 >

STEP 06
After the verification process is complete, contents download will begin.

< PIC 6 >

STEP 07
The theme will get applied after the content download is completed.

< PIC 7 >

STEP 08
When charging is completed, disconnect your mobile device from the product.

Back

PRECAUTIONS

Fast wireless charging

To begin fast wireless charging, place a mobile device that supports fast wireless charging on the wireless charger.

⚠ For a proper wireless charging, we recommend using a genuine Samsung Charger.

Using the wireless charger

- Depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.
- Do not place foreign materials, such as metal objects, magnets, and magnetic stripe cards, between the mobile device and the wireless charger. The mobile device may not charge properly or may be damaged due to overheating.
- Only charger connector USB Type-C can be connected to the product. Check the product's charging terminal type before use.
- The charger should remain close to the electric socket and be easily accessible while charging.
- If you use the wireless charger in areas with weak network signals, you may lose network reception.
- Charging may be unstable when a thick cover is attached.

Safety Precautions

Be sure to read this manual before using the product safely and correctly.

- This product is for age above 14.
- Do not store the product in humid or hot places.
- This product is not a toy, so prevent children or pets from sucking or biting products.
- Excessive force during device mounting and removal may damage the product.
- This product can be exchanged or compensated according to the Fair Trade Commission Notice of Consumer Dispute Resolution Standards.
- Do not touch the product with wet hands.
- Do not drop or apply great impact on the product.
- The optimum temperature for the product usage is in between 0°C ~ 35°C, so at higher or lower temperature may cause damage to the product.
- Do not modify, remove, or repair the product at your disposal.
- In the event of malfunction due to user carelessness, failure due to handling error, device disassembled, changed or damaged, the free warranty can't be obtained.

MEMO

MEMO

MEMO

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device comply with part 15 of FCC rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device & its accessories must accept any interference received, including interference that may cause undesired operation.

Part 15.21 statement

Changes or modifications not expressly approved by the manufacturer (or party responsible) for compliance could void the user's authority to operate the equipment

15.19:

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION

IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND

(2) THIS DEVICE MUST

ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

15.21:

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Part 15.105(b) Warning Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device should be installed and operated with minimum 20 cm between the radiator and your body.