



PERSONAL MUSIC
WATERPROOF EARBUDS

FUTURE 100

U S E R G U I D E

PRODUCT AND SAFETY INFORMATION:

1. Use the standard USB charging cable (included) to charge your earbuds. Plug the cable into any standard USB (5V, 1A) power adapter or computer.
2. Avoid listening to music at high volume levels for extended periods of time. Exposure to high volume levels for extended periods may cause hearing damage.
3. Avoid storing the earbuds in extreme heat or cold.
4. Do not leave your earbuds immersed in water for longer 30 minutes. The IPX7 rating protects your earbuds in fresh water up to a meter deep for 30 minutes.
5. Do not attempt to disassemble, modify, or repair the earbuds.
6. Avoid excessive impact or shock to the earbuds.
7. Keep out of the reach of children or pets.
8. Do not tug on cables or touch power cables with wet hands. Avoid getting water in charging or cable receptacles.
9. Do not use the earbuds near microwaves or wireless LAN adapters.
10. Turn the device off when not in use.


11. When cleaning the earbuds, use a soft, dry cloth to wipe it clean. Do not use solvents.
12. Wipe the ear pads with a damp cloth after use and before storing. Exposure to excessive sweat, moisture, or makeup for extended periods can damage the ear pads. If damage occurs, replacement ear pads can be purchased.
13. Do not use the earbuds while driving, riding a bicycle, or walking in urban environments. The earbuds will block outside noise and may pose a safety hazard. Always use caution and maintain awareness to protect yourself and others when using your earbuds.
14. Use these earbuds only for their intended purpose.
15. This device cannot be used for purposes related to human safety as it may cause radio interference during operation.



WARNING:



Electrical and electronic equipment, parts and batteries marked with this symbol must not be disposed of with normal household waste. It must be collected and disposed of separately to protect the environment.

BUTTONS AND SWITCHES

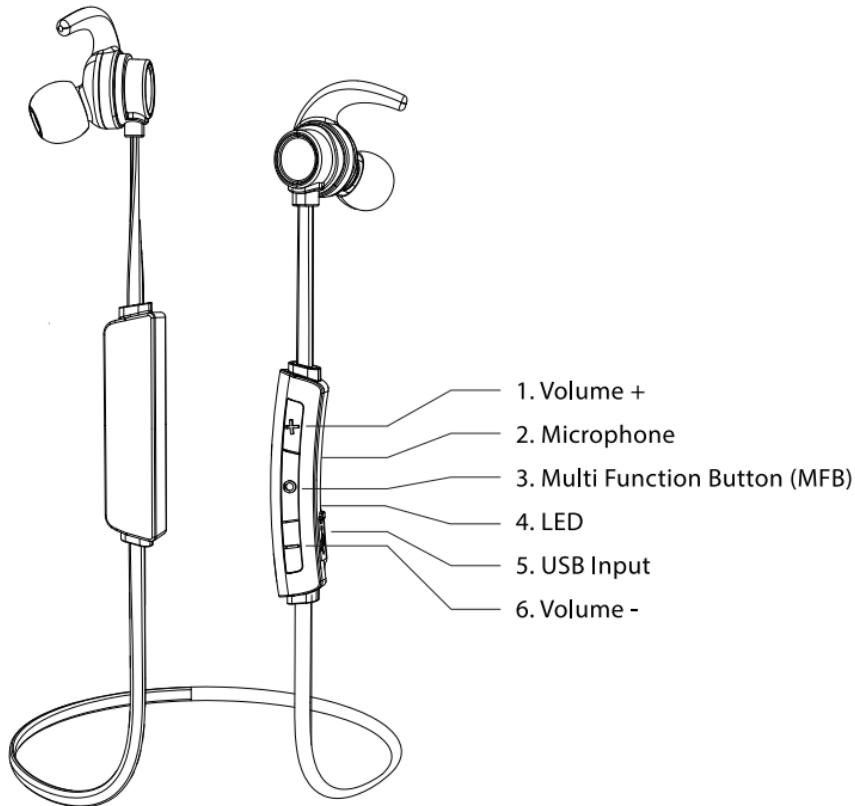


FITTING:

Gently push the earbud into your ear and adjust the ear hook to get a comfortable fit. Small, medium, and large earbud

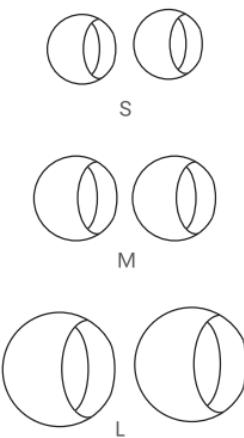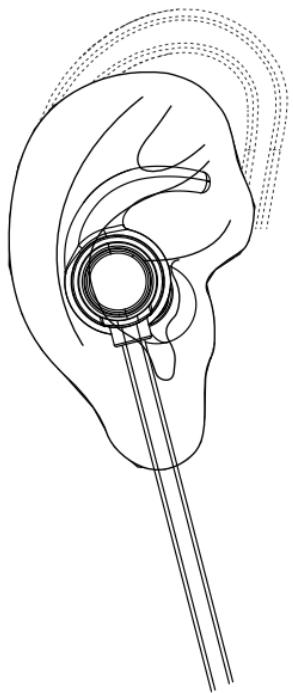


POWER ON AND OFF YOUR EARBUDS:

1. To power on your earbuds, press and hold the MFB button (3).
2. To power off your earbuds, press and hold the MFB button (3).

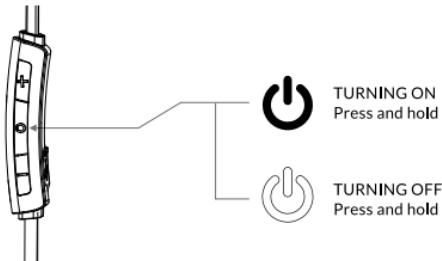


CONNECTING TO A BLUETOOTH DEVICE:

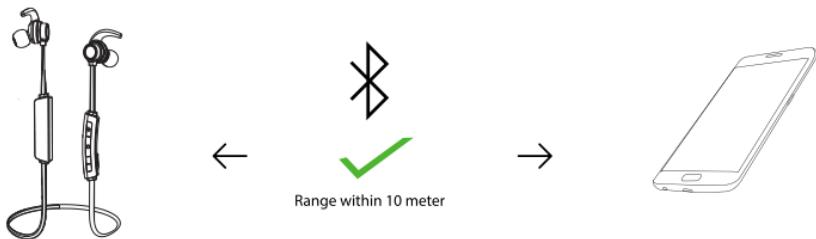

1. Turn on your mobile device and go to the Bluetooth menu.
2. Make sure the earbuds are within ten meters from the mobile device.

3. Press and hold the MFB button (3) on your earbuds to power on. The LED light will blink to indicate that you have entered pairing mode.

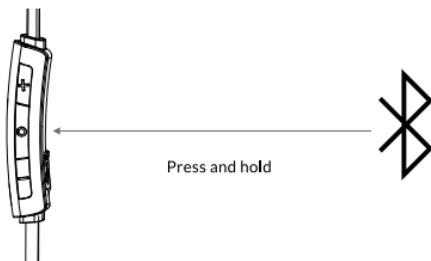

4. Select Future 100 on the Bluetooth device menu. Ensure that the device shows "Connected" in the status display. (If a PIN is required, enter 0000.)




RECONNECTING TO A DISCONNECTED DEVICE:

1. If previously connected to a Bluetooth device, the Future 100 will automatically reconnect with the device when powered on.




2. The earbuds will not automatically reconnect if the ten meters distance is exceeded.

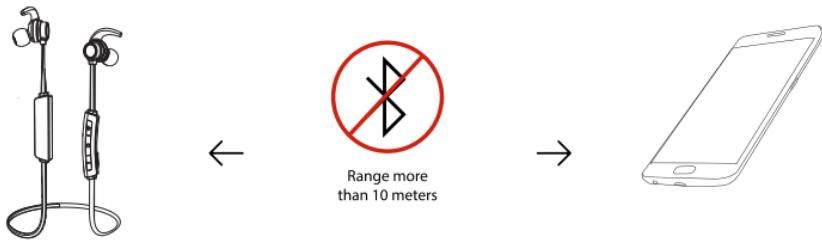

MULTI-POINT CONNECTION:

1. Follow the pairing procedure to connect the headset to phone 1 then turn off the earbuds.
2. Long press MFB (3) to enter pairing mode again, activate the bluetooth function of phone 2 and search for the headset. Select “Future 100” from the device list and click to continue.

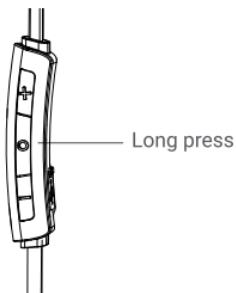


3. Go back to phone 1 and select “Future 100” from the devices list to finish multi-point connection.




PLAYING AND CONTROLLING MUSIC:


1. Press the MFB button (3) to play music from your Bluetooth device.
2. Press the MFB button (3) when music is playing to pause.
3. Press the MFB button (3) when music is paused to begin playing again.

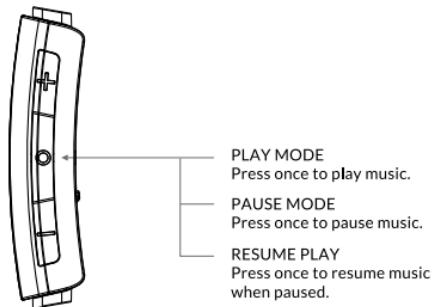


4. To skip to the next track, press and hold the Volume Up Button (1).
5. To go back to the previous track, press and hold the Volume Down Button (6).

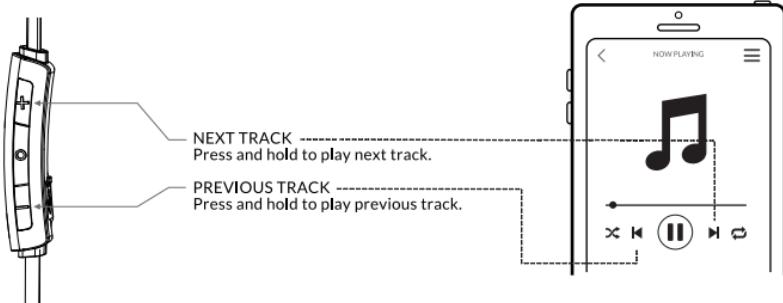

6. To raise the volume, press Volume Up Button (1).
7. To lower the volume, press Volume Down Button (6).

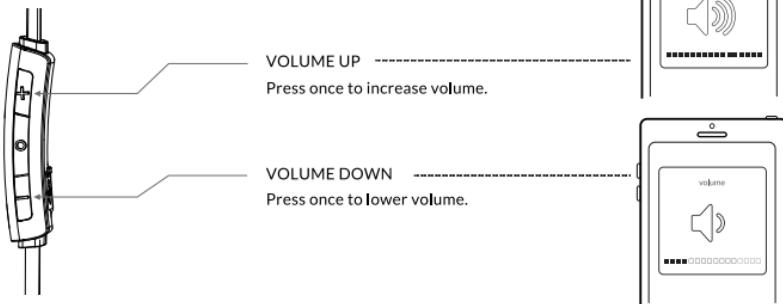

MAKING CALLS:

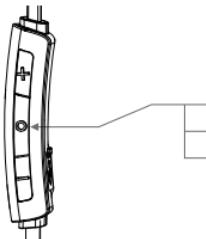

- Press to answer incoming call. (Press again to end call)
- Press and hold to reject incoming call.
- Double click to redial last number.

1. ACCEPTING OR ENDING A CALL (during music playback included)

- Upon hearing the incoming call tone, press the MFB button (3) once to answer the call. This will also pause your music.
- Press the MFB button (3) again to end the call. Music will resume.

2. REJECTING A CALL (during music playback included)

- Upon hearing the incoming call tone, press the MFB button (3) for 1 second to reject the call.

3. REDIAL LAST NUMBER (during music playback included)

- Double click the MFB button (3) to redial.

TROUBLESHOOTING:

1. The earbuds do not turn on.
 - a. Charge the earbuds. If the earbuds do not turn on even after charging, contact customer service at www.svnsound.com.
2. The earbuds do not charge.
 - a. Check whether the USB charging cable has been properly connected to the earbuds and the power source.
 - b. Check whether the PC power is on and that it is properly connected.
 - c. When using a separately purchased USB power adapter, make sure that it is properly connected.
3. The earbuds do not pair.
 - a. Check whether the Bluetooth device is powered on.
 - b. Check whether Bluetooth is enabled on the Bluetooth device.
 - c. Check whether the Bluetooth device is within 10 meters from the earbuds.
 - d. Check whether the Bluetooth device is compatible with the earbuds.
4. Music will not play through the earbuds.
 - a. Check whether the earbuds and Bluetooth device are powered on.
 - b. Check whether the music is playing on your Bluetooth device.
 - c. Check the volume level on your Bluetooth Device.

5. Sound lag/ distortion/ noise.
 - a. Check if there is a 2.4 GHz device near your earbuds or Bluetooth device.
 - b. Check whether the Bluetooth device is within 10 meters (30') of your earbuds.
6. Caller cannot be heard.
 - a. Check whether the earbuds are connected to the Bluetooth device.
 - b. Check whether Bluetooth is enabled on your Bluetooth device.
 - c. Check the volume level on your Bluetooth device.

WARRANTY:

To register your product and review warranty information, please go to
www.svnsound.com/warranty

REGULATORY INFORMATION:

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by SVN Sound could void the user's authority to operate this equipment.

RF WARNING STATEMENT:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.




Hereby, the manufacturer declares this device is in compliance with the Directive (RED) 2014/53/EU. The full text of the EU declaration of conformity is available at the following web address: www.svnsound.com/certifications

CHARGING:

The earbuds are not charged upon purchase and must be charged before first use.


1. Connect the provided USB charging cable to the earbuds.
2. Connect the other end of the cable to a computer.
You may also use a standard USB power adapter (5V, 1A).

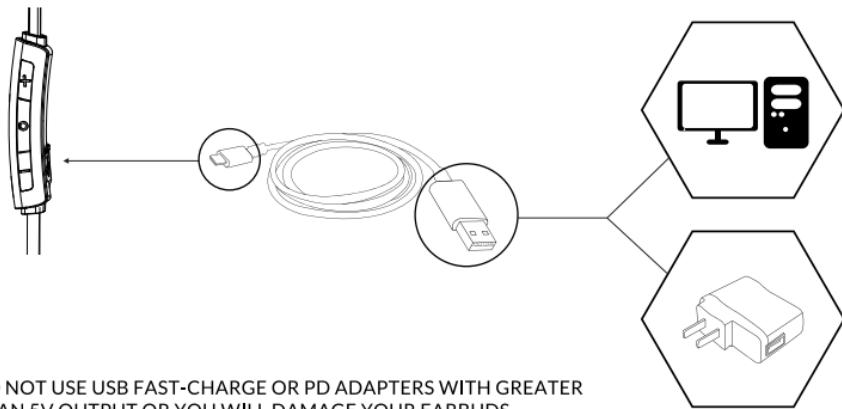

DO NOT USE USB FAST-CHARGE OR PD ADAPTERS WITH GREATER THAN 5V OUTPUT OR YOU WILL DAMAGE YOUR EARBUDS AND VIOLATE WARRANTY.

ACTIVATE VOICE CONTROL:

When the phone is connected, long press Volume + (1) and Volume - (6) for 3 seconds to activate the voice control function of your phone.

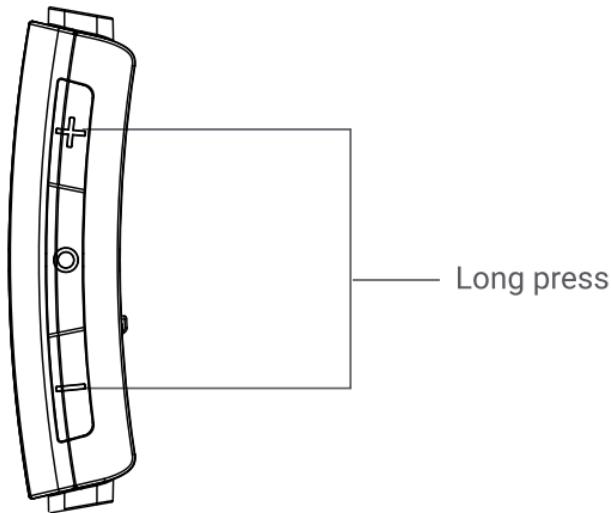

TRANSFER VOICE BETWEEN EARBUDS AND PHONE

During a call, long press MFB button (3) for 1 second to switch between your earbuds and phone.