AS-950

 
Wireless Personal Monitor

Included Components

- **1.** AS-950T x1
- 2. AS-950R x1
- 3. EB4 Ear Buds x1
- 4. MREWD Rack Kit x1
- 5. Antenna x1
- 6. Power Supply x1
- 7. Quick Start Guide x1







7. STANCE AND STANCE OF THE PROPERTY AND STANCE

Optional Accessories

 
- 1. EB6 Ear Bud Upgrade
- 2. EB10 Ear Bud Upgrade
- 3. Unlimited Receivers can be added
- **4.** EXTBNC: BNC Cable for Front Mounting Antenna (4 lengths available)
- 5. CN-BNCPM: BNC Connector for Front Mounting Antenna











to Rack

2. #2 Phillips Head Screwdriver

What May be Needed





Phillips Truss Head Screws

Setup



Insert the 5.5mm plug into the DC input jack, plug the wall wart into a 120VAC



Input Connection (XLR): Connect a shielded XLR microphone cable to the transmitter's left and right XLR input, connect the other end into your signal source's left and right outputs.



Input Connection (1/4"): Connect a 1/4" cable to the transmitter's left and right 1/4" input, connect the other end into your signal source's left and right outputs.



Attach the antenna to the antenna jack and position at a 45° angle if possible.

Single Rack Mounting (Optional)



Attach the long and short rack ears to either side of choice using the provided screws. Align and screw into the rack.

Dual Rack Mounting (Optional)



Screw one short rack ear on the left side of the first transmitter, and one coupler half onto the right side of the same transmitter using the provided screws.



Screw one short rack ear on the right side of the second transmitter, and one coupler half onto the left side of the same transmitter.



Align both transmitters so that the coupler halves fit, and screw them together.



Align the dual transmitters to the rack and screw into the rack.

Operation



Press the Power button to power on the Transmitter.



Use the up and down buttons to select a channel number. The display show the selected channel number.



Insert Two AA Alkaline Batteries into the Receiver.



Turn the Level knob clockwise to power on the Receiver.



Repeat step 2 on the Receiver so that the Receiver matches the same Channel number.



Insert the ear buds into the receiver and adjust the volume to a comfortable level.



BE HEARD"

HOT SPOT PERSONAL MONITOR





Quick Start Guide

Other Helpful Sources





AS-950 Manual



Specifications subject to change without notice.

601 E. Pawnee Wichita, KS 67211 316. 263.2852 FAX 316.263.0642 www.galaxyaudio.com
Distributed in Canada by Audio Distributors International (ADI) 1275 Newton, unit 6 Boucherville, QC. J48 FIZ Canada
450.449.8176

Printed in Chin

FAQ

1. Q. I only have one Aux output available on my mixer, and the sound is only in one ear.

A. On the back of the transmitter, you will see a "MONO / STEREO" switch, move it to the appropriate mode.

2. Q. How many receivers can I use?

A. It is unlimited. Use as many as you need.

3. Q. Can you have more than 1 mix?

A. You will need another AS-950 system on a different frequency for each mix.

4. Q. Can I use headphones other than the supplied EB4?

A. Yes, you can use any headphone or earbud with an impedance of 16 ohms or higher.

Wireless Tips

Maintain line of sight between the transmitter and receiver antennas.

Do not have walls, metal objects, large crowds, etc. blocking the line of sight between the transmitter and receiver.

Antennas on the stationary equipment should be kept several feet above the ground.

Antennas can be mounted on stands or walls using brackets such as the ANT-LB.

On body pack receivers/transmitters, avoid putting them in your pocket, and/or folding the antenna under the pack. The antenna should hang freely and openly.

Keep the distance between transmitters and receivers as short as possible.

If distances above 20-30' are unavoidable, directional antennas such as the ANT-PDL can improve reception by rejecting signals outside their pickup angle.

Find out what TV stations are broadcasting in your area and avoid the channels they are on.

This information is available from many sources on line, such as www.tvfool.com.

If your receiver is showing that it is receiving RF when your transmitter is turned off, you need to move to another frequency.

If you are using several systems, you can contact service@galaxyaudio.com for assistance in frequency coordination.

Make certain you are using fresh batteries, rechargeable batteries may be used, but they discharge at a much faster rate than alkaline.

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The Equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance 20cm between the radiator & your body.