



KODAK 17-Inch Wall Photo Frame
/ Wi-Fi Enabled
User Guide
用戶指南



Model:WF173

 
Content 目錄

Inside the box 在包裝內	Page 1
Sensors 傳感器	Page 2
Remote Control 遙控器	Page 3
Set up your picture frame 設置您的相框	Page 4-6
Download Kodak WallFrame App 下載應用程式	Page 7
Register your account 註冊您的帳戶	Page 8
Activate your account 啓動您的帳戶	Page 9
Connect to your picture frame 連接到您的相框	Page 10-12
Kodak Wall Frame App 應用程式	Page 13-14
Create albums 建立相冊	Page 15-16
Create playlists 建立播放列表	Page 17-19

Content 目錄

Add playlists to the frame 加入播放列表到相框	Page 20
Remote Control function 遙控器按鈕功能	Page 21
Remote Control function - Display menu 遙控器按鈕功能 - 主頁面	Page 22
Remote Control function - Display menu settings 遙控器按鈕功能 - 主頁面設置	Page 23
Display menu settings 主頁面設置	Page 24-26
Photo LIVE 實時照片	Page 27-28
Kodak Wall Frame App - E-shop 電子商店	Page 29-30
Kodak Wall Frame - E-shop global artists 全球藝術家收藏	Page 31
Kodak Wall Frame - E-shop photo preview 電子商店照片預覽	Page 32
Kodak Wall Frame - E-tokens & shopping cart 電子代幣和購物車	Page 33
Kodak Wall Frame App - System default albums 應用程式 - 系統預設相冊	Page 34
Kodak Wall Frame App - Others 應用程式 - 其他	Page 35-38
Additional Instructions of The Remote Control 遙控器說明	Page 39

Inside the box 在包裝內

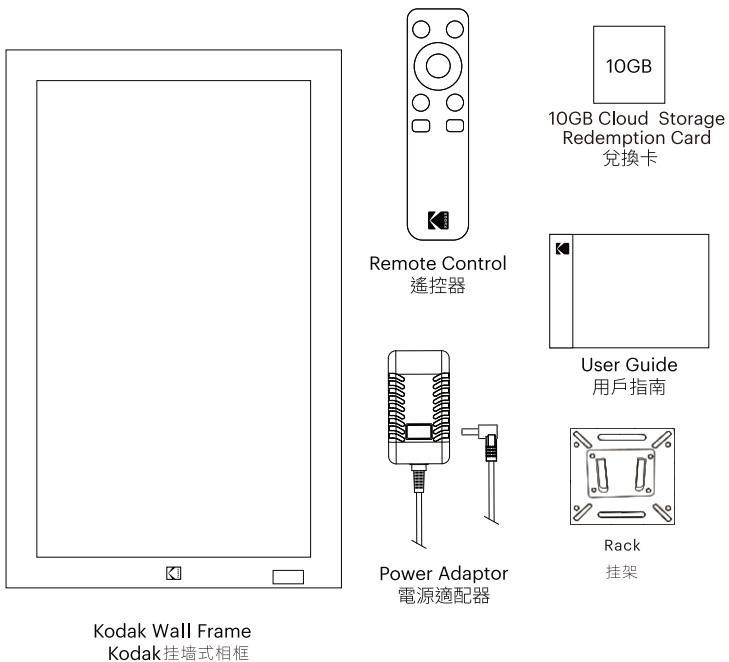

使用過度恐傷害視力。

Prolong use of 3C products will cause harm to vision

注意事項

Please note

1. 使用30分鐘請休息10分鐘
 2. 未滿2歲幼兒不看螢幕,2歲以上每天看螢幕不要超過1小時
1. Recommend to rest 10 minutes for every half hour interval.
 2. Children whom are under the age of 2 are not recommended for usage. Children whom are over the age of 2 are recommended to not exceed the prolong usage of 1 hour per day.

NCC警語

NCC Warning Statement

第12條

經型式認證合格之低功率射頻電機,非經許可,公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第14條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。

前項合法通信,指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。


Article 12

Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristics and functions of the original design of the certified lower power frequency electric machinery.

Article 14

The application of low power frequency electric machineries shall not affect the navigation safety nor interfere a legal communication, if an interference is found, the service will be suspended until improvement is made and the interference no longer exists.

 Sensor 傳感器

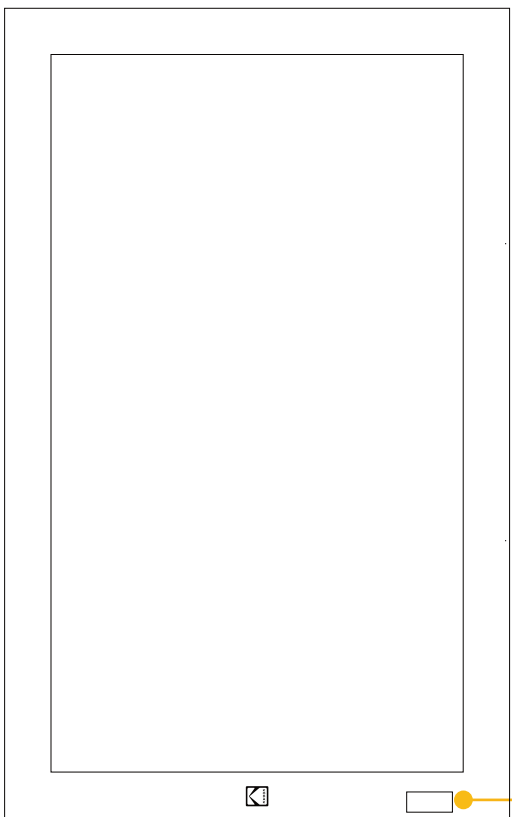


Infrared receiver&Hu-motion sensor
紅外線接收器和人體感應接收器

Infrared receiver receiving signal from remote control
紅外線接收器接收來自遙控器的信號

Remote Control 遙控器

 
Instruction guide of your remote control 遙控器的使用說明

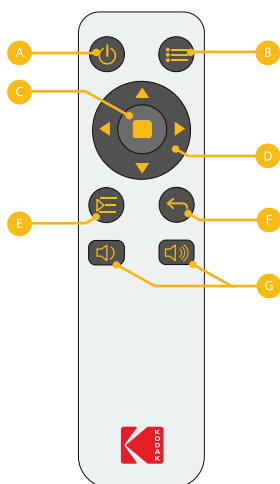

- | | |
|--|--|
| A On / Off | Turn On/ Off the picture frame
打開/關閉相框 |
| B Menu
菜單 | Go to menu
轉到菜單 |
| C Enter
確定 | Select / Play / Pause
選擇 / 播放 / 暫停 |
| D Left / Right
左 / 右
Up / Down
上 / 下 | Menu navigation / Video playback control
菜單導航 / 圖片播放控制
Menu navigation / Quick picture browse
菜單導航 / 快速瀏覽圖片 |
| E Playlist
播放清單 | Choose different playlist
選擇播放清單 |
| F Back
返回 | Go back to the last step
退回上一步 |
| G Volume
音量 | Increase/decrease volume
增加/減小音量 |

Set Up Your Picture Frame 設置您的相框

 Kodak Wall Frame

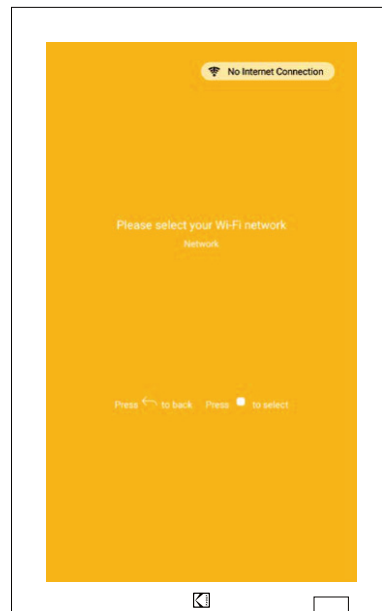

Please be prepared the following items before setting up
在安裝之前請準備好以下事項

 
- Kodak Wall Frame
- Remote Control
- A smart phone
- WiFi network which can access to the internet
- Kodak 掛牆式相框
- 遙控器
- 智能電話
- 能連接互聯網的 WiFi 網絡

Choose your language
選擇你的語言


Then choose your WiFi network
然後選擇您當地的無線網絡

Set Up Your Picture Frame 設置您的相框

Kodak Wall Frame

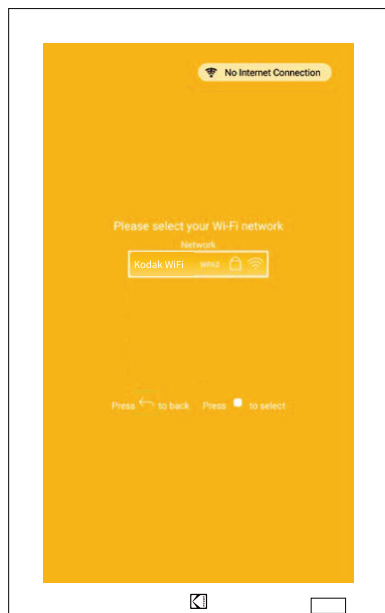

 
Select and confirm your WiFi network
確認您的網絡

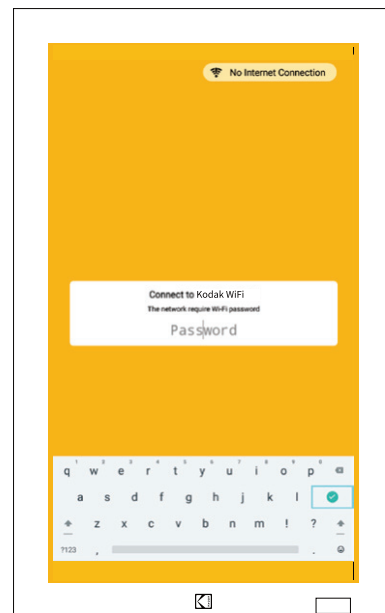


Then type in your password
然後輸入您的密碼

Set Up Your Picture Frame 設置您的相框

 Kodak Wall Frame

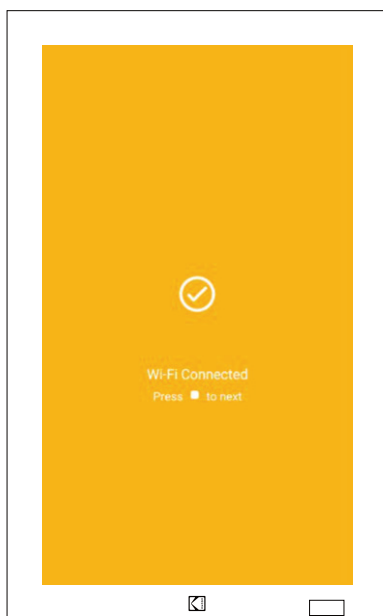

 
If the password is correct,
it will show as "Wifi Connected"
如果密碼正確，
它將顯示“已連接網絡”

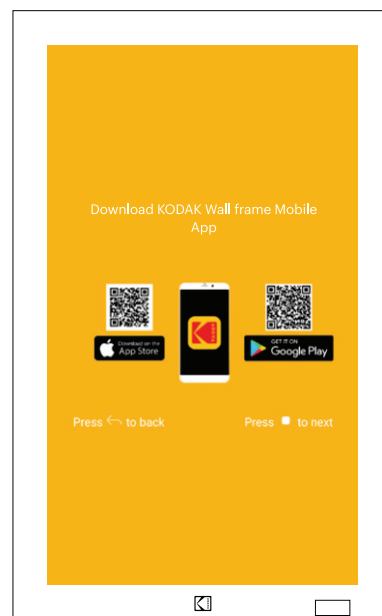

Select the iOS/ android QR code
on your Kodak Wall Frame to
download the mobile app
在 Kodak 挂墙式相框上
選擇 iOS / Android 二維碼下載App


Download Kodak Wall Frame App 下載應用程式

 Kodak Wall Frame App

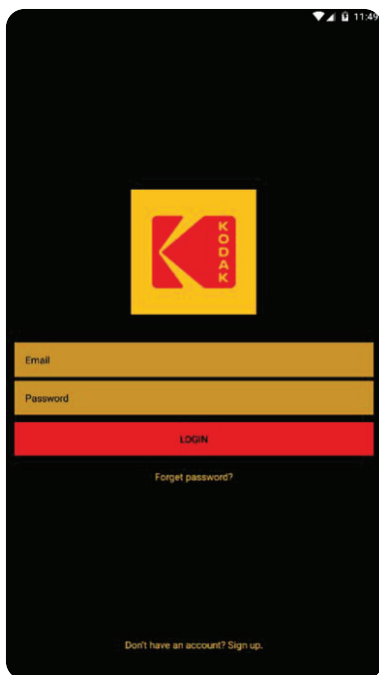

Download the Kodak WallFrame App
下載Kodak WallFrame 應用程式

 Download and Install the Kodak Wall Frame App from Apple App store or Google Play,
Apple App Store或Google Play下載並安裝Kodak Wall Frame App

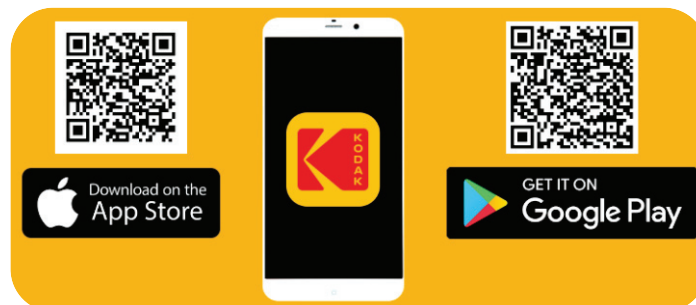

Open the application & sign up to create your account
打開應用程式並註冊以建立您的帳戶

Apple Store are trademarks of Apple Inc., registered in the U.S. and other countries

Register Your Account 註冊您的帳戶

Kodak Wall Frame App


A screenshot of the registration screen within the Kodak Wall Frame App. The screen has a black background. At the top center is the Kodak logo. Below it are four yellow input fields labeled 'Email', 'Username', 'Password', and 'Re-enter Password'. At the bottom of the form is a red button with the word 'REGISTER' in white capital letters.

Open the "KODAK Wall Frame" App through your phone
通過手機打開 KODAK Wall Frame App

Sign up a account by using a valid email address & setup your
username & password to login. Then click " Register"
使用有效的電子郵件地址註冊帳戶並設置用戶名和密碼進行登錄
然後點擊“註冊”

Activate Your Account 啟動您的帳戶

 Kodak Wall Frame App

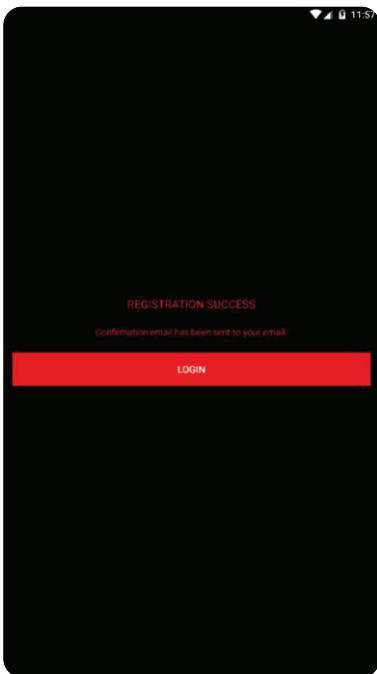


Registration Success

A verification mail will be sent to your provided email address.
Then by clicking the activation link to complete the sign-up process


驗證郵件將發送到您提供的電子郵件地址。
然後點擊激活鏈接以完成註冊過程

Connect to Your Picture Frame 連接到您的相框

 Kodak Wall Frame App

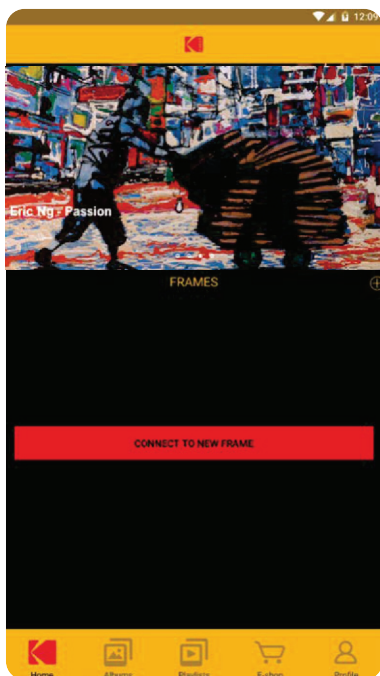

 
Click the “+” sign next to FRAMES or
press “Connect to New Frame”
點擊 FRAMES 旁邊的“+”符號 或
點擊“連接到新相框”

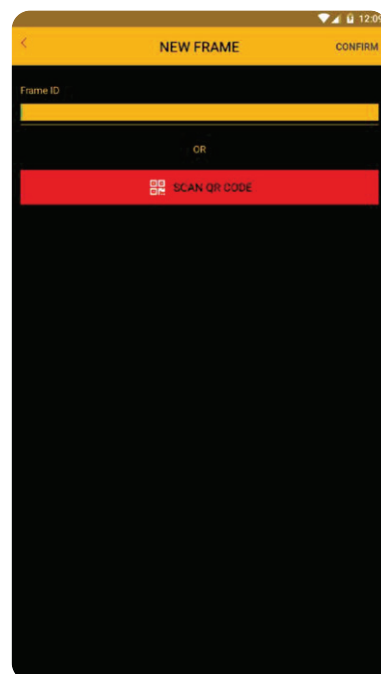


Scan QR code
掃描二維碼

Connect to Your Picture Frame 連接到您的相框

 Kodak Wall Frame

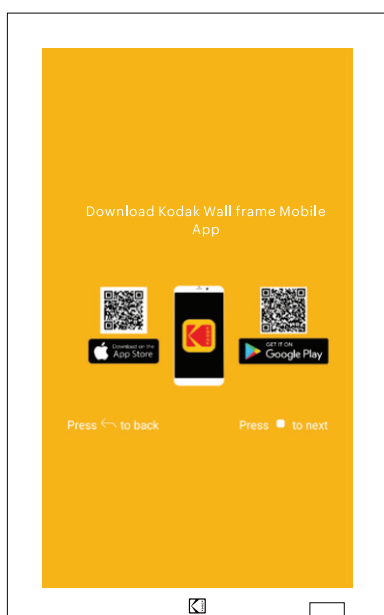

 Press "Enter" to show the Frame QR code, ready for scan
按“確認”鍵後，會顯示相框專屬的 QR code

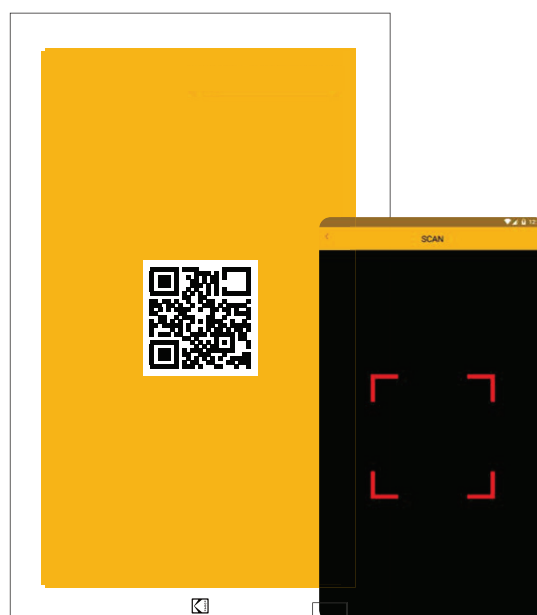

After the QR code scanning interface is opened,
Scan the QR code via your phone and start pairing
打開掃描介面後，通過手機掃描二維碼，然後開始配對

Connect to Your Picture Frame 連接到您的相框

Kodak Wall Frame



 
Once your frame is connected to your phone,
the Kodak logo will be appeared
當您的相框連接到手機時，會出現Kodak商標

Now, customer can start to
control the frame by using the mobile APP
現在，用戶可透過手機應用程式進行各種相框操作

Kodak Wall Frame App 應用程式 >>

Kodak Wall Frame App 應用程式


Kodak Wall Frame App

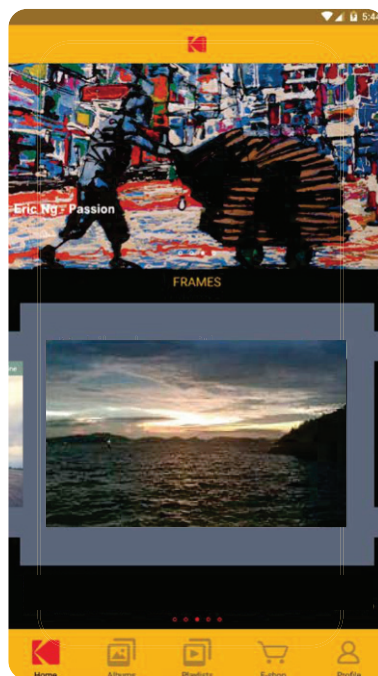

Kodak Wall Frame App 應用程式

Kodak Wall Frame App

 Display Banner (The latest promotion offer or current hot selling photo)
展示橫幅 (最新促銷優惠或當前熱銷照片)

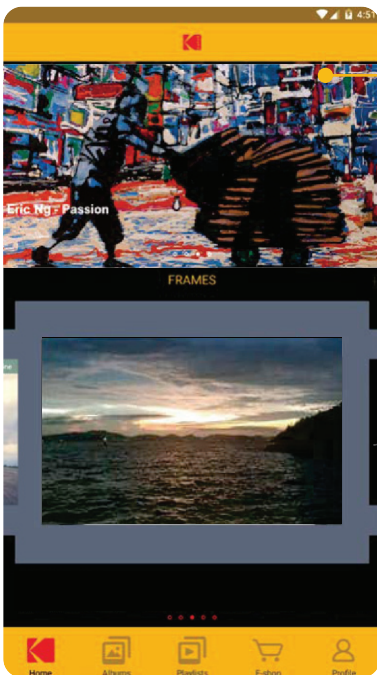


Home page

1. Connect to KodakWallFrame
2. Managing photo frame (photo albums & playlists) (May connect to max. 5 picture frames simultaneously with one account)

主頁

1. 連接到相框
2. 管理相框 (相冊和播放列表)
(一個帳戶同時連接最多 5個相框)

 Albums (Upload & manage photo to cloud)
相片集 (上傳和管理照片到Kodak cloud)




Playlists (Add & manage photos from albums)
播放列表 (新增及管理相冊中的照片)

E-shop & Art World services
電子商店和Art World服務

Profiles
Messages (Activity log) /
Friends (May add friends & share photos)
個人檔案
信息/朋友 (新增好友/分享照片)

Kodak Wall Frame App - Create Albums 建立相冊

 Kodak Wall Frame App

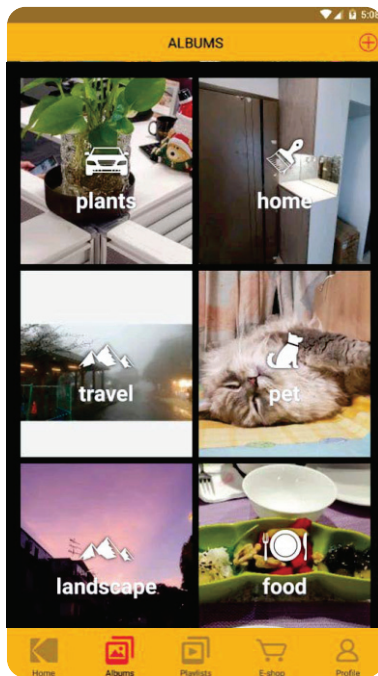


Create Albums
建立相冊

Import, upload and manage your photo easily
輕鬆建立, 上載和管理您的照片

Kodak Wall Frame App - Create Albums 建立相冊


Kodak Wall Frame App

 Step 1
步驟 1

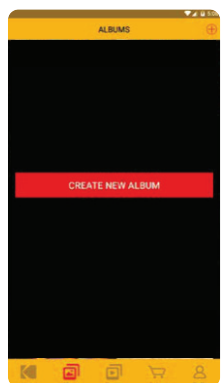


Click "+" or "create new album" to create album
點擊 "+" 或新增相冊以建立相冊

 Step 2
步驟 2

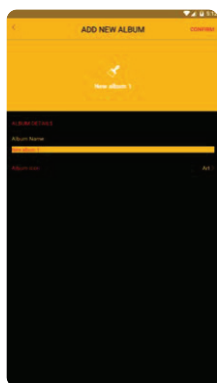

Enter album name
輸入相冊名稱

 Step 3
步驟 3

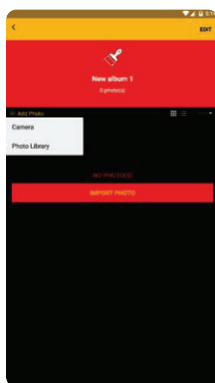


Add/ Drop photos (may add photos from mobile devices)
添加/刪除照片 (可以添加手機中的照片)

Step 4
步驟 4




Select sources to import from your phone
從手機選擇導入來源

 Step 5
步驟 5

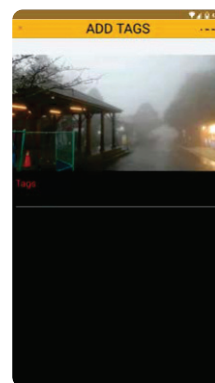

Create tags for each of your photos before pressing the "ADD" to confirm
在確認按"添加"之前，為每張照片加上標籤

 
Step 6
步驟 6

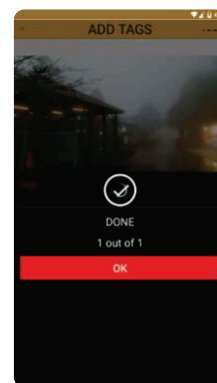

Upload complete
上傳完成

Kodak Wall Frame App - Create Playlists 建立播放列表

 Kodak Wall Frame App

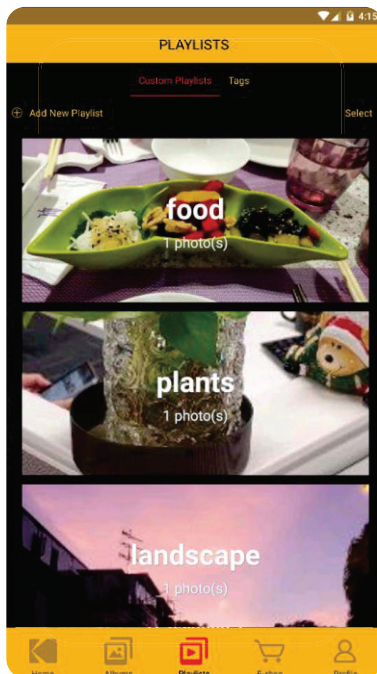

Create playlists
Manage the photo to display on picture frame(s)

建立播放列表
管理在相框展示的相片

Kodak Wall Frame App - Create Playlists 建立播放列表

Kodak Wall Frame App

 
Step 1
步驟 1

Step 2
步驟 2


Step 3
步驟 3

Step 4
步驟 4

Step 5-8
步驟 5-8

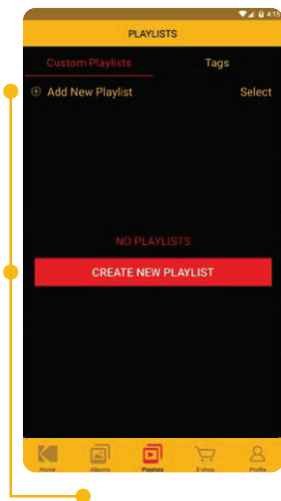

 
Click "+"
or "create new playlist"
to create playlists
點擊 "+" 或按 "建立播放清單"
以建立播放清單

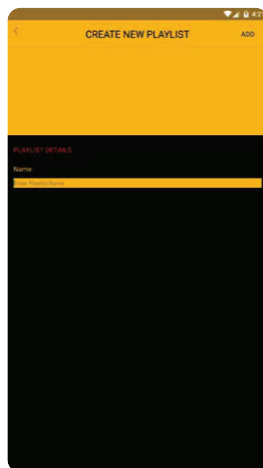

Enter name for playlist
輸入播放列表名稱



 Click "import photo"
button to add photos
點擊 "輸入照片" 按鈕
添加照片

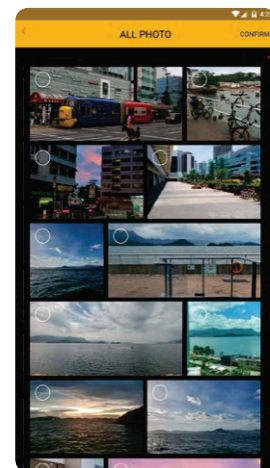

Select photos from albums
從相冊中選擇照片