



User Manual for MP3 Music Player

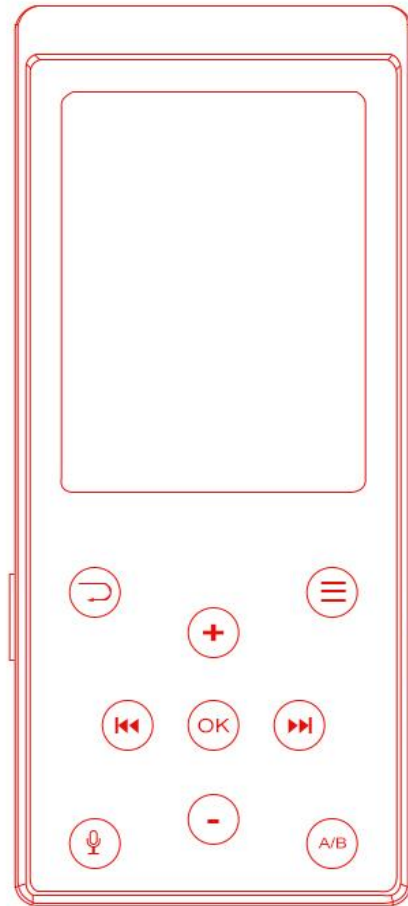

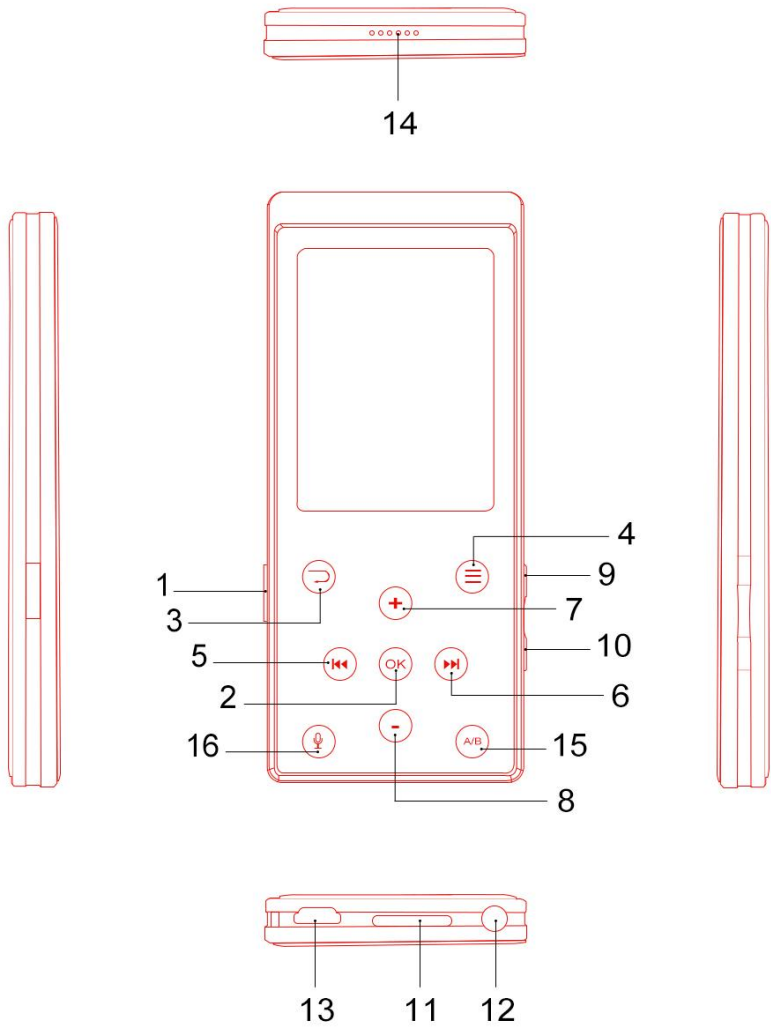

1. Power Button
2. OK Button
3. Return Button
4. Menu Button
5. Previous Song
6. Next Song
7. Up Button
8. Down Button
9. Volume+
10. Volume-
11. Card Slot
12. Headphone Jack/Reset
13. Charging/ USB port
- 14 . Voice
15. A-B Recording Button
16. Recording

Functions

※ Music Play: Support MP3, WMA, APE, FLAC, WAV format audio files

- ※ Recording: Support FM, MIC recording. Support MP3, WAV format
- ※ Pictures: Support JPG, BMP, GIF format
- ※ Video: Support AMV, AVI format (Need to convert to 240*320 resolution format via conversion tool)
- ※ Support Bluetooth, Radio, Step, E-book
- ※ Support for Micro SD external storage

Button Operations:

Previous/Next Song Button: When it's on music playing interface, touch Previous / Next Song Button to go to the previous/next song. Hold the Previous/Next Song Button for fast rewind/forward. When it is on main menu interface, touching this button can adjust left and right.

Power On/Off Button: Holding the Power Button for 3s, the device will power on/off. Click Power Button, the screen of the device will be locked.

Return Button ↻ : In any interface, touch Return Button ↻ to back to the previous menu. Hold the Return Button ↻ back to main menu interface. (Except in screensaver)

Volume+/- Button: Click the Volume Button in any interface to adjust the volume.

Up/Down Button: Touch Up Button/Down Button will adjust up and down menu in main interface or sub-menu interface.

OK Button: Touching OK Button will play or pause the song when it is in playing interface. This button is also to save the settings in settings interface.

Menu Button: Touching Menu Button in playing interface will enter to sub-menu function interface.

Recording Button: Holding Recording Button in any interface will enter into recording interface.

A-B Recording Button: Touch A/B Button in playing interface, the character “A-B” will show on the screen. The start time will be set when character “B” is flashing, and the recording time will ends if touch A/B Button.

Note: Please kindly understand there is a bit different from the operations and please be subject to the actual products.

Date Transfer

Connect to the PC via a USB cable, copy the music and other related materials that need to be transferred on the computer hard disk, and then switch to the player

capacity disk and paste them to realize data transmission.

Charge the Player

1. By charging the music player with the included USB cable. The USB cable can both be used for data transfer and charging the player.
2. By connecting to a computer or a charger (The charger is not included in the package)

Attention: The specification of the charger must meet the following requirements, or any accident or failure happened will be regarded as man-made damage.

Operation Instructions

Main Interface

Choose the function, and touch OK Button to enter.

1. Music


After choosing Music, touch OK Button to access to its all function. Touch Up/Down Button to choose the song, and then touch OK Button to play.

Volume Adjustment: Click Volume+/- Button to adjust the volume. (Volume adjustment operation is the same



in Radio, Video, Recording, Bluetooth, Playback.)

Play/Pause: Touch OK Button will play/pause the playing on playing interface.

Rewind/Forward: Hold button / for fast rewind/forward.

Track Transfer: Touch button / to go to the previous /next song.

Music Playback Settings Interface: While it's on music playing interface, touch Menu Button to access its sub-menu. The related functions will be listed: Play mode, Sound settings, Add to playlist, Remove from playlist and Delete. Touch Up/Down Button to select the function and touch OK Button to save. (The operation of accessing to sub-menu interface is the same in Video, Ebook, Radio and Picture.)

Return: In any interface, touch button  to back to the upper menu. Hold the button  back to main interface.



Note: The return operation is the same as the following functions.

2. Video

Video: Select Video, touch OK Button to access to video interface.

Playback/Pause: Touch OK button will play/pause the video when it is in playback.

Rewind/Forward: Hold button / for fast rewind/forward.

Video Transfer: Touch button / to go to the previous /next video.


Attention: Rofeer Music Player only support the AMV format video in 240*320, you should convert video files by format conversion software first.

3. Radio

Select “Radio” on the main menu, click OK Button to access to Radio Interface, and touch OK Button to search signals. (Note: Wired headphones are required as antenna for FM radio function.)


Function select: Touch Menu Button to access to sub-menu interface. A related list will show including “Presets”, “Manual tune”, “Auto tune”, “FM recording”.

4. Picture

Select “Pictures” in main menu, touch OK Button to access to its function. Touch  to the previous/next picture.

5. Recording

Start Recording: Select “Recording” in main menu, touch OK Button access to sub-menu interface, and then select “Start voice recording” to begin recording.

End Recording: Touch  will show “Saving recording?” When the recording pause, select “Yes” to save the recording.

Play Recording: Select “Recording library” in sub-menu, touch OK Button access to recording library, and choose the recording file to play.

Record settings: Enter to sub-menu interface, and the related functions will be listed: Record Format/Record Settings, etc. Touch Up/Down Button to select the function and touch OK Button to save.

6. EBook

Select “Ebook” in main menu, touch OK Button access to its interface.

Page up/down : Touch Up/Down Button to the page up/page down.

Ebook Setting: While on the text playing interface, touch Menu Button to access to the Ebook setting show as “Bookmark select”, “Delete bookmark”, etc, touch Up/Down Button to select the function, and touch OK Button to save.

7. Bluetooth

Bluetooth Connect: Select “Bluetooth” in main menu, touch OK Button access to its interface, and it shows “Please wait...” “Searching for...”. After searching for the device successfully, please manually select the device name to match the connection. If the search device fails, it will show “No device”, and the interface automatically jumps to the Bluetooth settings interface, touch Up/Down Button to select the setting function, and touch OK Button to save. (Attention: The Bluetooth speaker should be turned on when the music player searches for device.)

8. Settings

Select “Setting” in main menu interface, touch OK Button access to its interface. On the “Setting” interface, Display

settings/Shutdown settings/ Date and time/ Language/ Information/ Tools/Pedometer/Touch light mode/ Screensaver/ Format device/ Factory settings will be listed on the menu.

Function selection: Touch Up/Down Button to select any option you want, and touch OK Button to confirm.

1) **Display settings:** Select “Settings” in main menu, and then select “Display settings”, touch OK Button to access its interface. Backlight timer and Brightness can be set in the interface.

2) **Shutdown settings:**

Sleep timer: Set time into sleep mode.

Power-saving shutdown: Set time for auto shutdown under non-operating state.

3) **Date and time:** Touch Up/Down Button to select the Time settings/Date settings to adjust, and touch Up/Down Button to adjust the value, touch OK Button to save the settings.

4) **Language:** Select “Settings” in main menu, and then select “Language”, touch OK Button to access its interface. Choose your language, and touch OK Button to save the setting.

5) **Tools:** Touch Settings in main menu to access to its

interface, and select Tools. In the “Tools” menu a related list will show “Calendar”, “Stopwatch”, “Alarm”.

6) **Pedometer:** Select “Pedometer” and touch OK Button to enter its interface. Select “Start Step” and touch OK Button to start step. When it starts step, touch Return Button will keep the pedometer running in the background.

Save Steps: Touch Return Button when it is in stop, it will shows “Save steps or not?” Select “Yes” to save steps.

7) **Touch light mode:** Select “Settings” in main menu, and then select “Touch light mode”, touch OK Button to select the “shut down” or “Nomal on”, and touch OK Button to confirm.

8) **Format Device:** Select “Settings” in main menu, and then select “Format device”, touch OK Button and the interface shows “All data will be deleted. Continue?”, choose “Yes”/”No”, touch OK Button to confirm.

9) **Factory settings:** Select “Settings” in main menu, and then select “Factory settings”, touch OK Button and the interface shows “Restore factory settings?”, choose “Yes”/”No”, touch OK Button to confirm.

9. Folder

Select “Folder” in main menu, and touch OK Button access to its interface. Touch Up/Down can View files in MP3’s memory.

Format Player

Connect the music player to the computer with a data cable, open “My PC” or “Computer” to display the removable disk, choose the removable disk and click the right mouse button, click Format, Start, Confirm, and wait for formatting to complete. (Formatting will delete all the files of the music player, and can repair the disk. Important files need to be backed up by yourself.)

Technical Parameters

Product	MP3 Music Player
Dimension	106*48*10 (mm)
Screen	TFT2.4
Bluetooth Version	4.2
Headphone Jack	3.5
Battery	Buit-in 600MAH Lithium Battery
Music Format	MP3, WMA, APE, FLAC, WAV
Videro Format	AMV AVI

Picture	JPG, BMP, GIF
Ebook	TXT
Supported Language	26 Languages
Operating System	No operating system

FAQ

If the music player encounters an abnormal phenomenon caused by incorrect operation, such as the black screen cannot be operated.

Turn off firstly and then turn on by pressing the Power Button again, it can be normal again.

Cannot turn on the music player

1. Check if the player run out of the battery
2. Connect the player to an adapter and try again after charging
3. If the music player still cannot be turned on, please contact us via our Customer Service Email.

Heavy noise when playing music

1. Please make sure the plug is clean or this may cause noise
2. Please check if the music file is damaged, try to play other musics to confirm, damaged files may lead to heavy noise or skipping.

Can't hear any sound from the player

1. Please check if the volume is set to "0"
2. Please check if the earphone is in poor connection with the player.

FM does not search signals

Please connect the earphone and search signals in open space.

Cannot connect Bluetooth

Please make sure the external devices turn on or not and keep the connection distance within 10 meters.

E-book garbled

Please confirm whether the file is damaged and the format is correct.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or

transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction