(D

PRO2.0

WIRELESS

OVER-EAR

HEADPHONES

Controls



- Next track / Volume up +
- 2 Previous track / Volume down -
- Microphone
- Indicator light
- 5. Audio port
- 6. Charging port (micro USB)
- 7. ON/OFF/Pause/Play/Answer/Hang up call

The wireless headset is powered by a rechargeable li-ion battery.

Please ensure that the battery is fully charged before using the headphones for the first time 1. Insert USB charging cable into PC USB port.

- Connect USB cable into the USB port on your friendie AIR.
- 3. Red light shows the battery is charging.
- 4. When fully charged the light will turn off.
- 5. It takes approximately 2 hours to fully charge the battery.

Wireless audio pairing

Charging

- Enter the pairing mode: Press and hold the power button for 6 seconds until the LED indicators blink red and blue
- 2. On your mobile device turn Bluetooth on.
- 3. Keep your headphones and mobile device within range.
- 4. Begin searching for Bluetooth devices on your mobile device and select the friendie AIR PRO 2
- If a password is required, enter 0000. 5. LED indicator will flash blue once paired.
- Next time the headphones will automatically pair to this device.

Phone Calls

Press the answer call button to answer and end calls.

Wired backup audio

Your AIR PRO features a 3.5mm audio input so you can keep listening to your favourite tracks if your battery goes flat.

- To use your AIR PRO as a wired headphone:
- 1. Plug the 3.5mm audio cable into the "audio port" on your AIR PRO.

2. Plug the other end of the audio cable into your music device.

Your AIR PRO does not need to be turned on for this function.

This mode does not allow volume or phone calls.

Quick reference

Function:

Turn on	Press and hold the power button @ for 3 seconds until the device is on. (Blue LED slowly flashes).
Enter the pairing mode	In power off mod: Press and hold the power button @ and hold for 6 seconds. (Blue LED and Red LED will flash alternatively).
Pairing	Once paired to a specific Bluetooth device the headphones will remain paired. Ensure Bluetooth is active on the device and your headphones are not paired with another device.
Play / pause	Press the power button @ to play when the device is paused. Press the power button @ to pause when the device is playing.
Volume up	Press + button to increase the volume.
Volume down	Press - button to decrease the volume.
Previous	Long press the - button for the previous track.
Next	Long press the + button for the next track.
Turn off	Press and hold the power button for 3 seconds when the device is on (the LED will turn off).
Low battery warning	The Red LED flashes
Charging	Plug the charger into the USB port on the headphone (Red LED when charging).
Answer call	Press the power button @ for 1 second to answer an incoming call.
End call	Press the power button @ for 1 second to end a call.
Reject call	Press and hold the power button @for 2 seconds to reject an incoming call.

Operation:

Need Help? Please contact support@friendie.com.au

www.friendie.com.au f: sharewithfriendie i: friendie audio

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different
- from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



FCC ID:2AURSFRIENDIE1

-1-