Quick Start Guide N43 N43BT



A

In a residential environment, running this equipment may cause Radio jamming.

Parking List







Printer

Power Cord

 
Quick Start Guide




USB Cable

⚠ Note: the packing materials are actually based on the order.

Appearance and Components



Iliside viev

 

⚠ Note: the views above are for your reference. Ports vary by your choice.

FCC Warning

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there I is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

-Connect the equipment into an outlet on a circuit

different from that to which the receiver is connected.


-Consult the dealer or an experienced radio/TV technician for help

FCC ID: 2AUTE-4DT23SE

Rev:1.0

Loading the Paper

 1. Turn the power on, adjust the paper guides to fit the width of paper.




Power Connection





 Connection





Handling Paper Jams

 
1. Facing the front of the machine, use your right hand to toggle the top cover opening button.



3.After removing the jammed paper from

the feed channel, replace it with new

2.Lift up the top cover.



4.Remove the stuck paper and proceed with normal operating paper loading.



- 1. Confirm that the printer power is turned off.
- 2. Connect the power cord to the printer.
- 3. Connect the other end of the power cord to a nearby socket.
- 4. Power on: Press and hold the "power button" for 1 second.

Power off: Long press and hold the "power button" for 3 seconds.

Bluetooth Connection (Only for N43BT)

BT Name: N43BT_****(The last four digits of the Mac address)

BT Password: 1234



