 
 


Product Introduction

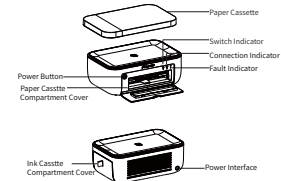

Accessory List

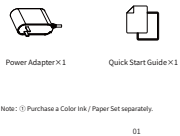

Note: ① Purchase a Color Ink / Paper Set separately.

Power on and Connection

- Connect the power cord
Insert the power cord into the power interface on the back of the printer.



- Power on
Press and hold the power button, and the switch indicator will light up before releasing the button. After the three indicators flash quickly, the power-on is completed, and the printer enters a waiting state for connection.



- Download App
Scan the QR code below to download the App "Heyphoto", and choose "CPN100".



Loading the Ink Cassette

- Open the ink cassette compartment cover
Load the ink cassette into the printer in the direction of the arrow marked on the cassette until it clicks into place.



- Close the ink cassette compartment cover



Loading the Photo Paper

- Open the cover of paper cassette
First open the outer cover① and flip, then open the outer cover②.
- Load the photo paper with glossy side face up
Note: Placing more than 18 sheets of paper may damage the printer or cause malfunction. Do not touch the glossy side, except for the non-printable area.



- Close the outer cover of paper cassette③



 
Loading the Paper Cassette

- Open the paper cassette compartment cover
- Make sure the outer cover of paper cassette is open
- Load the paper cassette to the printer
Please make sure to fully insert the paper cassette into the compartment. (It slides about 2cm into the compartment.)



Replacing the Ink Cassette

- Open the ink cassette compartment cover
- To remove the used ink cassette, move the lock upward that it will be ejected automatically
- Load the new ink cassette and make it click into place, then close the ink cassette compartment cover



Tips:
All the drawings of product and accessories in the manual are for reference only. Due to the updating and upgrading of the product, there may be some differences between the actual product and the drawings, please refer to the actual product. For more product information, please contact HPPT customer service.

Photo Printer

Product Name: Photo Printer	Dimension: 200x130x75mm
Product Model: HCP-4T523A	Weight: About 1.0kg
Input: 24V 895 2A	Operating Temperature: 5°C-35°C
Wi-Fi Connection: Wi-Fi IEEE 802.11b/g/n 2.4GHz	

Manufacturer: Xiamen Hanin Electronics Technology Co., Ltd.
 Add: No.36, Hongyuan Road, Tong'an District, Xiamen, China 361100
 Tel: 400-766-7666
 Web: www.hppt.com
 Product Homepage: cp.hppt.com

Instructions for Button Operation

- Turn on the printer: press and hold the power button for 3 seconds, then the white switch indicator is lighting.
- Turn off the printer: press and hold the power button for 3 seconds, release it and the switch indicator will be off.
- Reset AP mode: in power on status, press and hold the power button for 6 seconds, and connection indicator turns into white light flashing quickly, then release the button and reset Wi-Fi configuration successfully.

Instruction for LED Indicator

Switch Indicator		connection
Off	on always	connection
White Light	flashes quickly	start up
	flashes slowly	network is updating

Connection Indicator		connection failed not connected
Off		start up
White Light	flashes quickly	connection is poor to connect Wi-Fi
	flashes slowly	is the Wi-Fi button network
	on always	connection successful and in AP mode

Fault Indicator		normal and faultless
Off		normal
White Light	flashes quickly	ink level
	flashes slowly	paper jam, reset required
Red Light	flashes quickly	lack of paper or paper cassette
	flashes slowly	high or over temperature

07

Printing Wirelessly from Smartphones (AP Mode)

- Confirm that current printer is in AP mode, or else press and hold power button;
- Open the App, click "Album", select the images to print and then click "Next";
- Edit and adjust the image in the print preview, click the print icon;
- Wait for the Bluetooth searching until it shows CP4100-XXXX, click and connect, and choose Wi-Fi to connect and print; XXXXX is last four digits of Bluetooth MAC address showed on the bottom of the printer;
- After connecting successfully, the printer can start to print the photo.

Printing Wirelessly from Smartphones (STA Mode)

- Make sure the smartphone has been connected to the Wi-Fi hotspot;
 - Open the App, click "Album", select the images to print and then click "Next";
 - Edit and adjust the image in the print preview, click the print icon;
 - Wait for the Bluetooth searching until it shows CP4100-XXXX, click and connect, and choose Wi-Fi to connect and print; XXXXX is last four digits of Bluetooth MAC address showed on the bottom of the printer;
 - Enter the passwords of Wi-Fi hotspot, click "Configure WiFi", then white connection indicator will flash slowly; (The time consuming of Wi-Fi configuration is related to the actual Wi-Fi network, please wait patiently)
 - After connecting, connection indicator is on always, and then the printer can print.
- Note: The above instructions take photo album printing for example, for LQMO, AR Photo and Credentials printing, please experience on your own according to the guide of App.

08

Operation Location

- Please place the printer on a desktop or other flat and stable surface for use;
- When printing, the photo paper will move back and forth. Please ensure that there is a space of more than 10cm behind the printer.

Precautions

- The best operating temperature is 5°C-35°C, if the environmental temperature is too high, the print quality may be affected.
- Please do not use the unofficial adaptor, color ink and photo paper to ensure the print quality.
- Do not touch the film of color ink and the glossy side of photo paper in case of fingerprints that may affect the print quality.
- Do not pull out the photo paper by force during printing, or else it may damage the printer.
- Please remove the paper cassette when it is not used for a long time, and close the covers of the printer and the paper cassette to avoid dust entering.

09

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.

10

11