


Quick Start Guide

HM-A300E

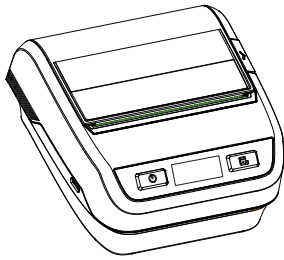

Manufacturer: Xiamen Hanin Electronic Technology Co.,Ltd.
Address: No.96, Rongyuan Road, Tong'an District, Xiamen, China
E-mail: support@hpert.com
Web: www.hpert.com

 
Packing List



Printer



USB Cable



AC Adapter



Battery Pack



Quick Start Guide




Roll Paper

⚠ **Note:** The items in the package are actually based on the order.


1

Appearance and Components


• Front View

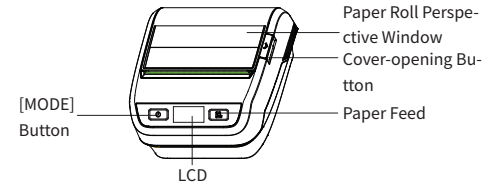

• Rear View

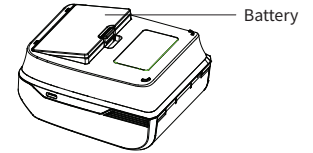


• Inside View

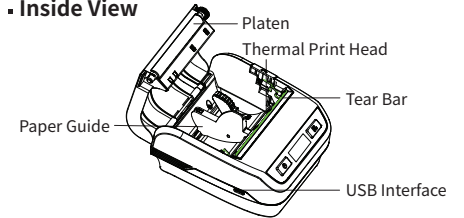


2

Loading Paper

1. Press the cover-opening button to open the paper cover.

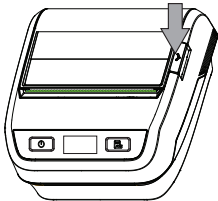


2. Unlock the paper guide as shown below.

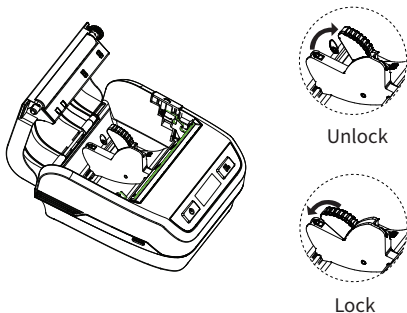


3

3. Load the paper in the orientation shown in the figure below. Make sure that the thermosensitive layer is facing down. Adjust the paper guide per the paper width. After adjusting, lock the paper guide.

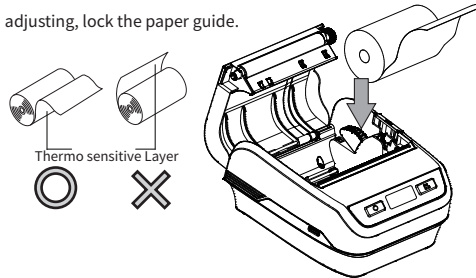


4. Pull some extra paper and close the cover. Make sure that it is closed on both sides.

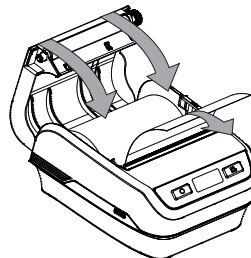

4


5. Use the tear bar to tear the extra paper.

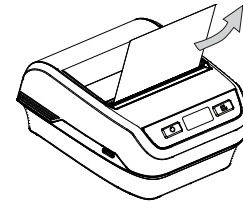


5

Battery Pack Installation

1. Make sure that the printer has been turned off before you insert or remove the battery pack.
2. Insert the battery pack into the back of the printer as in the figure shown below, following the direction of the arrow. Press down on the battery pack until the hook click into place.

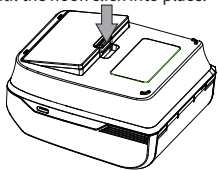

3. To remove the battery back, pull back the hook, and use the opposite procedure from the one you used to insert the battery pack.

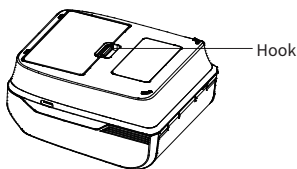

6

3. Press [MODE] button to change the option.

4. Press [FEED] button to change the category of suboption; press and hold [FEED] button to confirm the current setting.



Note:


- ◆ Before changing the menu setting, make sure that the communication with a host device is disconnected.
- ◆ When the printer is under the Bluetooth communication with a host device, it cannot enter the Menu Settings mode.

9

Battery Charging

Please charge the printer with the supplied USB cable.

When battery pack runs out of power, the battery icon on the LCD will flash. It powers off automatically when continues printing. If you want to go on, please charge it.

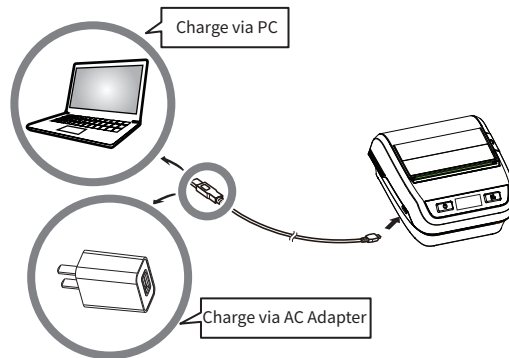

Note:

1. If the user replaces the wrong type of battery by himself, there will be explosion danger. Please be sure to send it back to the maintenance site according to the instructions to dispose of the used battery.
2. This is a Class A product. In a domestic environment this product may cause radio interference in which the user may be required to take adequate measures.

7

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

9

Menu Settings

1. Press and hold the [MODE] button for approx. 2 seconds, and printer is turned on.



[MODE] button

[FEED] button

2. Press and hold both [MODE] button and [FEED] button, the main menu is displayed on the screen, followed by:

Density: dark/ light/ medium

Paper: label/receipt/Front black mark 2 inches/

Front black mark 3 inches/Rear black mark 3 inches

Cover closing and paper feeding: off/on

Express: standard and so on

Standby time

Shutdown time

Rotate

Self-test page printing

Label positioning

Exit menu

8

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.