

Quick Start Guide

HM-E200




Manufacturer: Xiamen Hanin Electronic Technology Co.,Ltd.
 Address: No.96, Rongyuan Road, Tong'an District, Xiamen, China 361100
 E-mail: support@hpert.com




Company: E-CrossStu GmbH
 Address: Mainzer Landstr.69, Frankfurt am Main,
 Baden-Württemberg, Germany
 E-mail: E-CrossStu@web.de Tel: +49 69332967674

Appearance and Components


Front

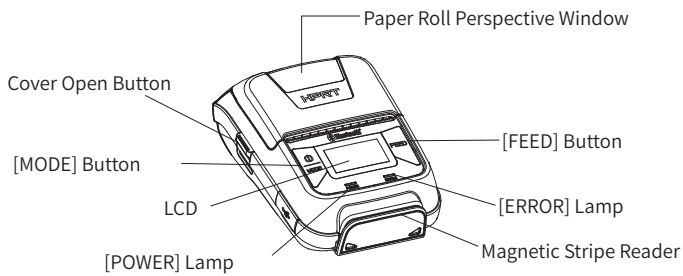

Rear

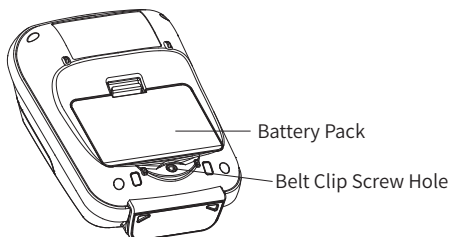

Inside

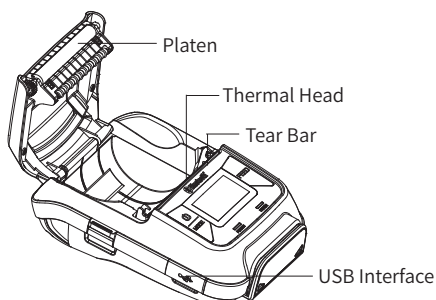

Packing List



 
Printer



USB Cable



Quick Start Guide




Battery Pack


NOTE: The items in the package are based on the order.

Paper Loading


1. Press the cover open button to open the paper cover.

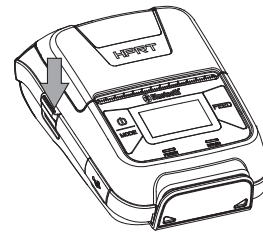


2. Load the roll paper in the orientation shown in the figure below.

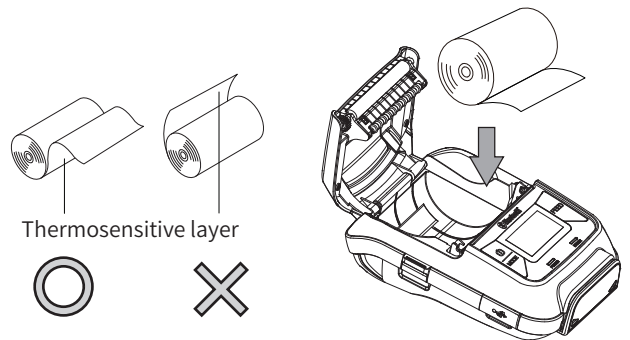

3. Pull the end of the roll straight toward you. Then press down on both sides of the printer cover to close it firmly. When you close the printer cover, make sure that it is closed on both sides.

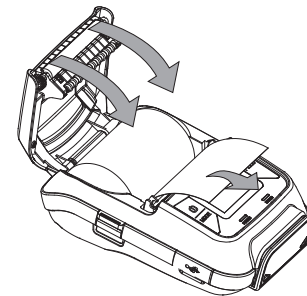


4. Use the tear bar to cut the extra paper.

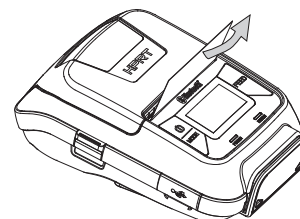


Battery Installation

1. Make sure that the printer has been turned off before you insert or remove the battery pack.
2. Insert the battery pack into the back of the printer as in the figure shown below, following the direction of the arrow. Press down on the battery pack until the hooks click into place.

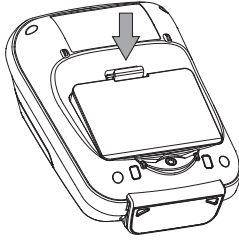


3. To remove the battery back, pull back the hook, and use the opposite procedure from the one you used to insert the battery pack.

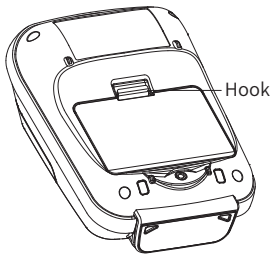

Battery Charging

Plug in socket with USB charging.

When battery pack runs out of power, the battery icon will flash. It powers off automatically when continues printing. If you want to go on, please charge it.

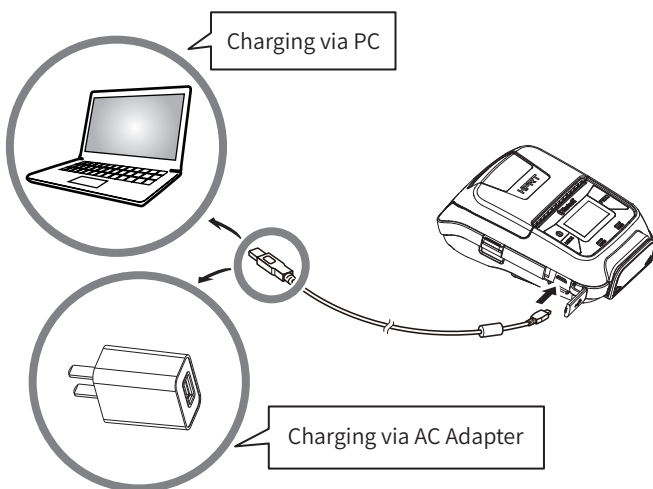


! NOTE

- ◆ POWER lamp will always flash in green color and goes off when fully charged.
- ◆ Charging the printer when it is on, even if battery icon on the LCD shows fully charged, turn off the printer and let the battery charge until the POWER lamp goes off for fully charge.

Menu Settings

1. Press and hold [MODE] button for approx. 2 seconds, and printer is turned on LCD display is shown as follows.

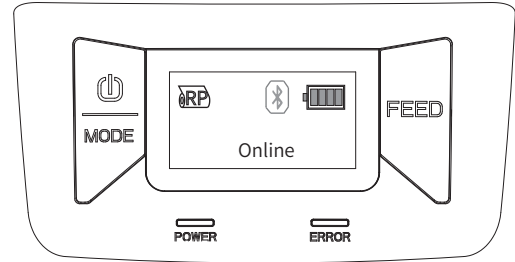

2. Press the [MODE] button and the [FEED] button, release the button to enter the main menu after the screen display "enter the setup mode".
3. Press the [MODE] button to switch options, or return to the previous menu.
4. Press the [FEED] button to move the cursor, or confirm the current setting.

! NOTE

- ◆ Before changing the menu settings, make sure that the communication with a host device is disconnected.
- ◆ When the printer is under the Bluetooth communication with a host device, it cannot enter the Menu Setting mode.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.