


Quick Start Guide HPL3D2304

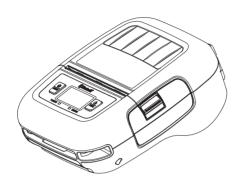


Xiamen Hanin Electronic Technology Co.,Ltd.


ADD: 5F, 10#, Aide Airport Industrial Park, Huli District, Xiamen, China

TEL: +86-(0)592-5932525 WEB: www.idprt.com


Appearance and Components

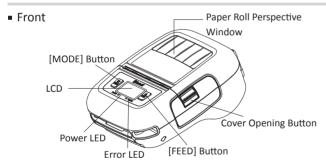


Back

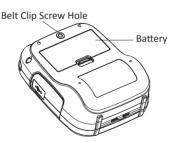

Inside

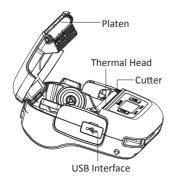

Packing List

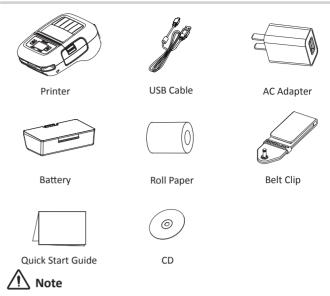

- 1. The packing items are actually based on the order.
- 2. The AC adapter varies by local or region.

FCC COMPLIANCE STATEMENT:
This device complies with part 15 of the FCC Rule
Operation is subject to the following two conditic
(1) This device may not cause harmful interferen
(2) this device must accept any interference received the operation of a control operation.

device must accept any internetnce receives, including an indesired operations are included in a class B digital device, pursuant to Part 15 of the FCC Rules. inits equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. initiats are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, d can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference.

he receiving antenna.

In betwien the equipment and receiver.

Int into an outlet on a circuit different from that to which the receiver is connected.

In into an outlet on a circuit different from that to which the receiver is connected.

In experienced radio/TV technician for help.


In odifications to this unit not expressly approved by the part responsible for compliance could void the user's a authority to the control of the control

Battery Installation

- 1. Make sure that the printer has been turned off before you insert or remove the battery pack.
- 2. Insert the battery pack into the back of the printer as the figure shown below, following the direction of the arrow. Press down on the battery pack until the hook click into place.



3. To remove the battery back, pull back the hook, and use the opposite procedure from the one you used to insert the battery pack.

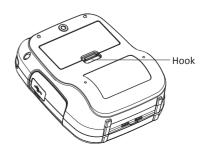


Paper Loading


1. Press the cover opening button to open the printer cover.



2. Load the roll paper in the orientation shown in the figure below.

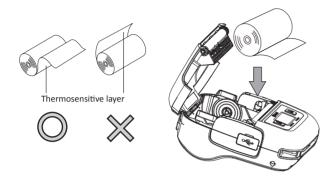

3. Pull the end of the roll straight toward you. Then press down on both sides of the printer cover to close it firmly. When you close the printer cover, make sure that it is closed on both sides.

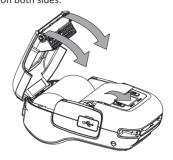

4. Use the tear bar to cut the extra paper.



Wi-Fi Settings


Printer Wi-Fi factory default is Off, and it needs to be turned on through menu before use. In AP mode, the IP address is "192.168.1.1", SSID is "T3PRO_AP-XXXX" (last four digits of Wi-Fi Mac address). If you need to change the Wi-Fi settings, please set it by the Utility tool.

Note: This setting is only available for the models with Wi-Fi.

Battery Charging

Plug in socket with USB charging.

When battery pack runs out of power, the battery icon will flash. It powers off automatically when continues printing. If you want to go on, please charge it.

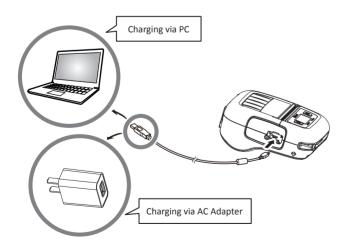

!\ Note

- ◆ POWER lamp will always flash in green color and goes off when fully charged.
- ◆ Charging the printer when it is on, even if battery icon on the LCD shows fully charged, turn off the printer and let the battery charge until the POWER lamp goes off for fully charge.

Menu Settings

1. Press and hold MODE button for approx. 2 seconds, and printer is turned on. LCD display is shown as follows.



- 2. Press and hold MODE & FEED buttons, release the buttons after you surely confirm the screen display"Enter Menu Mode", to get a printer into the setting mode.
- 3. Press the MODE button, choose the item or return to previous menu.
- 4. Press the FEED button, you can move the $cursor("_")$ or confirm the new setting.



- ◆ Before changing the menu setting, please make sure that the communication with a host device is disconnected.
- ◆ When the printer is under the Bluetooth communication with a host device, it cannot enter the Menu Setting mode.