 


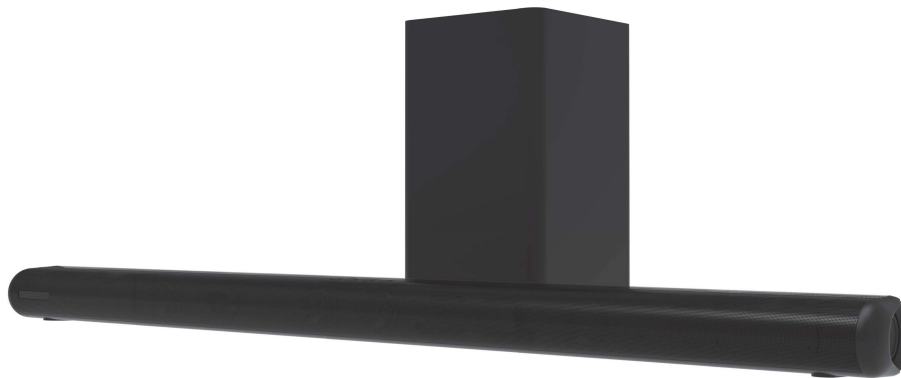

**ECLIPSE 5.1.2 SOUNDBAR + WIRELESS SUBWOOFER**  
USER MANUAL



 **Dolby Atmos**

COMPATIBLE WITH  
 **Dolby Vision**

COMPATIBLE WITH  
**HDR & HDR10+**



# Table Of Contents

<b>Section 1: Safety Instructions</b> .....	3
1.1 – Safety .....	3
1.2 – Warning .....	4
1.3 – FCC .....	5
1.4 – IC Warning.....	6
<b>Section 2: Box Contents</b> .....	7
<b>Section 3: Identifying the Parts</b> .....	8
3.1 – Main Unit .....	8
3.2 – Wireless Subwoofer .....	9
3.3 – Remote Control .....	9
<b>Section 4: Placement And Mounting</b> .....	10
<b>Section 5: Connections</b> .....	11
5.1 – Dolby Atmos® .....	11
5.2 – HDMI Connection .....	11
5.3 – Use the OPTICAL Socket .....	12
5.4 – Use the COAXIAL Socket .....	12
5.5 – Use the AUX Socket .....	13
5.6 – Connect Power .....	13
<b>Section 6: Pair up with the Subwoofer</b> .....	13
<b>Section 7: Basic Operation</b> .....	14
7.1 – Standby/On .....	14
7.2 – Select Input Source .....	14
7.3 – Adjust the Bass/Treble Level .....	14
7.4 – Adjust the Volume .....	14
7.5 – Adjust the Brightness .....	14
7.6 – Select Equalizer (EQ) Effect .....	14
7.6 – Select Equalizer (EQ) Effect .....	14
7.7 – AV SYNC (Set the Audio Delay) .....	14
<b>Section 8: Play for External Audio Devices</b> .....	14
<b>Section 9: Bluetooth Operation</b> .....	15
<b>Section 10: USB Operation</b> .....	15
<b>Section 11: Troubleshooting</b> .....	16
<b>Section 12: Specifications</b> .....	17

---

## 1. SAFETY INSTRUCTIONS




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### 1.1 Safety

- 1 Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- 2 Keep these instructions** – The safety and operating instructions should be retained for future reference.
- 3 Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- 4 Follow all instructions** – All operating and usage instructions should be followed.
- 5 Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
- 6 Clean only with a dry cloth.**
- 7 Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources** such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding plug.** A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched** particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.**
- 12**  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug the apparatus during lightning storms or when unused for long periods of time.**
- 14 Refer all servicing to qualified personnel.** Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15**  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 16 The apparatus shall not be exposed to dripping or splashing.** No objects filled with liquids, such as vases, shall be placed on the apparatus.
- 17 Minimum distance around the apparatus for sufficient ventilation is 5cm.**
- 18 The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.**
- 19 No naked flame sources, such as lighted candles, should be placed on the apparatus.**
- 20 Batteries should be recycled or disposed of as per state and local guidelines.**
- 21 The use of apparatus in moderate or tropical climates.**

### Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

### 1.2 Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.

#### **Battery usage CAUTION**

To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:

- Install all batteries correctly, + and - as marked on the apparatus.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Remove batteries when the unit is not used for a long time.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

We hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.



COMPATIBLE WITH

 **Dolby Vision**  **Dolby Atmos**

Dolby, Dolby Vision, Dolby Audio, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2021 Dolby Laboratories. All rights reserved.

---

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Radiation Exposure Statement

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Cet appareil est conforme à FCC et IC l'exposition aux rayonnements limites fixées pour un environnement non contrôlé. Cet appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps. Cet transmetteur ne doit pas être co-situé ou opérant en liaison avec toute autre antenne ou transmetteur. Des câbles blindés doivent être utilisés avec cet appareil pour assurer la conformité avec les limites de la classe B de la FCC. fonctionnement de l'appareil.

---

## IC WARNING

### English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

### French:

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. L'exploitation est autorisée aux deux conditions suivantes:

 
- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Cet appareil est conforme à FCC et IC l'exposition aux rayonnements limites fixées pour un environnement non contrôlé. Cet appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps. Cet transmetteur ne doit pas être co-situé ou opérant en liaison avec toute autre antenne ou transmetteur.


CAN ICES-3(B)/NMB-3(B)

---

## 2. BOX CONTENTS




Soundbar x 1

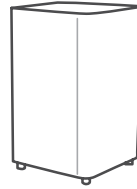 


Wireless Subwoofer x 1



 
AUX Cable x 1  
(3.5mm-3.5mm)

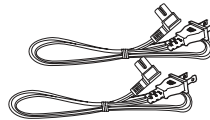

 AC Power Cord x 2  
\*Power cable types and numbers  
varied by regions

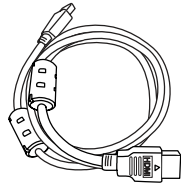


HDMI Cable x 1

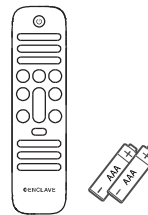 

Remote Control x 1  
(AAA Batteries x2)



 
Wall Mount Kit x 1  
(Wall Mounting Screws x2, Brackets x2,  
Bracket Screw x2, Wall Anchors x2)




User Manual x 1  
Images, illustrations and drawings shown  
on this User Manual are for reference  
only. Actual product may vary in appearance.

## 3. IDENTIFYING THE PARTS


 
### 3.1 Main Unit

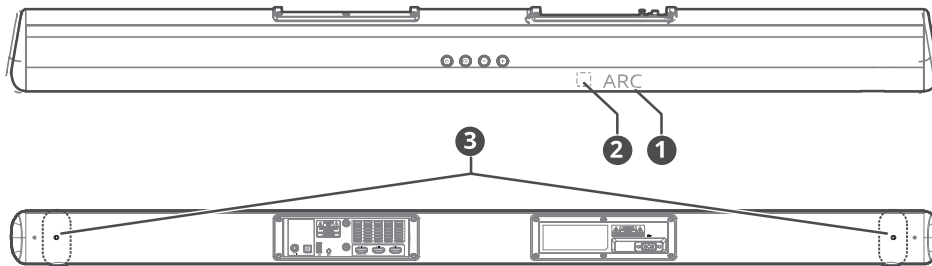

 - ① **Display Window**  
Show the current status.
- ② **Remote Control Sensor**  
Receive signal from the remote control.
- ③ **Screws**  
Install the wall mounting screws into the back of the unit.
- ④ **⏻ (ON/OFF) Button**  
Switch the unit between ON and Standby mode.
- ⑤ **⏮ (SOURCE) Button**  
Select the play function.
- ⑥ **+/- (Vol) Buttons**  
Increase/decrease the volume level.

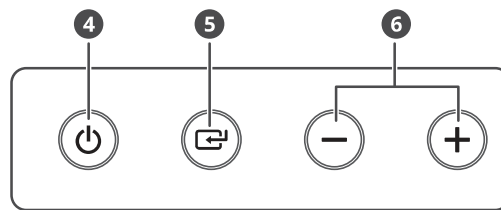


- ⑦ **AC~ Socket**  
Connect to power.
- ⑧ **COAXIAL Socket**  
Connect to a coaxial audio output on the TV.
- ⑨ **OPTICAL Socket**  
Connect to an optical audio output on the TV.
- ⑩ **USB Socket**  
Insert the USB device to play music.
- ⑪ **AUX Socket**  
Connect to an external audio device.
- ⑫ **HDMI OUT (TV eARC/ARC) Socket**  
The port for connecting a TV. The port supports the eARC/ARC HDMI feature, which allows the soundbar to play audio that originates on the connected TV.
- ⑬ **HDMI IN 1 / HDMI IN 2 Sockets**  
Two HDMI ports for connecting HDMI source devices, such as a DVD player, Blu-ray Disc™ player, or gaming console. Note that only one HDMI input is usable at a time.

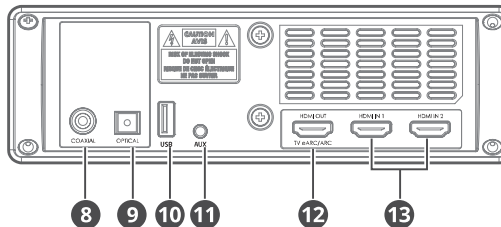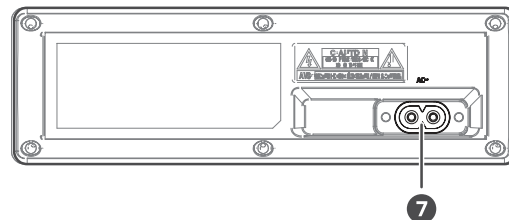  




### 3.2 Wireless Subwoofer

 - ① **AC~ Socket**  
Connect to power supply.
- ② **PAIR Button**  
Press activate the pairing function between the main unit and the subwoofer.
- ③ **PAIR Indicator**  
Light stops blinking once the Subwoofer is paired with the Soundbar.

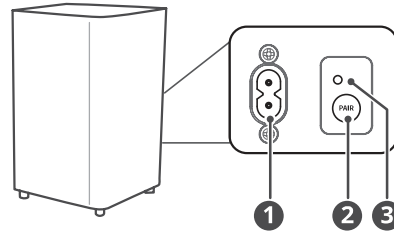

### 3.3 Remote Control

 ①		Switch the unit between ON and STANDBY mode.
②	<b>SOURCE</b>	Select your input source using these buttons.
③	<b>+/-</b>	Increase/decrease the volume level.
④	<b>BT</b>	Select the Bluetooth mode.
⑤	<b>BASS +/-</b>	Adjust bass level.
⑥	<b>TREBLE +/-</b>	Adjust treble level.
⑦		Mute or resume the sound.
⑧	<b>EQ</b>	Select Equalizer (EQ) Effect.
⑨		Skip to previous/next track in Bluetooth/USB mode.
⑩		Play/pause/resume playback in Bluetooth/USB mode.
⑪	<b>SURR VOL</b>	Controls surround effect volume.
⑫	<b>AV SYNC</b>	Adjusts for any lip sync issues.
⑬	<b>VERTICAL SURROUND</b>	Turn surround mode on or off.

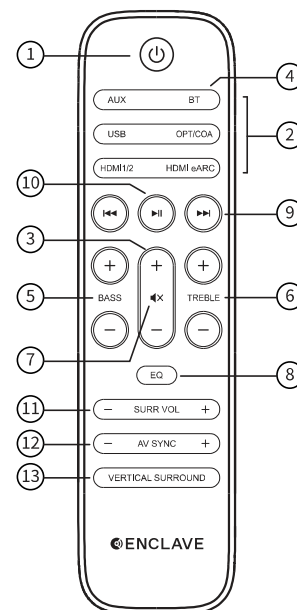


#### Prepare the Remote Control

The provided Remote Control allows the unit to be operated from a distance.

- Even if the Remote Control is operated within the effective range 19.7 feet (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

#### Replace the Remote Control Battery

 1. Press and slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries (included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
3. Close the battery compartment cover.

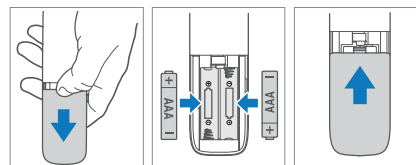

### Precautions Concerning Batteries

 
- Be sure to insert the batteries with correct positive “⊕” and negative “⊖” polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

---

## 4. PLACEMENT AND MOUNTING

### 4a. Placement

- A If your TV is placed on a table, you can place the unit on the table directly in front of the TV stand, centered with the TV screen.
- B If your TV is attached to a wall, you can mount the unit on the wall directly below the TV screen.

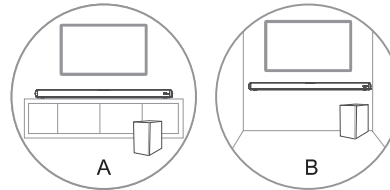

### 4b. Wall Mounting

 
#### WARNING

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height: < 1.5 meters

#### Note:

- Improper wall mounting may result in accident, injury or damage. If you have any query, contact Consumer Care in your country.
- Secure the wall mount to a wall that can support the combined weight of the product and the wall mount.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

1. Drill 4 parallel holes (Ø5.5-6mm each according to wall type) in the wall. The distance between the holes should be 1106 mm.
2. Firmly fix 1 dowel into each hole in the wall if necessary. Tighten the wall mount brackets on the wall with screws and screwdriver (not included). Make sure that they are securely installed.
3. Remove the screws at the back of the unit. Install the wall mounting screws into the back of the unit.
4. Lift the unit onto the wall mount brackets and slot into place.

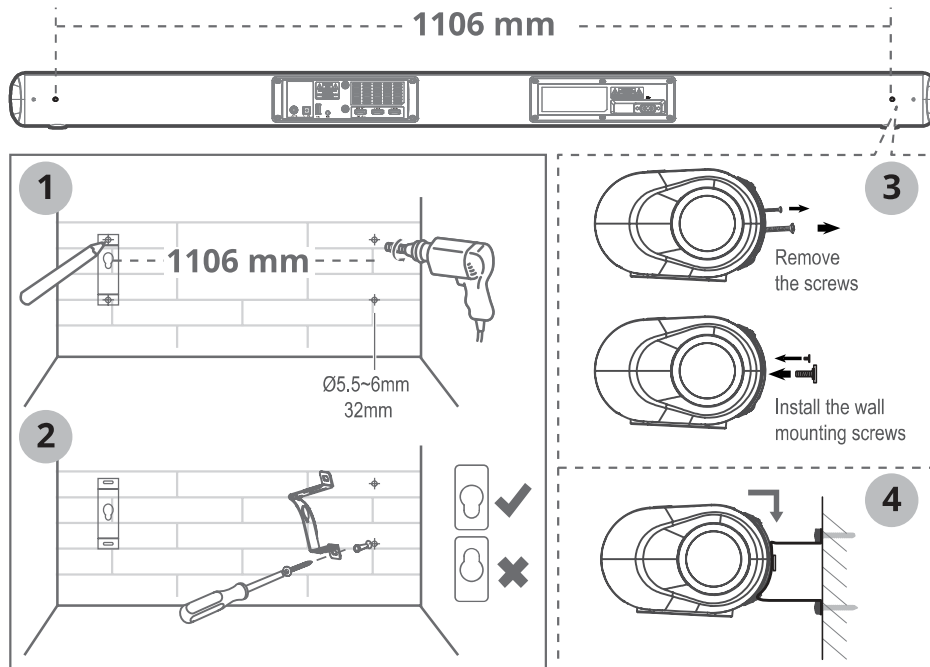

## 5. CONNECTIONS

### 5.1 Dolby Atmos®

Dolby Atmos gives you immersive listening experience by delivering sound in three dimensional space, and all the richness, clarity, and power of Dolby sound. For more information, please visit [dolby.com/technologies/dolby-atmos](http://dolby.com/technologies/dolby-atmos)

#### For using Dolby Atmos®

Dolby Atmos® is available only in HDMI mode. For the details of the connection, please refer to "HDMI Connection".

1. To use Dolby Atmos® in HDMI1, HDMI2 and HDMI ARC/eARC mode, your TV has to support Dolby Atmos®.
2. Make sure that "No Encoding" is selected for bitstream in the audio output of the connected external device (e.g. Blu-ray DVD player, TV etc.).

3. While entering Dolby Atmos / Dolby Digital / PCM format, the soundbar will show DOLBY ATMOS/ DOLBYAUDIO/ PCMAUDIO.

#### Tips:

- The full Dolby Atmos experience is only available when the Soundbar is connected to the source via a HDMI 2.0 cable.
- The Soundbar will still function when connected via other methods (such as a Digital Optical cable) but these are unable to support all of the Dolby features. Given this, our recommendation is to connect via HDMI, in order to ensure full Dolby support.

### 5.2 HDMI Connection

 
Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

Using HDMI to connect the soundbar, AV equipment and TV:

### Method 1: eARC (Audio Return Channel)

The eARC (Audio Return Channel) function allows you to send audio from your ARC-compliant TV to your soundbar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and MUTE) of the sound bar.

- Connect the HDMI cable (included) from unit's **HDMI OUT** socket to the HDMI (eARC) socket on your ARC compliant TV. Then press the remote control to select **HDMI eARC**.

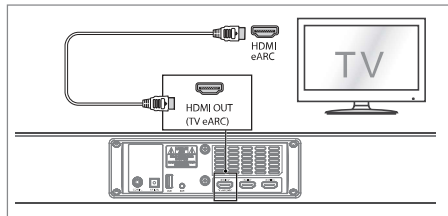


#### Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual.
- Only HDMI 1.4 or higher version cable can support the ARC function.


### Method 2: Standard HDMI

 - If your TV is not HDMI ARC-compliant, connect your soundbar to the TV through a standard HDMI connection.
1. Use an HDMI cable (included) to connect the soundbar's **HDMI OUT (TV eARC)** socket to the TV's HDMI IN socket.
  2. Use an HDMI cable (not included) to connect the soundbar's **HDMI IN (1 or 2)** socket to your external devices (e.g. games consoles, DVD players and blu-ray).

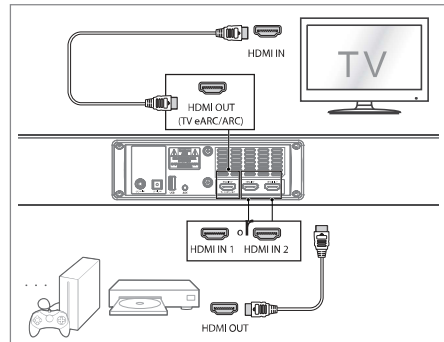


### 5.3 Use the OPTICAL Socket

 - Remove the protective cap of the **OPTICAL** socket, then connect an **OPTICAL** cable (not included) to the TV's **OPTICAL OUT** socket and the **OPTICAL** socket on the unit.

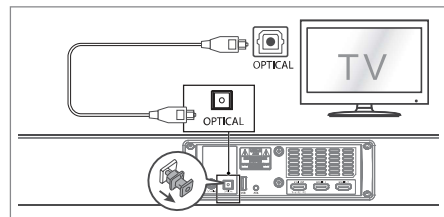

### 5.4 Use the COAXIAL Socket

 
- You also can use the **COAXIAL** cable (not included) to connect the TV's **COAXIAL OUT** socket and **COAXIAL** socket on the unit.

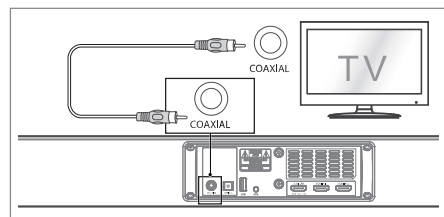

**Tip:** The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with **HDMI / OPTICAL / COAXIAL** input.

## 5.5 Use the AUX Socket

 - A. Use a 3.5mm to 3.5mm audio cable to connect the TV's or external audio device headphone socket to the AUX socket on the unit.

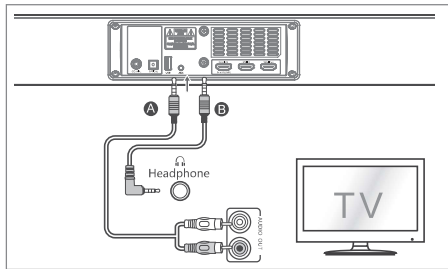

- B. Use a RCA to 3.5mm audio cable (not included) to connect the TV's audio output sockets to the AUX socket on the unit.

## 5.6 Connect Power

### Risk of product damage!

 
- Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.

### Subwoofer

- Connect the cable to the AC~ Socket of the subwoofer and then into a mains socket.

### Soundbar

- Connect the cable to the AC~ Socket of main unit and then into a mains socket.

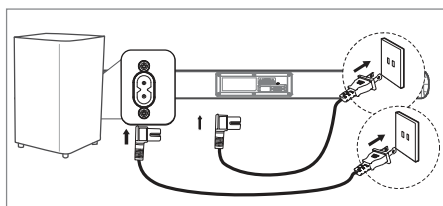

### NOTE:

- If there is no power, ensure the power cord and plug are fully inserted and the power is turned on.
- Power cord quantity and plug type vary by regions.

## 6. PAIR UP WITH THE SUBWOOFER

### 6.1 Automatic pairing

Plug the soundbar and the subwoofer into the mains sockets and then press on the unit or remote control to switch the unit to ON mode. The subwoofer and soundbar will automatically pair.

LED State	Status
Fast blink	Subwoofer in pairing mode
Slow blink	Connection / Pairing Failed
Constant on	Connected / Pairing successful

### NOTE:

- Do not press the **Pair** button on the subwoofer, except for manual pairing.
- If the automatic pairing fails, pair the subwoofer with the main unit manually.

### 6.2 Manual pairing

If no audio from the wireless subwoofer can be heard, manually pair up the subwoofer.

- 1 Unplug both units from the mains sockets again, then plug them in again after 3 minutes.
- 2 Press and hold the **PAIR** button on the subwoofer for a few seconds.
- 3 The Pair indicator on the subwoofer will rapidly blink.
- 4 Then press **⏻** on the unit or remote control to switch the unit **ON**.
- 5 The Pair indicator on the subwoofer will become solid when successful.
- 6 If the Pair indicator still keeps blinking, repeat step 1-3.

### NOTE:


- The subwoofer should be within 6 m of the soundbar in an open area (the closer the better).
- Remove any objects between the subwoofer and the soundbar.
- If the wireless connection fails again, check if there is a conflict or strong interference (e. g. interference from an electronic device) around the location. Remove these conflicts or strong interferences and repeat the above procedures.

---

## 7. BASIC OPERATION

### 7.1 Standby/ON


When you first connect the main unit to the mains socket, the main unit will be in Standby mode.

Press the  button on the unit or on the remote control to switch the unit ON or OFF (Standby).

- **Auto Wake**



If a TV or an external device is connected via HDMI ARC, the unit will switch on automatically when the TV or external device is switched on.

### 7.2 Select Input Source




 
Press the  (SOURCE) button repeatedly or the AUX, BT, OPT/COA, HDMI 1/2, HDMI eARC and USB buttons on the remote control to select the desired mode.

The selected mode will show on the display.

### 7.3 Adjust the Bass/Treble Level

- Press the **BASS**  buttons on the remote control to adjust bass level.
- Press the **TREBLE**  buttons on the remote control to adjust treble level.

### 7.4 Adjust the Volume

- Press the **VOL**  buttons on the unit or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the  (MUTE) button on the remote control. Press the  (MUTE) button again or press the **VOL**  buttons to resume normal listening.

### 7.5 Adjust the Brightness

- The display brightness will auto dim within 5 seconds of a detected operational change on the soundbar.

### 7.6 Select Equalizer (EQ) Effect



- While playing, press the **EQ** button on the remote control to select desired preset equalizers: **Standard, Movie, Music, News, Sport, Game, Night, Voice.**

### 7.7 AV SYNC (Set the Audio Delay)

- Video image processing, sometimes longer than the time required to process the audio signal. This is called “delayed.” Audio Delay feature is designed to remedy this delay.
- Press the AV SYNC+/- buttons on the remote control to adjust the delay time.
- AV00 ~ AV200 (By default, the audio delay is set to 00).

---

## 8. PLAY FOR EXTERNAL AUDIO DEVICES

- 1 Ensure that the unit is connected to the TV or audio device.
- 2 Press the  button repeatedly on the unit or the AUX, OPT/COA, HDMI 1/2, HDMI eARC buttons on the remote control to select the desired mode.
- 3 Operate your audio device directly for playback features.
- 4 Press the **VOL**  button to adjust the volume to your desired level.

**Tip:**

- The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with HDMI 1 / HDMI 2 / HDMI ARC / OPTICAL / COAXIAL input.
- In HDMI 1 / HDMI 2 / HDMI ARC/eARC mode, when entering DOLBY ATMOS audio format, the Soundbar display shows DOLBY ATMOS.
- When entering DOLBY DIGITAL audio format, the Soundbar display shows DOLBY AUDIO.
- When entering PCM audio format, the Soundbar display shows PCM AUDIO.
- When entering non-PCM or DOLBY DIGITAL audio formats, if there's no sound output from the unit, the display shows NONSUPPORT FORMAT.

---

## 9. BLUETOOTH OPERATION

The first time you connect your Bluetooth device to this player, you need to pair your device to this player.

### First time pairing

- 1 Switch the soundbar input to BT (Bluetooth). Allow 5-10 seconds for the soundbar to visible to your desired bluetooth audio source.
- 2 Activate your Bluetooth device and select the search mode. **ENCLAVE BAR** will appear on your Bluetooth device list.
- 3 Select **ENCLAVE BAR** in the pairing list. After successful pairing, you will hear "Paired" from the unit, and the display panel shows "BT\_IN".
- 4 Once your bluetooth audio device is paired with the soundbar, future connections can be established by simply going to your devices list of Bluetooth devices and selecting **ENCLAVE BAR** to connect back to the soundbar again.

### To disconnect the Bluetooth function, you can:

- Switch to another function on the unit.
- Disable the function from your Bluetooth device. The Bluetooth device will be disconnected from the unit after the "Disconnected" voice prompt.

#### Note:

- The operational range between the unit and the device is approximately 8 metres.
- Before connecting a Bluetooth device to the unit, ensure you know the device's capabilities.
- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between the device and the unit can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range.

### Listen to Music from Bluetooth device

If your Bluetooth device supports A2DP, play music via your device.

 
If your Bluetooth device supports AVRCP, use the supplied remote control to control play.


- To increase/decrease the volume, press **+/-** button.
- To pause/resume playback, press **▶||** button.
- To skip to a track, press **◀◀/▶▶** button.

---

## 10. USB OPERATION

- 1 Insert the USB device.

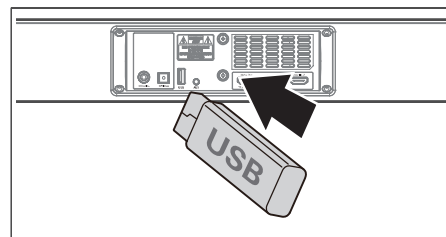

- 2 Press the  button repeatedly on the unit or the **USB** button on the remote control to select **USB** mode.
- 3 During playback:

- To pause/resume playback, press ►|| button.
- To skip to a track, press ◀◀/▶▶ button.

**Tips:**

- This product may not be compatible with certain types of USB storage devices.
- If you use a USB extension cable, USB hub, or USB Multifunctional card reader, the USB storage device may not be recognized.

- The subwoofer is out of range, please move the subwoofer closer to the soundbar. Make sure the subwoofer is within 5 m of the soundbar (the closer the better).
- The soundbar may have lost connection with the subwoofer. Re-pair the units by following the steps on the section “Pairing the Wireless Subwoofer with the Soundbar”.
- The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. device is not muted.

---

## 11. TROUBLESHOOTING

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

### No power

- Ensure that the AC cord of the apparatus is properly connected .
- Ensure that there is power at the AC outlet.
- Press ⏻ (standby) button to turn the unit on.

### Remote control does not work

- Before you press any playback control button, first select the correct source.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

### No sound

- Make sure that the unit is not muted. Press MUTE or VOL+/- button to resume normal listening.
- Press ⏻ on the unit or on the remote control to switch the soundbar to standby mode. Then press the ⏻ button again to switch the soundbar on.
- Unplug both the soundbar and the subwoofer from the socket, then plug them again. Switch on the soundbar.
- Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (e.g. HDMI, OPTICAL, COAXIAL) connection.

### TV has display problem while viewing HDR content from HDMI source.

- Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

### I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

### This is a 15 mins power off function, one of the ERPII standard requirement for saving power

- When the unit's external input signal level is too low, the unit will be turned off automatically in 15 minutes. Please increase the volume level of your external device.

### The subwoofer is idle or the indicator of subwoofer do not light up.

- Please unplug power cord from the mains socket, and plug it in again after 4 minutes to reset the subwoofer.



## 12. SPECIFICATIONS

Product	Enclave Eclipse 5.1.2 Soundbar
Model	EA-150-SB
<b>Soundbar</b>	
Power Supply	AC100-240V~ 50/60Hz
Power Consumption	80W
Power Consumption (Standby)	< 0.5W
Dimension (WxHxD)	1225 x 73 x 110 mm
Net Weight	4kg
USB	5V $\overline{=}$ 500mA Hi-Speed USB (2.0) / FAT32 / FAT16 32G (max), MP3
Audio Input Sensitivity	800mV
Frequency Response	120Hz - 20KHz
<b>Wireless Specification</b>	
Bluetooth Version	V5.1 (A2DP, AVRCP)
Bluetooth Maximum Power Transmitted	< 10dBm
Frequency Bands	2402 MHz ~ 2480 MHz
2.4G Wireless Maximum Power Transmitted	< 10dBm
2.4G Wireless Frequency Bands	2402MHz ~ 2480MHz
<b>Subwoofer</b>	
Power Supply	AC100-240V~ 50/60Hz
Power Consumption	80W
Power Consumption (Standby)	< 0.5W
Dimension (WxHxD)	240 x 420 x 240 mm
Net Weight	5.25kg
Frequency Response	40Hz - 120Hz
<b>Amplifier (Output Power)</b>	
Soundbar	25W x 6 + 50W (@10%THD)
Subwoofer	180W (@10%THD)
Total RMS Power	380W (@10%THD)
Maximum/Peak/Reference Power	760W
<b>Remote Control</b>	
Distance/Angle	6m / 30°
Battery type	AAA(1.5V x 2)

\* Specification subject to change without prior notice. Measured under specific conditions.

