 
 
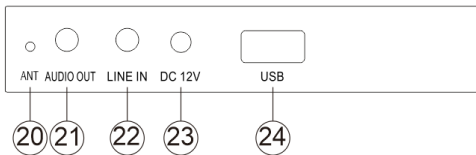 


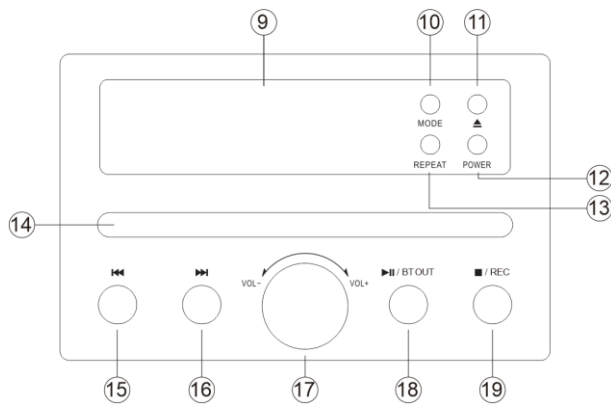 


- USER MANUAL -

Product Description

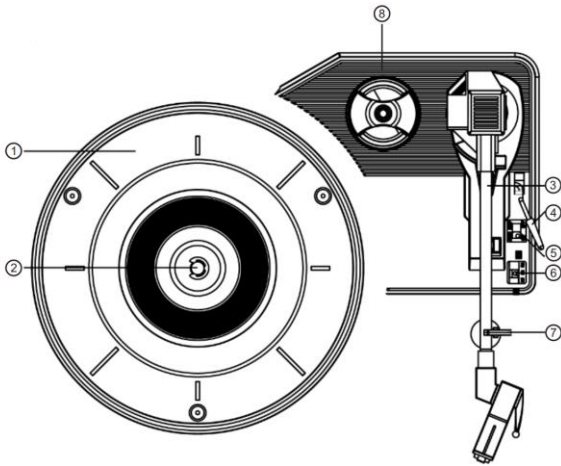

1. Turntable Platter
2. Turntable Shaft
3. Tonearm
4. Tonearm Lever
5. Auto-stop Switch
6. Speed Switch
7. Hold Down Clip
8. 45 RPM Adaptor
9. Display
10. Mode Key: Press to change the mode
11. Press to open the CD door
12. Power Key: Press to turn on the unit
13. REPEAT: In CD/USB mode, press "REPEAT" for the first time will repeat current playing. Press "REPEAT" twice will repeat the whole disc. Press "REPEAT" for three times will cancel repeat function.
14. CD Door
15. ◀◀
In USB/CD/Bluetooth mode: Previous section.
In FM mode: Previous station.
16. ▶▶
In USB/SD/CD/Bluetooth mode: Next section.
In FM mode: Next station.
17. Volume Knob
18. ▶|| /BT OUT
In USB/CD/Bluetooth mode: Play/Pause.
In FM mode: Automatically searching station.
In PHONO mode: Long press this key to transmit record playing on the unit to external Bluetooth receivers. Long press this key again to turn off the "Bluetooth Out" function. The connection between the unit and Bluetooth receivers will be disconnected.
19. ■ / REC
In USB/CD mode: When press this key for the first time, the player will stop playing. Press "▶||" this button will continue to play from current music. When press the this key twice, the player will enter stop state. Press "▶||" this button will start from first song and play in sequence.
In PHONO mode: Press this key to record the playing music from record disc during the Phono mode after inserting a USB flash stick to the USB port. And then press this key again to stop the recording and replay the record track. To delete the recorded track, please long press this key during it is playing (Note: The record function cannot work in the Bluetooth Out status .
20. FM Antenna (fixed)
21. Audio Output Jack
22. Line input jack (connect another audio output device or mobile phone)
23. DC 12V power input jack
24. USB input jack (for music playback/record)

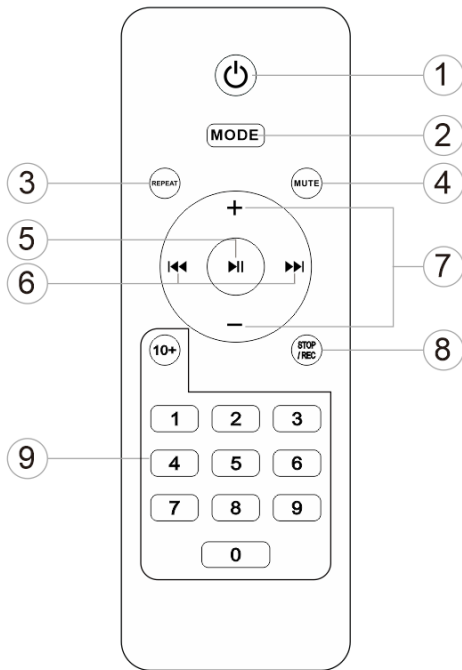

1. Power Key

2. Mode Key: : Press to change the mode

3. REPEAT: In CD/USB mode, press “REPEAT” for the first time will repeat current playing. Press “REPEAT” twice will repeat the whole disc. Press “REPEAT” for three times will cancel repeat function.

4. MUTE Key

5. ►||

In USB/CD/Bluetooth mode: Play/Pause.

In FM mode: Automatically searching station.

In PHONO mode: Long press this key to transmit record playing on the unit to external Bluetooth receivers. Long press this key again to turn off the “Bluetooth Out” function. The connection between the unit and Bluetooth receivers will be disconnected.

6. ◀◀/▶▶ :

In USB/CD/Bluetooth mode: Press this key to previous/next section

In FM mode: Press this key to previous/next station

7. Volume Key: Press to turn up/down volume. (Note: There is no function on AUX mode)

8. STOP/REC

In USB/CD mode:

When press the key for the first time, the player will stop playing. Press Play/Pause key will continue to play from current music.

When press the key twice, the player will enter stop state. Press Press Play/Pause key will start from first song and play in sequence.

In PHONO mode:

Press this key to record the playing music from record disc during the Phono mode after inserting a USB flash stick to the USB port. And then press this key again to stop the recording and replay the record track. To delete the recorded track, please long press this key during the recorded track is playing (Note: The record function cannot work in the Bluetooth Out state .

9. Number Key

For CD disc,

(1) To appoint 1-9 tracks, press the corresponding number keys (1-9)

(2) To appoint 10 track, press the number key (0)

(3) To appoint 10+ tracks, press the number key (10+). For example: the 15th song, press number key (10+) and (5).

(4) To appoint 20+ tracks, press the number key (10+) for twice. For example: the 25th song, press number key (10+) for twice time and press number key (5). If the track does not exist, the key is invalid.

For MP3 disc, press the number keys to select the tracks.

For example, the 38th song, press the number key (3) and number key (8).

Essential Set up

1. Install the long legs to brackets at the bottom of the unit properly. Make sure the unit stands firmly.

2. Place the speakers on a flat and level surface. The selected location should be stable and free from vibration.

3. Plug the power cord to unit firstly and then plug the adapter to wall power outlet.

General Operation

CD

1. Press mode button to enter CD mode.
2. Press the ▲ button to open the CD door.
3. place a CD in the disc tray with the label facing up and press the button to close the CD door.
4. Use the controls on the unit or the remote to begin playing the loaded disc.

BLUETOOTH In

- The first time you use your Bluetooth device with this player, you will need to connect or “pair” it with the player first.
- Switch to the Bluetooth model, then use Bluetooth device to search the “**VICTOR VW3500**” pairing.
- There will be a prompt sound after the successful pairing.
- If the pairing device is disconnected, the unit will also issue a prompt sound.

USB

-Connect your USB stick (not included) to the USB socket for music playback.

-Record the record track in music to USB flash stick during the PHONO mode.

- 1.You can record the playing music from Phono record into the USB flash stick
- 2.Insert a USB flash stick to the USB port during the PHONO mode.
- 3.Short press the “STOP/REC” key on the unit or remote during the Phono record is playing.
4. Short Press “STOP/REC” key again to stop the recording and replay the recorded track
- 5.To delete the recorded track, long press the “STOP/REC” key during it is playing

FM

When you switch the unit to the radio mode, you can listen to the FM radio program in this mode.

1. This radio antenna is on the back of the machine. When you need to listen to radio, please open the FM antenna.
2. In FM mode, press the ►|| on the unit or remote control to automatically search station. It will save the station once searching completed.
- 3.Press the ◀◀ or ▶▶ on the unit or remote control to select station.

LINE IN

Switching to **LINE IN** mode, use 3.5mm audio cable(not included) to connect player with other audio output devices (such as mobile phone, computer, etc)

Turntable Operation

1. Rotate the knob to the PHONO mode. The mode indicator will be Red.
2. Select the desired speed (33-1/3, 45, 78) and place the record on the platter.
(Remark: When playing a 45 RPM record, please use the 45 RPM adapter.)
3. Remove the stylus protector from the stylus. Release the tone arm from the tone arm clip.
4. Use the tonearm lever to raise the tonearm. Move the tonearm gently to desired position over the record. Push the lift lever again to descend the tonearm slowly onto the desired position on the record to start playing.
5. When the record is finished playback, push the tonearm lever again to lift up the tonearm. And return the tonearm to the arm rest.
Use the tonearm lever to descend the tonearm.

Remark:

- 1.When the Auto stop switch is “ON”, the record will stop automatically when finished. When the Auto stop switch is “OFF”, the record

will not stop automatically when finished.

2. Do not touch the stylus tip by fingers.

Bluetooth Out

This function can transmit the record playing on the unit to external Bluetooth speaker/headphone by Bluetooth wireless connection during the PHONO mode.

1. During the Phono mode, long press the “▶|| / BT Out” key on the unit or “▶||” key on the remote to enter Bluetooth pairing status.
2. Turn on the external Bluetooth receiver device (i.e Bluetooth Speaker or Bluetooth Headphone) and entering the pairing mode.
3. The turntable unit and external Bluetooth receiver will connect automatically. This process can take up to approx. 30-45 seconds. (Remark: Place the Bluetooth receiver device within 1m of the unit to connect properly.)
4. Once turntable unit is successfully connected with the external Bluetooth speakers, you will hear a short confirmation sound from the speakers.
5. Select the desired speed (331/3, 45, 78) and place the record on the platter. The music will be heard from the external Bluetooth speaker/headphone. In this case, the unit is automatically activated in silent mode.
6. If want to turn off “BT Out” function, long press the “▶|| / BT Out” key on the unit or “▶||” key on the remote again, the Bluetooth connection between unit and Bluetooth receivers will be disconnected.

Remark: “Bluetooth Out” only work with record playback. “Bluetooth Out” cannot work in Bluetooth IN/LINE IN/USB/CD/FM function mode.

Audio Out Operation

The audio Jacks output analog line-level signals and could be connected directly with a pair of active/powered speakers or the appropriate input of your stereo system.

Note: The Audio Jacks are not designed to be connected directly to the passive/unpowered speakers. If connected to the passive speakers, the volume level will be very low.

Trouble Shooting

Problem	Solution
There is no power	-Power cord is not properly connected. -No power at the power outlet.
There is no sound from the speakers	-The speaker jack is not properly connected.
The speakers could not be connected to my Bluetooth device	-The device's Bluetooth function is not turned on. -The speakers are actively connected to another Bluetooth device.
The turntable speaker stop before the record is finished.	-Adjust the Auto-stop switch to “OFF” position.
In “Bluetooth Out” function, the unit and bluetooth receiver do not connect successfully	-Turn the unit and Bluetooth receiver off. Follow the pairing step again from the beginning. -Check whether the turntable unit connect with another Bluetooth receiver.
Don't play disc	1.To check whether the disc is put in the proper direction. 2.To check whether there is disc in the tray. 3.The disc is dirty. Please clean the disc.
Button does not work	It may be caused by the power wave or other abnormality, please turn off the power and turn it on again after 10seconds.

FCC:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

IC:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L' appareil ne doit pas produire de brouillage;
- (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.