

USER'S GUIDANCE

(Model: LD1)

For better using the Smart phone, please refer to this guidance.

Only use the standard charger and data line, the unauthorized charger or data line could lead to exposure.

When the power is low, the phone will warn. If the power is over low, the phone will shut down and you can use it until it is charged.

Travel Charger

Insert the charger's small side into the multi-function connector. Abnormal usage of the travel charger will damage the phone and this situation is out of guarantee terms. Insert the big side of the charger into the POWER JACK. You can use the phone when it is charging, but this will last the charging time. The phone will be hot when charged, which is normal and won't affect phone's life and performance. When the device is charged fully, disconnect the phone from the charger. Do not take out the battery before disconnect the charger, which will damage the phone.

Charge with USB

Connect the device to the PC's USB connector and it will charge after a moment. When it is charged fully(The battery icon does not scroll.), take off the USB cable.

Insert SD card

If you want to store other media files, you can use the SD card or insert new storage card. The storage card only supports FAT file structure, if you use the storage card with other file structures, the phone will force you to format the storage card. Frequent use of the storage card will shorten its life. After inserting the storage card, the menu of the card will be put in the file manager.

Touch screen

Touch screen help you with selecting and playing the phone.

Notice

Do not scratch touch screen. Do not put the phone near other electronic devices, which sometimes will make the touch function failed. Do not touch water. In the humid or water, touch screen will be damaged. For better use the phone, please tear off the screen protector. Click: Click one time to select and start apps Press: Press one item for 2 seconds to pop up the list. Scroll: Drag the items in the list with fingers. Double Click: Double click picture or webpage to magnify or zoom out. If the phone is laid aside for a long time, the screen will be locked automatically and please press POWER button to wake up it. You can also adjust background light. In the standby mode, open App list, then Settings→Display→Sleep.

Lock or unlock screen and buttons

You can lock screen and buttons for useless operations. Press POWER button to lock the screen and unlock the screen according to the notice on it.

Standby Function

You can check the status of the phones and visit the applications in standby screen. There are 5 interface and you can slide from left to the right or the other side to choose the interface you want to visit.

Lock SIM or USIM card

You can lock the phone according the PIN code of the SIM or USIM card. In the standby mode, open the App list, then select Settings→Security→Set up SIM card lock→Lock SIM card Put in PIN code to assure. If you start PIN code lock, you need to input PIN code when you start the device. If the PIN code is iput wrong for 3 times, SIM card or USIM card will be locked and then you need to input PUK to unlock SIM card or USIM card. If the SIM or USIM card is lock owing to wrong PUK code, please take the device to the operator center to unlock.

Email

Setting personal or company's e-mail account to receive or send e-mails. In the standby mode, choose Email in App, choose account type and put in your Email address and code. Next(Normal Email account) or manual setting(other Email) and then operate according to the notice of the phone .

File manager Notice:

- 1.Do not delete or move system files;
- 2.Please install the APK files in the SD card, or the phone probably will be frozen or restart. Music Enjoy your favorite music.

Flow

Check up the flow use rate

More

Set up flight mode, VPN, Tethering and portable hotpots settings, Mobile networks, GPRS APNs.

Profiles

Set up ring tone, SMS tone and volume etc.

Display

Set up main theme, screen lock style, brightness, wallpaper, auto-rotate, sleepy time, font of SMS and contactors and horizontal calibration etc.

Storage

Check up the storage situation on the phone and format the storage

Battery

Display the usage situation of the battery

Applications

Change the installed applications

Accessibility

Open the Power key and you can end the calls by pressing power key.

Development

Set for developers.

About phone

Check up the information and status of the phone.

Recorder

Keep your vocal recordings and choose the storage positions

Downloads

Manage the files downloaded from browser. This application can support all the videos which supported by this phone. Wireless devices You can connect wireless keyboard

CAN'T CALL OUT

Please make sure you have pressed Call button after put in phone number. Please confirm if you are forbidden to call out as owing fee. Please check if the SIM card is available. Please check if it sets Call Barring. Please check if it sets Fixed Dialing.

POOR QUALITY OF CALLING

Please check the volume. Calling with the phone in the place where signal is not good, such as tall buildings or basement where wireless wave cannot reach effectively. Calling during the rush hours.

CAN'T BE REACHED

Please make sure that the phone is on and connected to the network. Please make sure if the number is owing fee or not. Please confirm if the SIM card is available. Please check if it sets Call Barring.

CAN'T HEAR YOU

Please make sure that the Microphone is on and keep the Microphone near your mouth.

Safety notice

To use the phone effectively and safely, please refer to the following information before usage.

Start

Please follow the instruction of the poster warning and authorization party when it is used in the ban wireless equipment area If you want to use the non internet service, please switch to the

airplane mode. Please press the power button and then select Airplane mode

Transportation safety

For safety reasons ,Please do not talk via phone when you are driving Power off in restricted area Please obey the related regulations and rules, turn off your machine while you are surrounded by Inflammable goods, chemicals or medical equipment.

Interference

Please be noted that the mobile communication might be interfered by radio interference, and it would affect the performance.

Waterproof

Please be noted that this phone are not waterproof, please keep it in dry Far away from kids Phone PC and all of its parts (including accessories) should be placed in the place where children can't get access to.

Accessories and battery

Please use the battery and charger which is designated by our company, or else it could cause explosion

Professional service

Please do not disassemble the phone and its accessories, only authorized instruction repair this phone

Install SIM or USIM and Battery

When you order the mobile services, you will receive a subscriber identification model (SIM) card, in which you will have your detailed order information, for example Personal Identification Number, Optional service. If you want to use UMTS or HSDPA, please buy the general USIM card. Install SIM , USIM card ,battery :If the phone is started, please hold the power button for long and select power off and shut it down. Get rid of the rear cover, please be careful and not hurt your nails and yourself when you operate

Insert SIM card or USIM card

Insert in to the phone with the SIM card or USIM with the golden surface facing down If SIM or USIM card not inserted ,then only the non internet service and partial function can be used Please do not insert the memory card into card slot 3. Put back the rear cover

Charge

Before you use the phone for the first time, you must charge the battery .You can use the travel charger and charge the phone via data line connected to PC.

Take off the rear cover

Put the card in the right position with right way and then put back the cover. Please do not take out the storage card when the phone is transferring data or reading information, which will damage the

phone and the storage card.

Format SD card

Please format the TF card in the phone only. In the standby mode, select App→Settings→Storage→Format SD card Before format, please backup all the important data.

Power on and off

Long press the Power button to power on. Long press the Power button, and then choose Power off. Please obey the rules and warnings in the district forbidden wireless device(such as in hospital or on the air). Please exchange to flight mode if you want to use the phone without network. Long press the power button and then select flight mode. Connect USB devices: Connect U disk and card reader via exchanger. Connect the U disk or the card reader to the phone via the exchanger. Connected successfully, enter into file manager and find external USB storage. You can visit the data in it: pictures, musics and videos. Uninstall external USB: Settings→Storage→external USB→Uninstall USB and then confirm to uninstall it.

Wallpaper

Set the wallpaper as the standby or screen-lock interface. Wallpaper: Set background wallpaper Live wallpaper: Set live wallpaper Video wallpaper: Set video wallpaper Gallery: Set the background picture from gallery Move items from standby interface Click the item and press it, then move it when the phones vibrates. Remove items from the standby interface Click and press the item, there will be trash can in the app zone icon when it vibrates. Then move the item to the trash can and when the item becomes red, release it. Shortcuts interface In the standby mode or running the application, draw the status bar in the top of the screen down to open the shortcuts interface. In the shortcuts interface, press shortcuts icons and slide from left to the right, you can use the following options: Standby: Adjust the delay time to automatically shuttle down the screen Auto rotation: On or off the auto rotation function GPS: On or off the GPS WLAN: On or off WLAN Bluetooth: On or off Bluetooth function Flight mode: On or off flight mode Settings: Enter into setting interface

Add music

Download via wireless Web Copy with USB cable Transfer by Bluetooth

Camera

In the standby mode, you can use camera from App.

Video

Check up, delete and sorts the video files.

Gallery

Check up the saved pictures in the phones or SD card and play the videos in the gallery.

SIM management

You can choose to close or open SIM card; choose SIM card supporting video chat; choose open

or close international roaming and check up the SIM card applications.

WLAN

Set WLAN, Network notice and add new networks

Bluetooth

Set Bluetooth, search for Bluetooth device and correct Bluetooth name

Accounts and sync

Change the sync functions and manage the sync accounts

Location and security

Check up the applications' positions via wireless network

Privacy

Set up kinds of code to protect phone. Notice: Original PIN code is 1234

Language and keyboard

Select language, keyboard and input method

Reset

Factory data reset will clear all the data in the phone, be cautious.

Time and date

Set the time and date of the phone.

Auto power on and off

Set the time to power on and off the phone

TROUBLE SHOOTINGS

CAN'T START PHONE

Press POWER button at least for 1 second Check up the battery connection, please move the battery and then restart it Check up the capacity of the battery

START PHONE AND NOTICE

Put in phone code before using it Put in PIN code Put in PUK code

SIM CARD ERROR

There is dirty in the SIM card, please wipe the metal contacts on the SIM card. The SIM card is not installed properly, please install the SIM card according to the User's Guidance. SIM card is damaged, please contact the Network operator.

CAN'T CONNECT TO NETWORKS

Poor signal, please try it again in the place that signal is strong. Out of the network covering region of the Network operator. The SIM card is unavailable, please contact the Network operator.

SHORT STANDBY

Standby time relates to the net settings, the device is possibly in bad signal. When the device cannot receive signal, the device will search for the signal station continuously, which consumes much battery. Please move to the place that signal is good or shut up your device. There is problem with the battery, please change the battery.

CAN'T BE CHARGED

Poor connect, check if the charger connection. Much dirty, wipe the device and the connector with clean and soft cloth. Charging under 0°C or above 40°C, please change the charging environment. Damage of the battery or charger, change it. If the above information cannot help you with the trouble, please record the model number, serial number and guarantee information of the Phone and the detailed discription of the problems you meet, then contact the local service or distributor.

FCC ID: 2AUWY-LD1

FCC Statement

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to user.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This device was tested for typical body-worn operations with the back of the handset kept 5mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 5mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 5mm for body worn must be maintained between the user's body, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.