



# Wi-Fi repeater DSGW-072

INSTRUCTION MANUAL

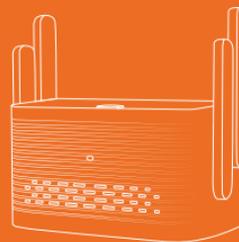

Dusun

## Product List

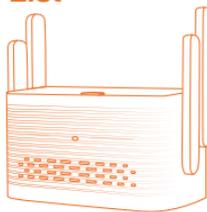

Wi-Fi Repeater



UK Standard Power Adapter



AU Standard Power Adapter




US Standard Power Adapter



EU Standard Power Adapter

## Introduce

It's a 1200Mbps Wi-Fi range extender. It can boost your existing Wi-Fi coverage to deliver fast and reliable wired and wireless connectivity. It can work with any router. It also supports AP mode which creates a new Wi-Fi access point.

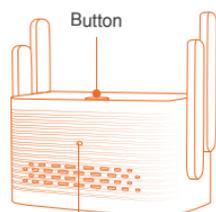

Button


Indicator LEDs

## Indicator Description

Red light is always on	Link being started or broken to higher level
Green light is always on	The uplink connection is normal
Green light flashing	Factory settings are being restored
Red light flashing	Firmware being upgraded
Red and green lights flashing together	WPS in progress

## Steps to use

1. Power up the extender and the indicator light will always be red, wait a few moments and then the extender will be fully started.



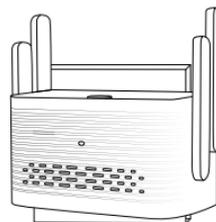


MAC:20AE7B123456  
Input AC 100~240V 50/60HZ

Wi-Fi SSID: Dusun-2.4G-xxxx/Dusun-5G-xxxx (xxxx is the last 4 number of the MAC Address)  
Password:12345678

Default setting:dslogin.net  
User:root  
Password:(None)

MADE IN CHINA  
FCC CE RoHS

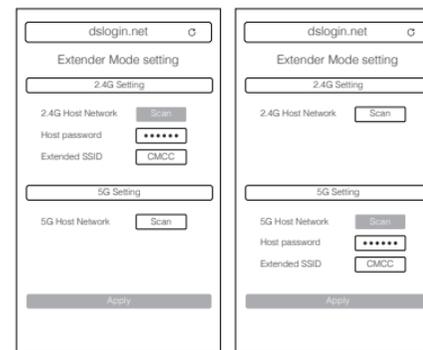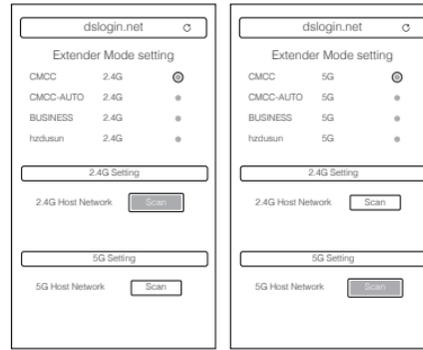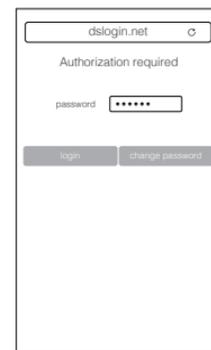

## Basic Parameters

Project	Specification Description
Model	DSGW-072
Power supply	Input:100V~240V AC/50~60HZ
Plug Type	EU,UK,US,AU
Interface	1x10x100M Ethernet Port(RJ45)
Indicator LEDs	Two-color LED
Button	WPS and Reset function
Power Consumption	7.5W
Antenna	4 x external
Dimension	86mm(W)x57mm(D)x45mm(H)
Weight	About 126g

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 --Reorient or relocate the receiving antenna.  
 --Increase the separation between the device and receiver.  
 --Connect the device into an outlet on a circuit different from that to which the receiver is connected.  
 --Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

## FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

6. If you need to extend both 2.4G and 5G Wi-Fi, you need to select both the extended 2.4G and 5G networks and apply them.

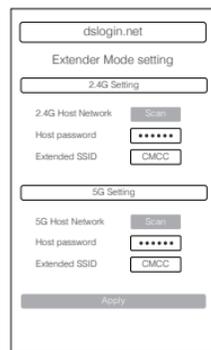

## Work Mode

The extender supports 2 modes, AP mode and extender mode.

### AP Mode

When DSGW-072 works in AP Mode, it turns Ethernet port your own personal Wi-Fi hotspot to create a new network.




### Extender Mode

It connects to the router, and extends the Wi-Fi.



## WPS Buttons

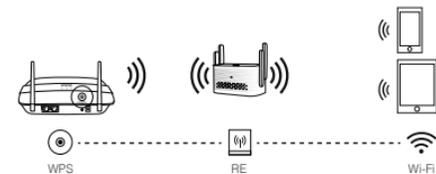

Press the WPS button of the superior AP, and then press the WPS button of this device. The LED light of this device starts flashing red and green together, when the red and green light starts flashing fast, it means it is connecting to 2.4G band Wi-Fi, when the red and green light flashes slowly, it means it is connecting to 5G band Wi-Fi, after the flashing is finished, the configuration is finished (after the WPS configuration is finished, the device is in extender mode).

## Note

- Red light flashes during startup, red light is always on when startup is complete. When connected to an external network, the light turns green.
- The WPS or restore factory button is only valid after the system has finished booting (not when the red light is flashing). Also in AP mode, if the phone is connected to the device without a network cable, if dslogin.net does not work (some browsers will not try to connect with the domain name after detecting that the Wi-Fi cannot be connected to the external network), you can use 192.168.85.1 to log in.

## Login

The factory default is AP mode, the 2.4G SSID is Dusun-2.4G-xxxx, 5G SSID is Dusun-5G-xxxx, xxxx is the last four values of the device's MAC address. The password is 12345678

Using the PC and mobile phone connect to the extender via Wi-Fi. Launch a web browser and type <http://dslogin.net> into the URL field. Username is root and no password

## Reset

Press and hold the reset button for 10s, the device resets. Green LED flashing.