гealme

realme Buds Q2

Getting Started Guide

This guide contains important information, please read it carefully before using the product

USE TOGETHER WITH realme LINK

- realme Link can provide more function settings for realme
- Search realme Link in the app store or scan the following QR code to download and install the realme Link APP





2. Put the earbuds into the ear canal and rotate it left and right until your ear feels comfortable.

Wear the earbuds (the schematic

diagram shows the right earbud)

1. Keep the earbud tips inclined

TIPS FOR USE



Instructions for touch control 1. Please try to use your finger pulp

- with a large area to touch the touch
- 2. The success rate of touch recognition can be improved by properly increasing the strength of the finger pulp touch on the touch





Riaht

PACKING LIST

Earbud:






PRODUCT INTRODUCTION

1. Charging box

- 2. Indicator lamp 3. Multi-function key
- 4. Type-C charging port
- 5. Call microphone
- 6. Farbud touch area
- 7. Noise reduction microphone
- 8. Charging contact
- 9. Back tone hole

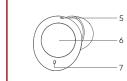

INSTRUCTIONS FOR USE

First use

Open the cover of the charging box, keep the earbuds in the charging box, and they will automatically enter the pairing state; touch "realme Buds Q2" in the Bluetooth list

- 1. Open the cover of the charging box, and the earbuds will be turned on automatically and reconnected to the
- 2. When the earbuds are off, put them in the charging box and they will be turned on immediately

Shut down

- . If the earbuds in the pairing state fail to be connected to other device within 30 minutes, they will be turned off
- 2. If the earbuds are beyond the effective distance of Bluetooth and fail to be reconnected within 30 minutes they will be automatically turned off.

Bluetooth pairing

Keep the earbuds in the charging box, press and hold the multifunction key for 3s to enter the pairing mode.

After the two earbuds are put in the charging box, close the cover of the charging box, and the earbuds will be immediately disconnected from the mobile phone and enter standby state for charaina.

INSTRUCTIONS FOR USE -

Charging of charging box

Please use the Type-C cable provided with the product for charging. If the indicator lamp is on after the cable is inserted, it indicates that the charging box has entered the charging state. Charging: The indicator lamp flashes

Fully charged: The indicator lamp is normally on

Touch operations

- 1. Touch: Answer the call when you receive a call.
- 2. Touch twice: Play / pause the music when you are not on a call; hang up when you are on a call; reject the call when you receive a call.
- 3. Touch three times: Play the next song when you are not on a call.
- 4. Press and hold for 2s: Switch between the noise.
- reduction mode and bridge mode.

 5. Press and hold both left and right earbuds for 2s: Enter
- / Exit the game mode.

Restore factory settings

When the earbuds are in the charging box, press and hold the multi-function key for 10s until the indicator lamp flashes in red and green alternately, the left and right earbuds will be forced to pair, and the connection history will be cleared.

BASIC PARAMETERS -

realme Buds Q2
RMA2008
Type-C
Noise reduction is disabled: About 7h Noise reduction is enabled: About 5h
Noise reduction is disabled: About 27h Noise reduction is enabled: About 20h
About 1.5h
Bluetooth 5.2
HFP, HSP, A2DP, AVRCP
SBC, AAC
≤ 10m
-10~45°C
2.4G~2.48GHz
≤ 10dBm

WARRANTY

Thank you for purchasing realme products. If any manufacturing defect problems occur within 12 months from the date of purchase, user can enjoy our company's

Matters Needing Attention:

- 1. When you buy the product, the sales unit will issue a valid proof of purchase
- 2. The warranty card and the proof of purchase should be kept by the user properly, and it will not be replaced if lost.
- 3. If the product fails due to non-human factors, the user can present the warranty card and proof of purchase to the realme customer service center for free maintenance during the warranty period.

Non-warranty situation: 1. Out of warranty period.

- 2. Damage caused by use not in accordance with the instructions. 3. Damage caused by man-made causes.
- 4. Failure caused by unauthorized disassembly,
- maintenance, or modification of the product.
- 5. Damage caused by force majeure factors (such as floods, earthquakes, lightning, etc.).
- 6. There is no warranty card, invoice, or warranty card that does not match the invoice information.
- 7. The product wears naturally.
- 8. Other failures and damages that are not caused by the quality of the product itself.

Website: www.realme.com

WARRANTY CARD (Stub Copy) -

Dear user, thank you for using the product of our company Please read and keep properly the warranty card after purchasing the product so that we can provide better services to you.

User Information

Product Information

Sales Information

dicilase bate	-
Invoice Number	_
Sales Unit	_
Phone Number	_
Address	

WARRANTY CARD (Customer Copy)

Dear user, thank you for using the product of our company. Please read and keep properly the warranty card after purchasing the product so that we can provide better services to you.

User Information

Product Information

Sales Information

Address.____.

RECYCLING INITIATIVE

At realme we understand that our responsibility doesn't end at selling you our products, realme has been working in the area of safe disposal of electronic waste. Since mobiles. tablets and other electronic items are made of hazardous constituents. Under the Guidelines of Ministry of Environment Forest and Climate Change, Government of India, E-waste (Management) Rule, 2016 and Amendment E-waste Rule

realme will seek shared responsibility and cooperation from customers in reducing the environmental impact of their products, realme will comply with all the applicable laws related to E-waste management.

For more information on safe disposal, recycling and you may log on to https://www.realme.com/in/legal/e-waste-management or write an email to service@realme.com or contact our Toll Free No. 1800-102-2777

Disposal and Recycling Information This symbol (with or without a solid bar) on the device, batteries (included), and / or the packaging, indicates that the device and its electrical accessories (for example, a headset, adapter or cable) and batteries should not be disposed of as household garbage

WARNING **⚠**

- 1. Do not put this product in a liquid environment or expose it to high-humidity environment.
- 2. Do not squeeze the product to avoid damaging it. 3. Do not try to disassemble the product. If it needs to be stored for a long time, please put it in a cool and dry
- 4. Avoid contact with strong magnets to prevent the magnetic earbud from being demagnetized.

place to keep the it dry.

- 5. Do not use the product in a dusty, humid and dirty environment, otherwise the electronic circuit of the device may be damaged.
- 6. Do not use this device during thunderstorm, as thunderstorm may cause device failure or electric shock. 7. Please use your device in the environment of - 10°C to
- 45°C. Your device may be damaged in an extremely hot or cold environment. 8. For your safety, please do not use the product when riding a motorcycle or bicycle, driving or crossing the
- 9. Keep the device out of the reach of children or pets to
- avoid injury. 10. Please do not clean the product with any use chemicals, detergents or strong detergents.
- 11. Please use CCC certified power adapter.



To prevent possible hearing impairment when using the earbuds, please do not use high sound pressure and high volume for a long time.

Realme Chongqing Mobile Telecommunications Corp., Ltd. No.178 Yulong Avenue, Yufengshan Yubei District, Chongqing, China



EU regulatory conformance: :

RF exposure information: The EIRP power of the device at maximal case is below the exempt condition, 20mW specified in EN62479: 2010. RF exposure assessment has been performed to prove that this unit will not generate the harmful EM emission above the reference level as specified in EC Council Recommendation(1999/519/EC).

CE DOC

Hereby, Realme Chongqing Mobile Telecommunications Corp.,Ltd. declares that the radio equipment type RMA2008 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.realme.com

FCC ID:2AUYFRMA2008-L

FCC ID:2AUYFRMA2008-R

FCC regulatory conformance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF Exposure Information

The SAR limit of FCC is 1.6W/Kg for head. The highest SAR value reported under this standard during product certification when used against the headis 0.238W/Kg(Right)/. 0.170W/Kg(Left). Use 0mm away from the head.