


Greetings from realme mobile

This guide briefly show you how to use the phone and its important functions. For more and detailed information of the phone and user guidance, please visit: www.realme.com/eu/support.

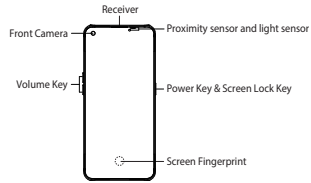

Warning

- ▶ Do not place the phone or battery near or inside heating equipment, cooking equipments, high pressure vessels (such as microwave ovens, induction cooker, electric oven, heater, pressure cooker, water heater, gas stove, etc.) to prevent the battery overheating which may lead to an explosion.
- ▶ The original charger, data cable and battery shall be used. Unapproved chargers, data cables, or batteries that are not certified by the manufacturer may result in electric shock, fire, explosion, or other hazards.
- ▶ Back cover can't be removed.

- ▶ When charging, please place the device in an environment that has a normal room temperature and good ventilation. It is recommended to charge the device in an environment with temperature ranging from 5°C~35°C.

How to reboot the phone

Press and hold the Power Button and Volume Up Button at the same time until the realme boot animation is displayed to reboot the phone.

How to Transfer Old Mobile Content to a New Mobile

You can use realme Clone Phone to easily transfer photos, videos, music, contacts, messages, apps, etc from your old phone to the new one.

1. If you have an old Android phone, first scan the QR code below, then download and install Clone Phone, next open Clone Phone on both the new and old phones, and follow the on-screen instructions to complete the operation.



<https://i.clonephone.coloros.com/download>

2. If you have an old iPhone, open Clone Phone on the new phone directly, and follow on-screen instructions to sign in to iCloud account and sync the files.

Standard accessories

1 Phone, 1 Charger, 1 USB data cable, 1 Safety Guide, 1 Quick Guide, 1 SIM Ejector Tool, 1 Protective Case.

Specification

Product	RMX3311	
Main screen parameter	16.8cm(6.6")	
Dimension	162.9×75.8×8.6(mm)	
Battery	2440mAh×2(cell)/18.88Wh(Min) 2500mAh×2(cell)/19.35Wh(Typ)	
Camera	50Megapixels +8Megapixels +2Megapixels Rear 16Megapixels Front	
Operating temperature	0°C-35°C	
SAR Values	FCC SAR	0.97W/kg(Head)
		1.03W/kg(Body)
		0.63W/kg(Hotspot)

Radio Waves Specifications		
Radio	Frequency	Max. Output Power
GSM	850MHz/900MHz	33.5dBm
	1800MHz/1900MHz	30.5dBm
WCDMA	Bands 1/2/4	24dBm
	Bands 5/6/8/19	24.5dBm
LTE FDD	Bands 1/2/3/4/66	24dBm
	Bands 5/8/12/13/17/18/19/20/26/28	24.5dBm
LTE TDD	Band 2/7	23.5dBm
5G NR(SA)	Bands 38/39/40/41	24dBm
	n1/n3/n5/n8/n20/n28/n38/n40/n41/n66/n77/n78	24.2dBm
5G NR(NSA)	n7	23.7dBm
	n1/n3/n7/n38/n40/n41/n66	23.7dBm
Bluetooth	n5/n8/n20/n28/n77/n78	24.2dBm
	2.4-2.4835GHz	14.6dBm(EIRP)
2.4G Wi-Fi	2.4-2.4835GHz	20dBm(EIRP)
	5.15-5.35GHz; 5.47-5.725GHz	19.5dBm(EIRP)
5G Wi-Fi	5.725-5.85GHz	13.5dBm(EIRP)
	13.56MHz	42dBuA/m @10m

A

realme

Quick Guide

RMX3311

realme

