 
 



802.11ax-40 MHz(SU) CHANNEL 6, SPURIOUS  
30 MHz ~ 3 GHz

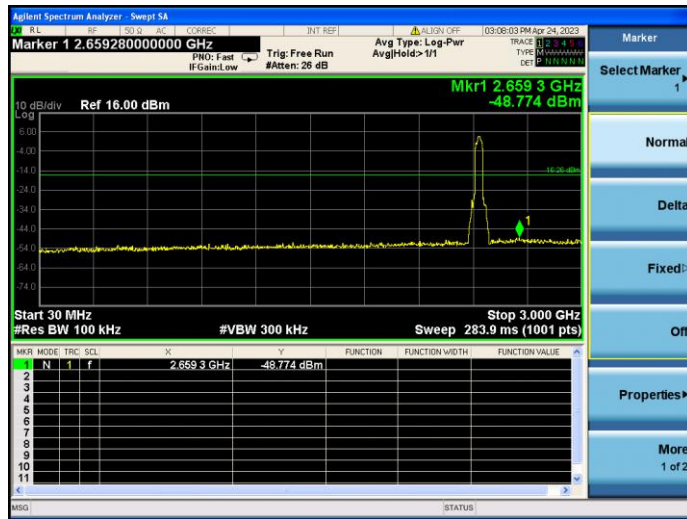


802.11ax-40 MHz(SU) CHANNEL 6, SPURIOUS  
2 GHz ~ 25 GHz

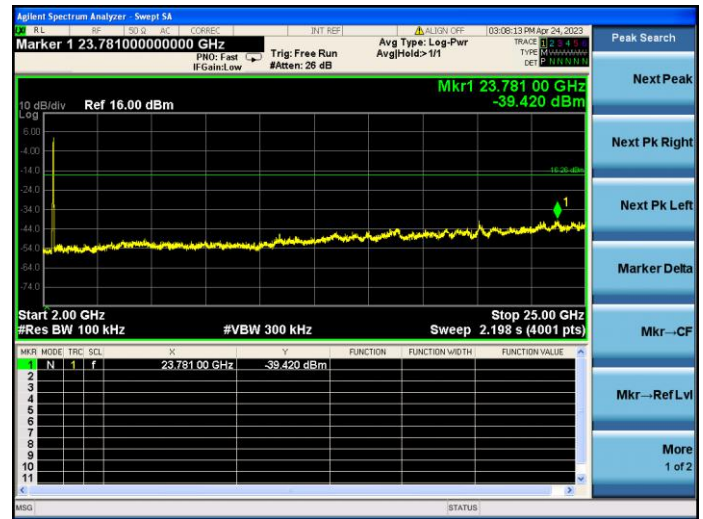

 
802.11ax-40 MHz(SU) CHANNEL 7 CARRIER LEVEL

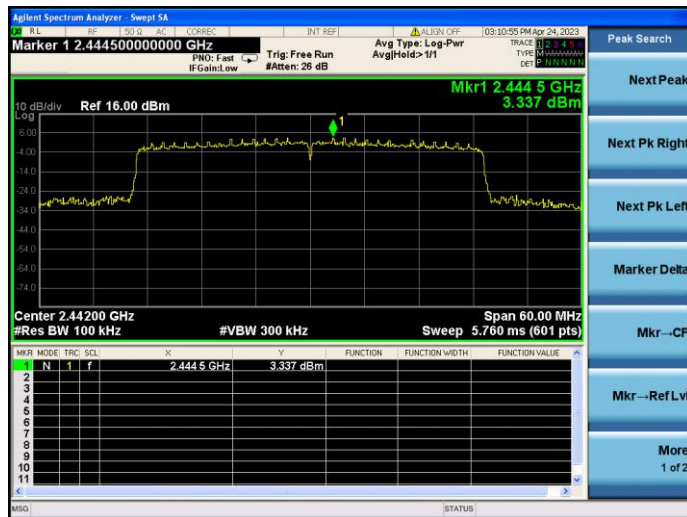

 
802.11ax-40 MHz(SU) CHANNEL 7, SPURIOUS  
30 MHz ~ 3 GHz

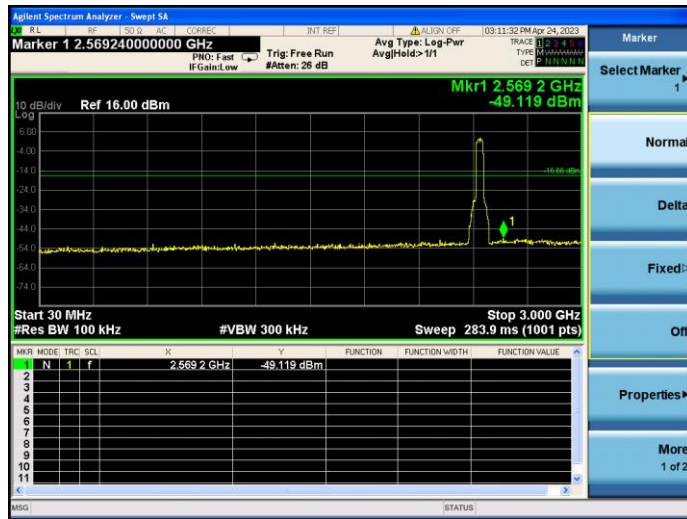

 
802.11ax-40 MHz(SU) CHANNEL 7, SPURIOUS  
2 GHz ~ 25 GHz

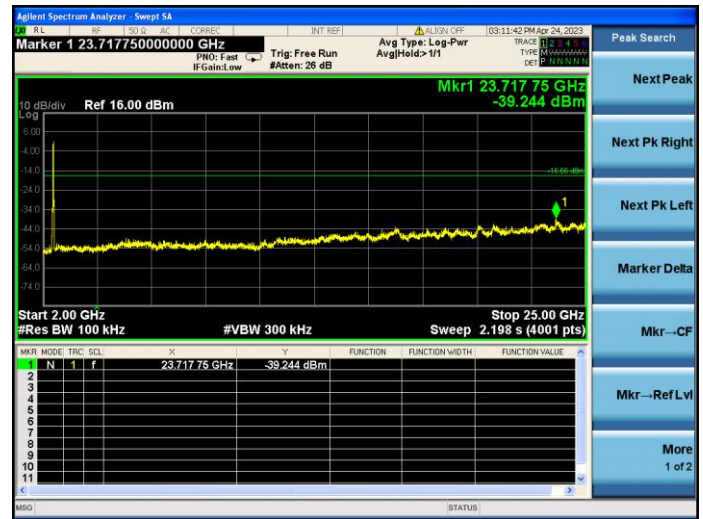

 
802.11ax-40 MHz(SU) CHANNEL 8 CARRIER LEVEL

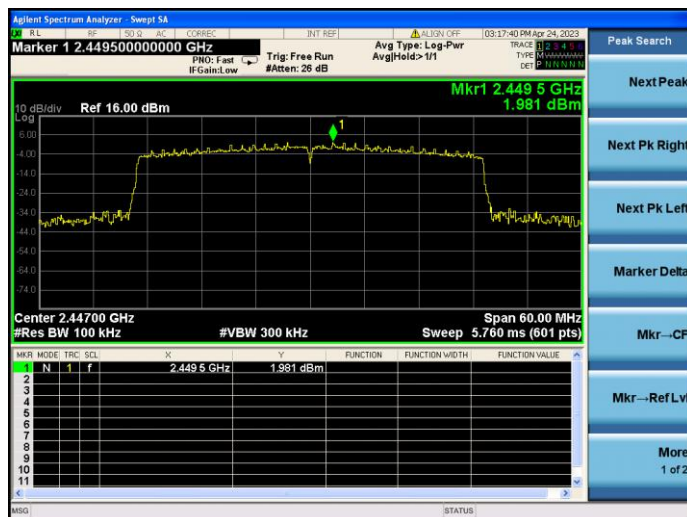

 
802.11ax-40 MHz(SU) CHANNEL 8, SPURIOUS  
30 MHz ~ 3 GHz

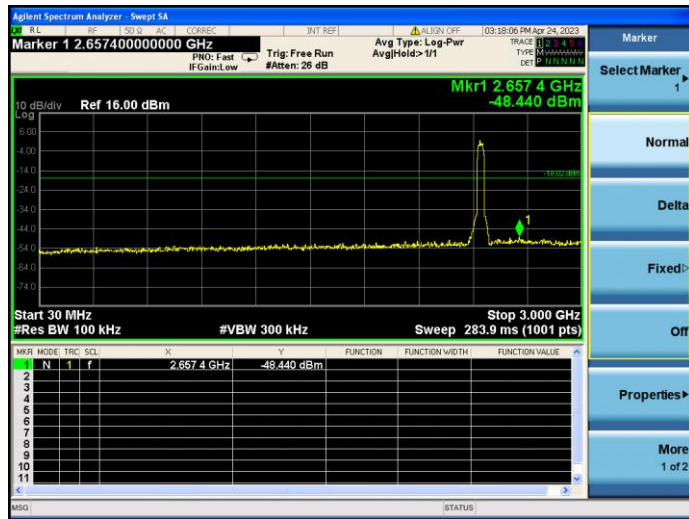

 802.11ax-40 MHz(SU) CHANNEL 8, SPURIOUS  
2 GHz ~ 25 GHz


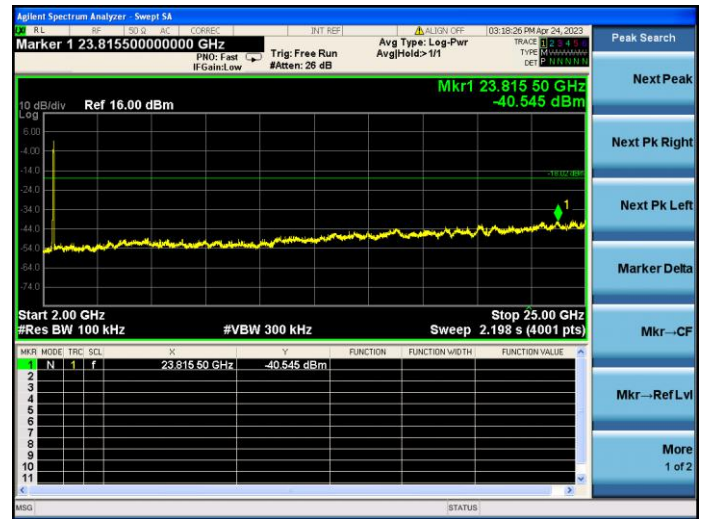


 802.11ax-40 MHz(SU) CHANNEL 9 CARRIER LEVEL

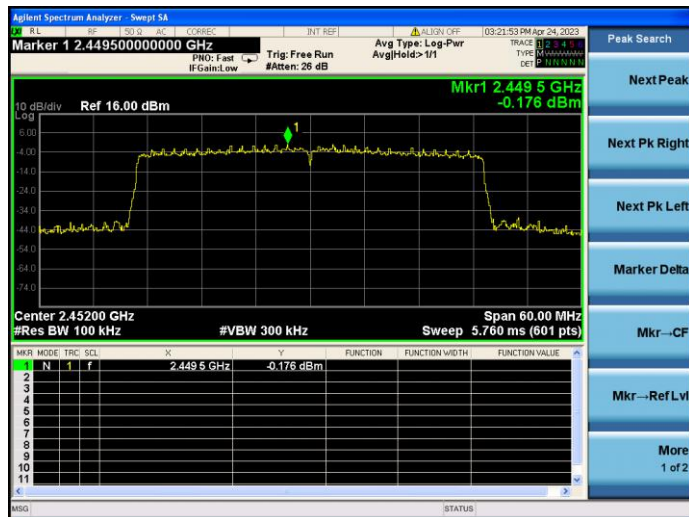

802.11ax-40 MHz(SU) CHANNEL 9, SPURIOUS  
30 MHz ~ 3 GHz

  802.11ax-40 MHz(SU) CHANNEL 9, SPURIOUS  
2 GHz ~ 25 GHz

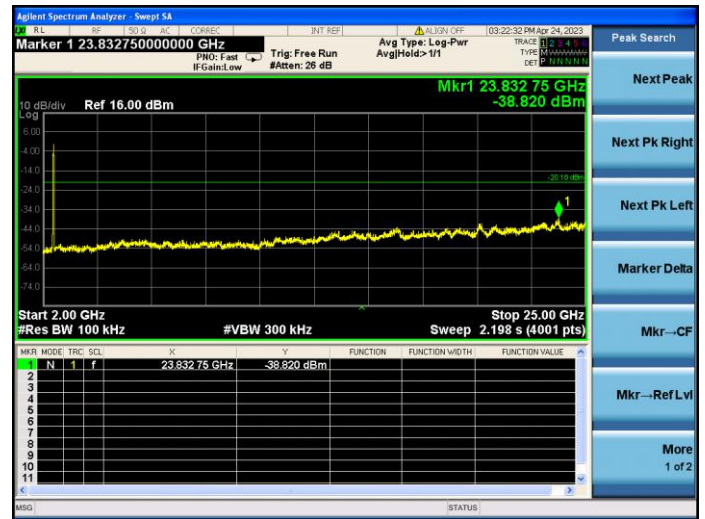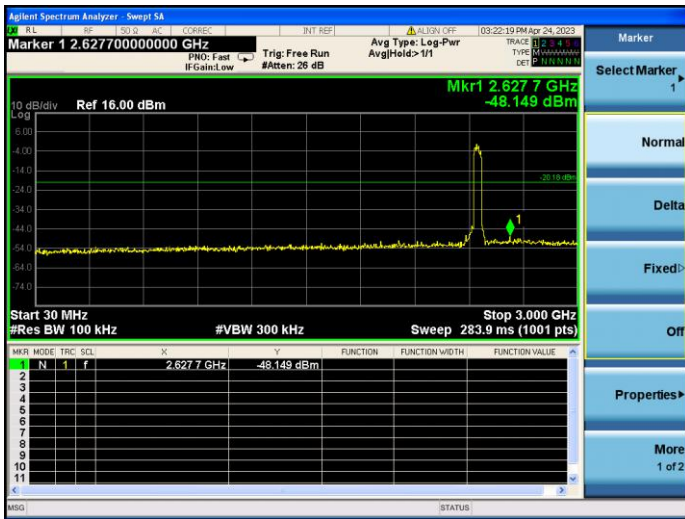


MIMO-Main Antenna


802.11b CHANNEL 1 CARRIER LEVEL



 802.11b CHANNEL 1, SPURIOUS 30 MHz ~ 3 GHz

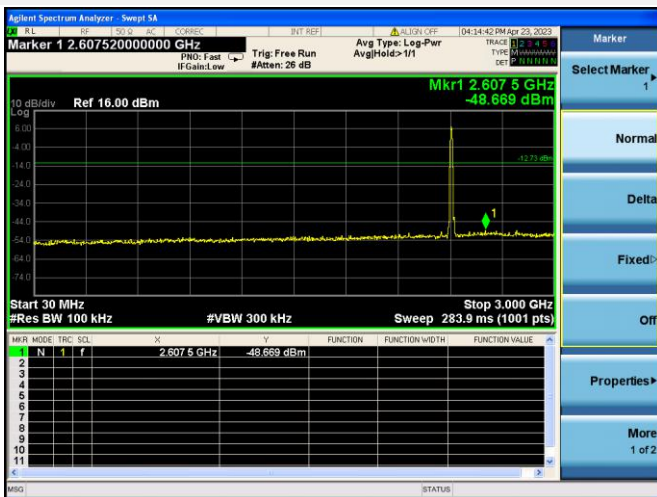

 
802.11b CHANNEL 1, SPURIOUS 2 GHz ~ 25 GHz

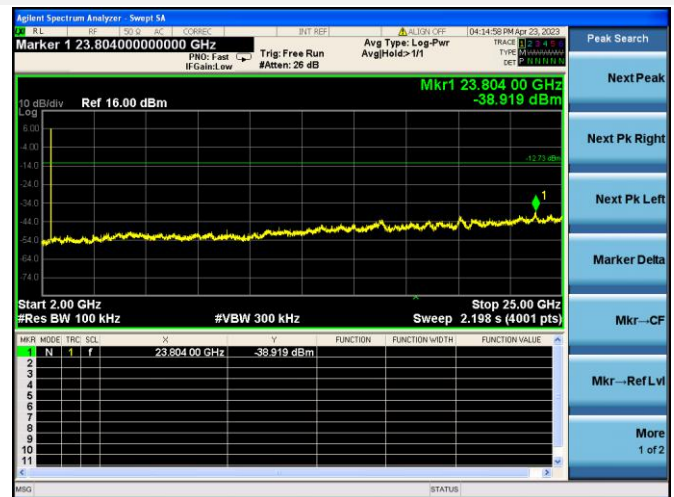


802.11b CHANNEL 6 CARRIER LEVEL



 802.11b CHANNEL 6, SPURIOUS  
30 MHz ~ 3 GHz

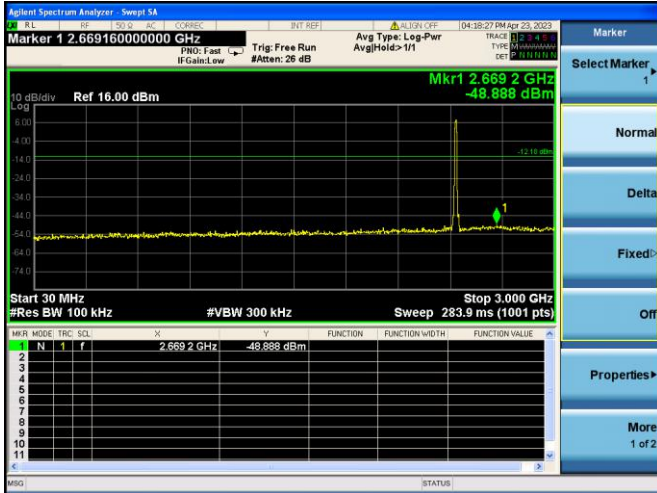

 
802.11b CHANNEL 6, SPURIOUS  
2 GHz ~ 25 GHz

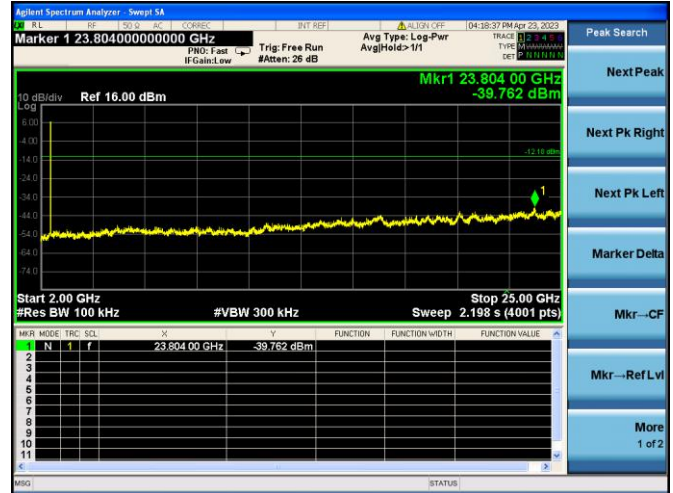


802.11b CHANNEL 11 CARRIER LEVEL



 802.11b CHANNEL 11, SPURIOUS  
30 MHz ~ 3 GHz

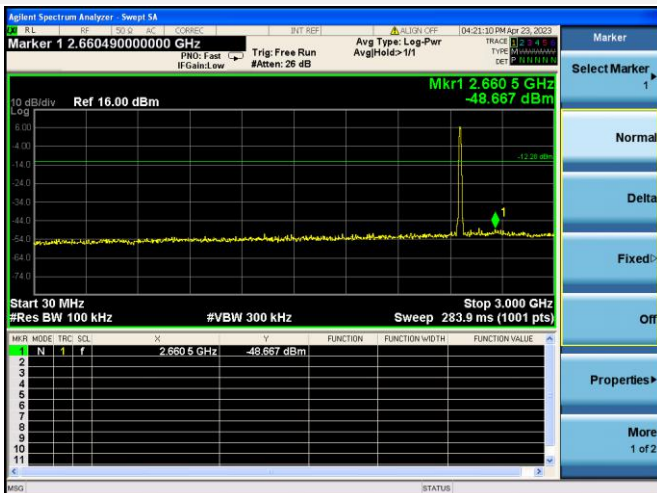

 
802.11b CHANNEL 11, SPURIOUS  
2 GHz ~ 25 GHz

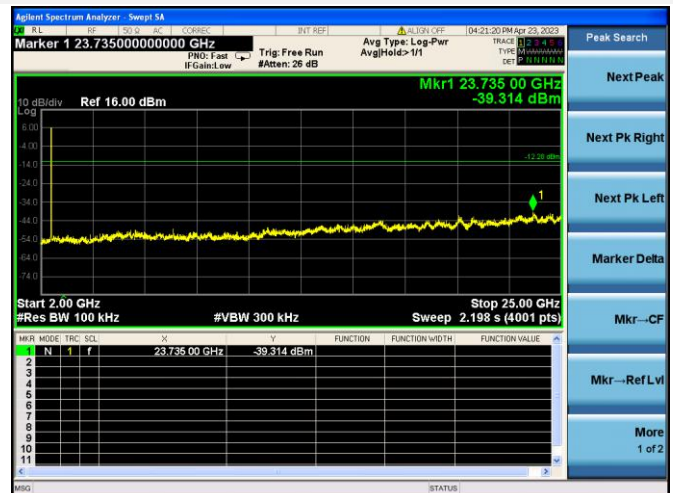


### 802.11g CHANNEL 1 CARRIER LEVEL



 
### 802.11g CHANNEL 1, SPURIOUS 30 MHz ~ 3 GHz

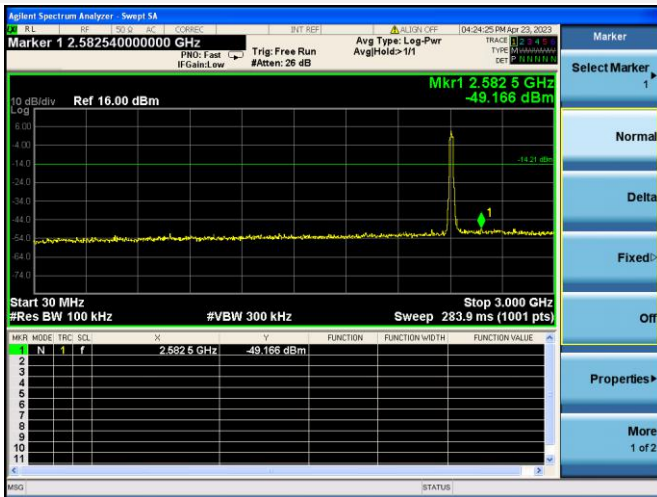


### 802.11g CHANNEL 1, SPURIOUS 2 GHz ~ 25 GHz

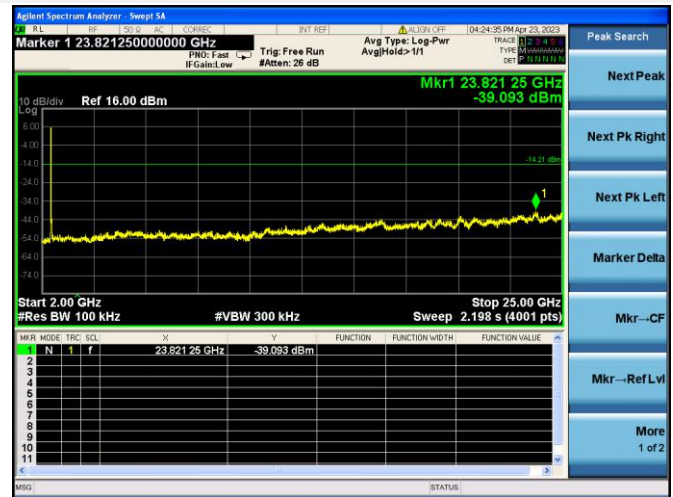 


### 802.11g CHANNEL 2 CARRIER LEVEL

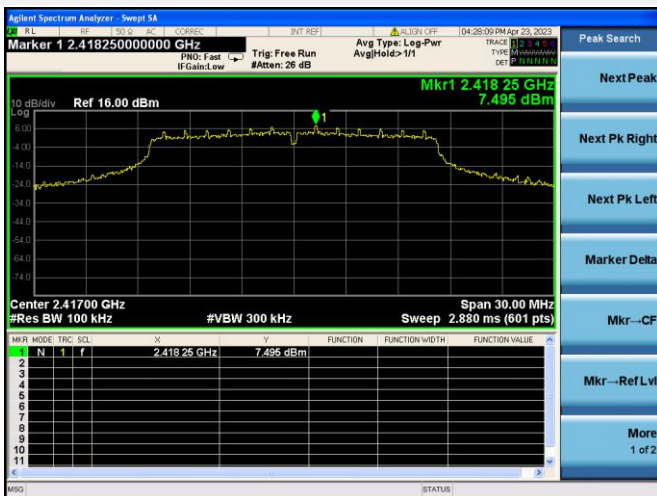 

 
802.11g CHANNEL 2, SPURIOUS  
30 MHz ~ 3 GHz

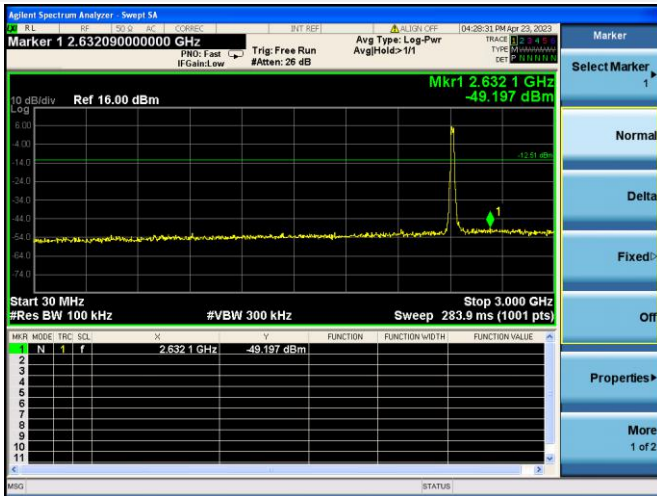

 
802.11g CHANNEL 2, SPURIOUS  
2 GHz ~ 25 GHz

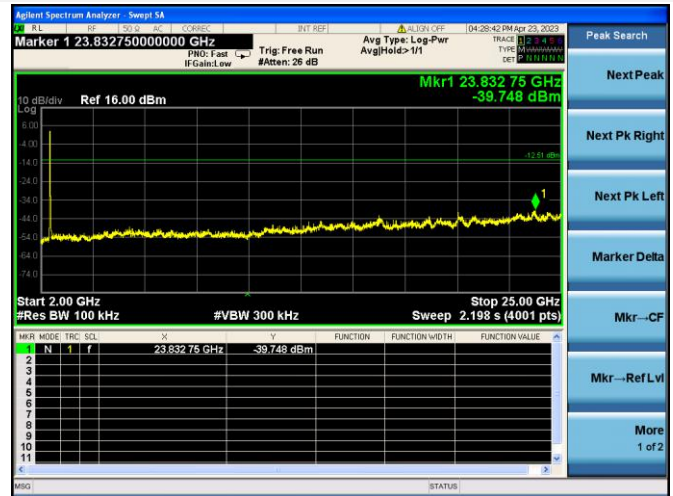

 
802.11g CHANNEL 6 CARRIER LEVEL

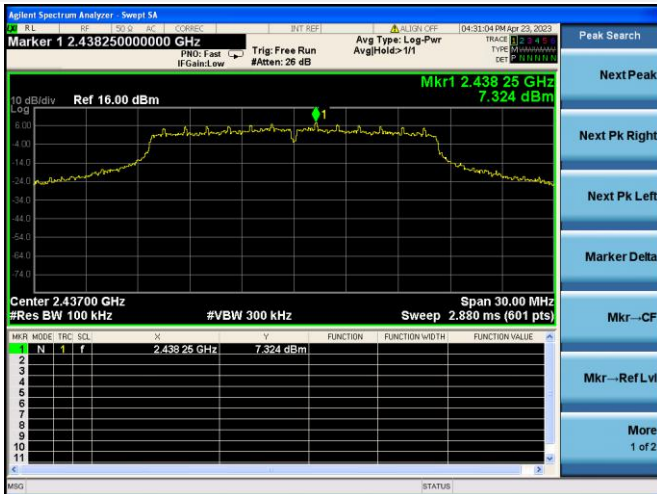

 802.11g CHANNEL 6, SPURIOUS  
30 MHz ~ 3 GHz

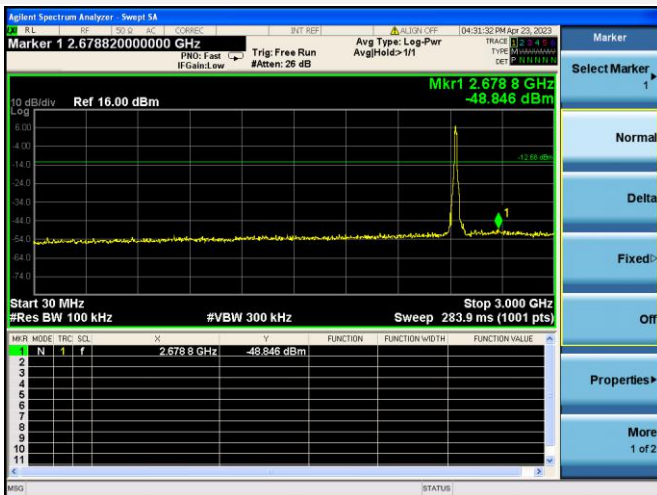

 802.11g CHANNEL 6, SPURIOUS  
2 GHz ~ 25 GHz

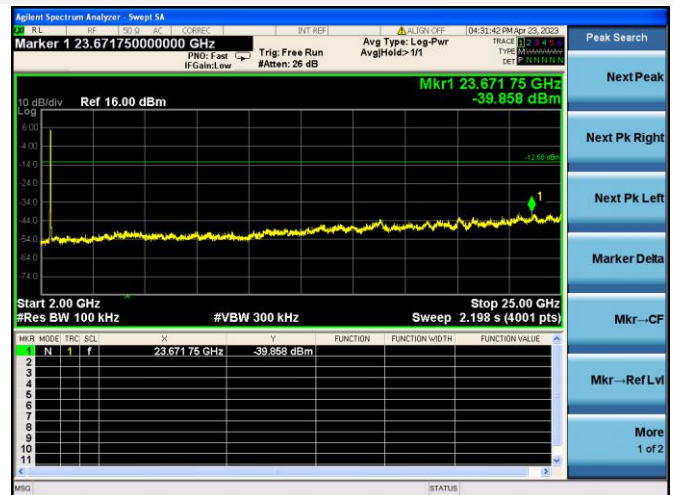




### 802.11g CHANNEL 8 CARRIER LEVEL




### 802.11g CHANNEL 8, SPURIOUS

 30 MHz ~ 3 GHz

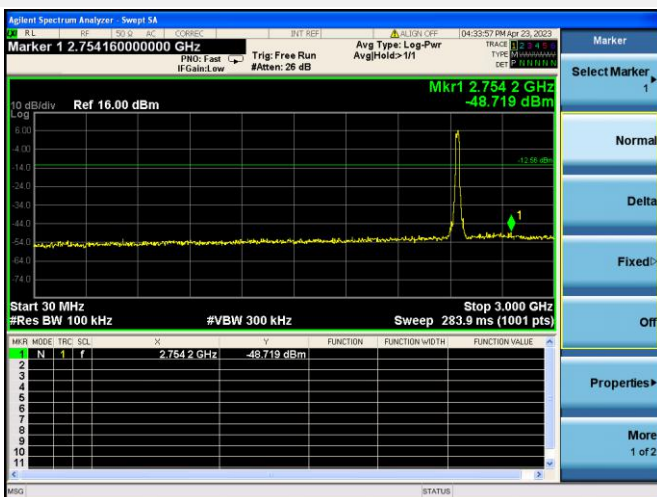

### 802.11g CHANNEL 8, SPURIOUS

 
2 GHz ~ 25 GHz

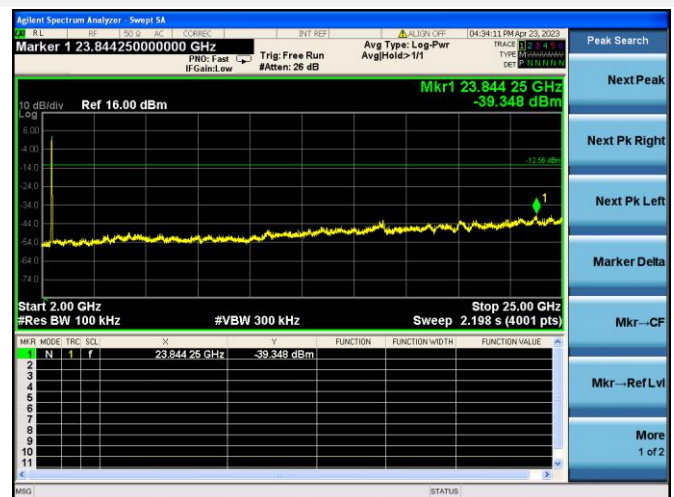


### 802.11g CHANNEL 9 CARRIER LEVEL



 
802.11g CHANNEL 9, SPURIOUS  
30 MHz ~ 3 GHz

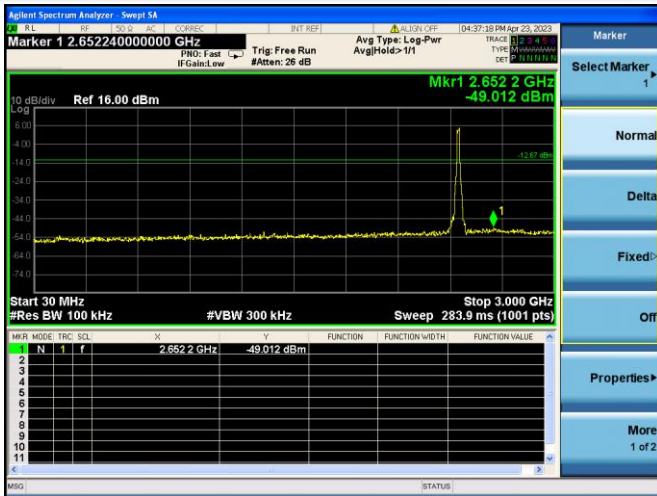

 
802.11g CHANNEL 9, SPURIOUS  
2 GHz ~ 25 GHz

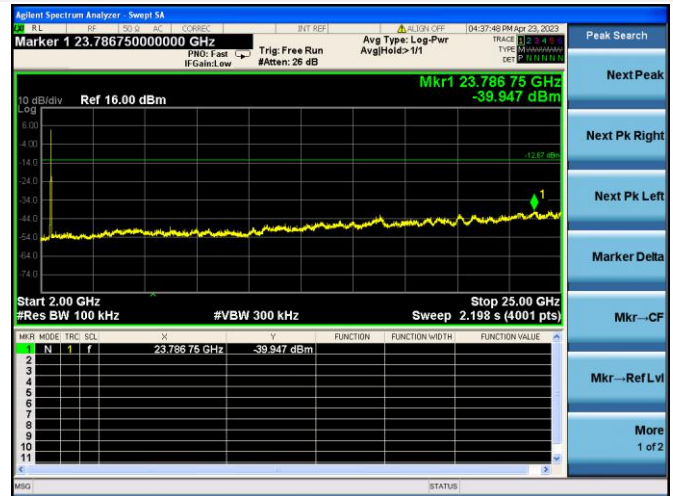

 
802.11g CHANNEL 10 CARRIER LEVEL

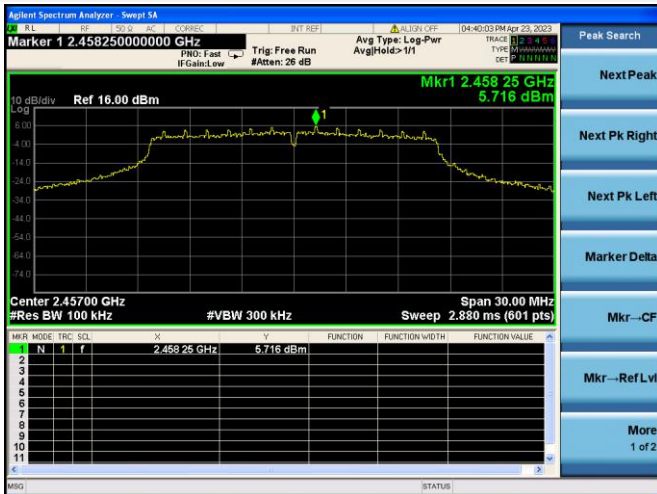

 802.11g CHANNEL 10, SPURIOUS  
30 MHz ~ 3 GHz

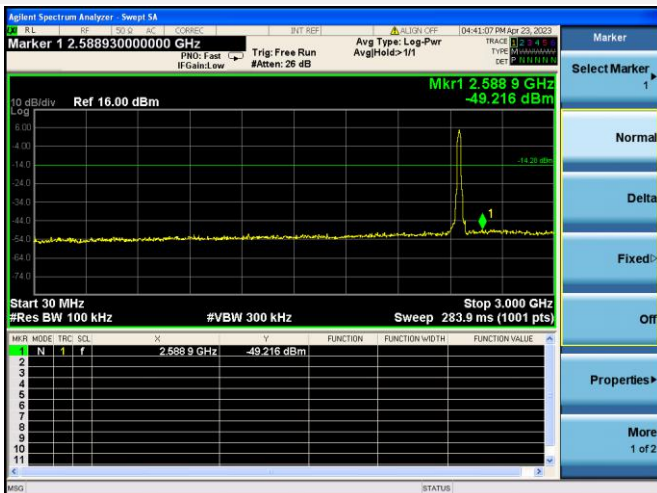

 
802.11g CHANNEL 10, SPURIOUS  
2 GHz ~ 25 GHz

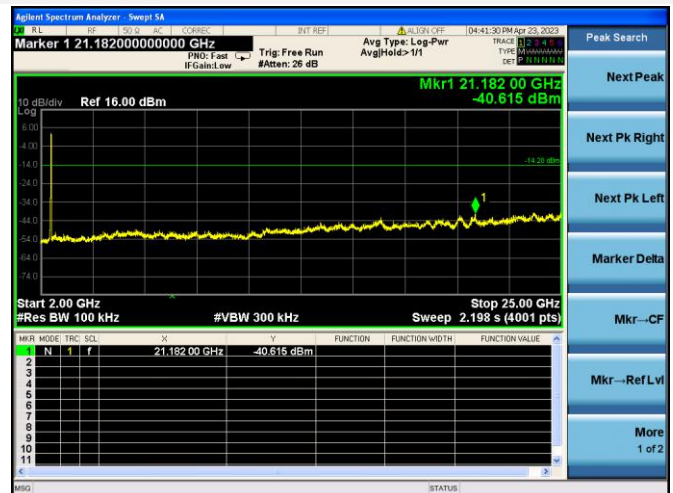


### 802.11g CHANNEL 11 CARRIER LEVEL


 
### 802.11g CHANNEL 11, SPURIOUS 30 MHz ~ 3 GHz

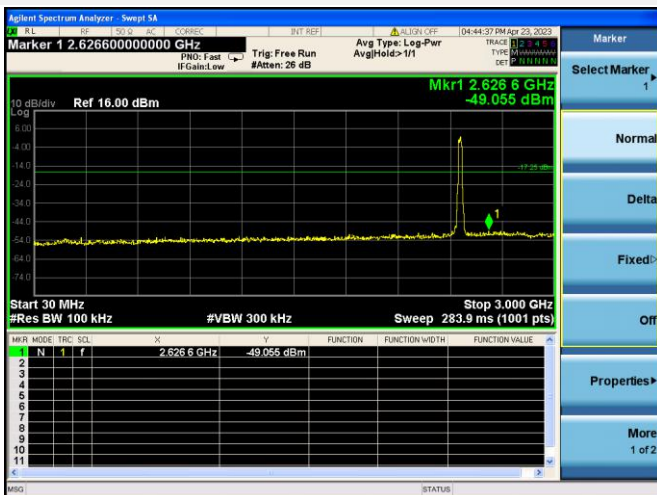


### 802.11g CHANNEL 11, SPURIOUS 2 GHz ~ 25 GHz

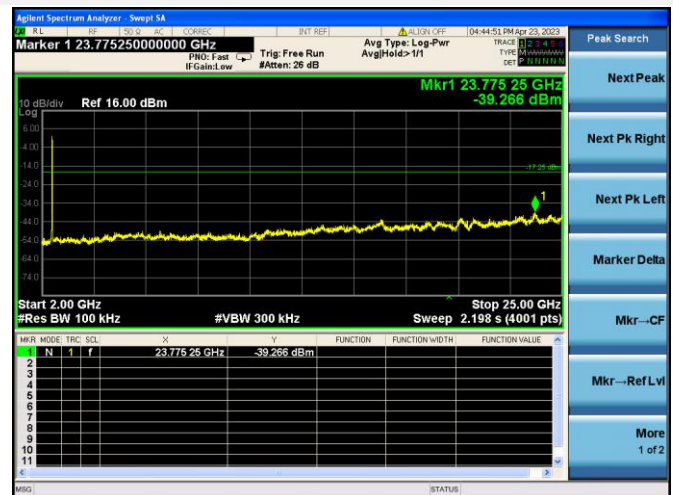 


### 802.11n-20 MHz CHANNEL 1 CARRIER LEVEL



 
802.11n-20 MHz CHANNEL 1, SPURIOUS 30 MHz ~ 3 GHz

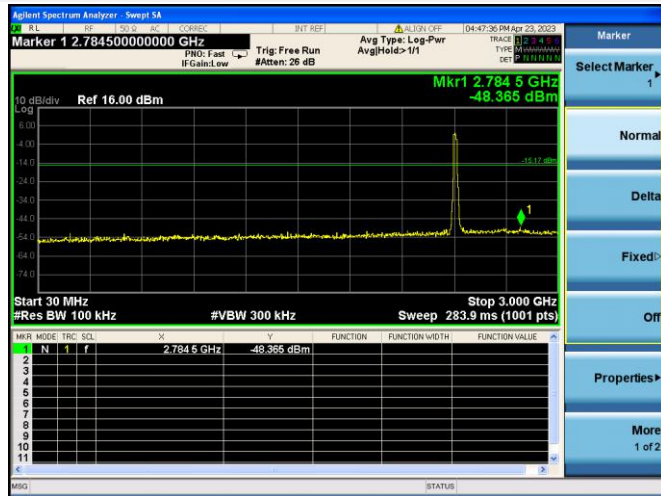


 
802.11n-20 MHz CHANNEL 1, SPURIOUS 2 GHz ~ 25 GHz

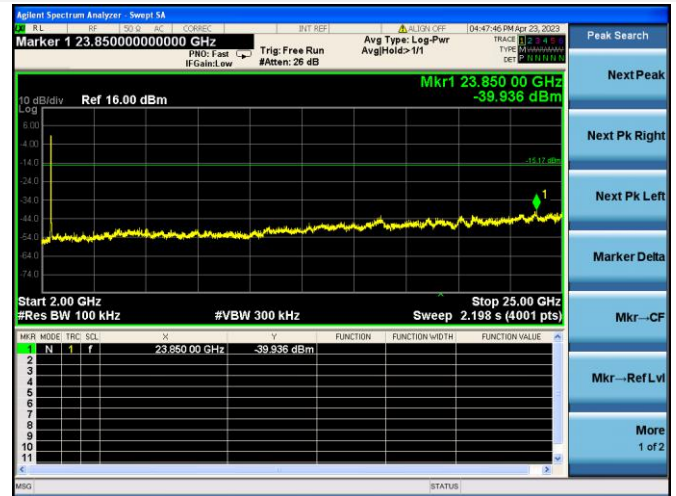

 802.11n-20 MHz CHANNEL 2 CARRIER LEVEL

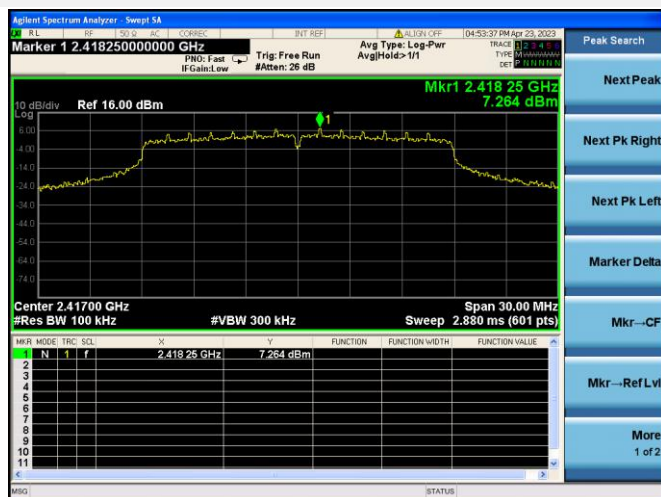

  
802.11n-20 MHz CHANNEL 2, SPURIOUS 30 MHz ~ 3 GHz

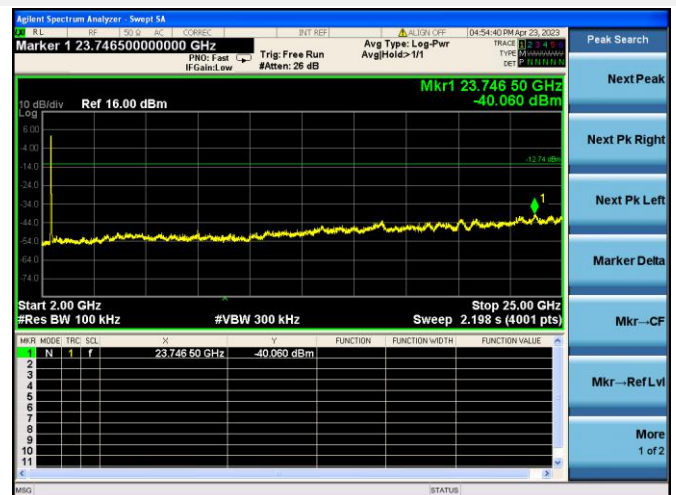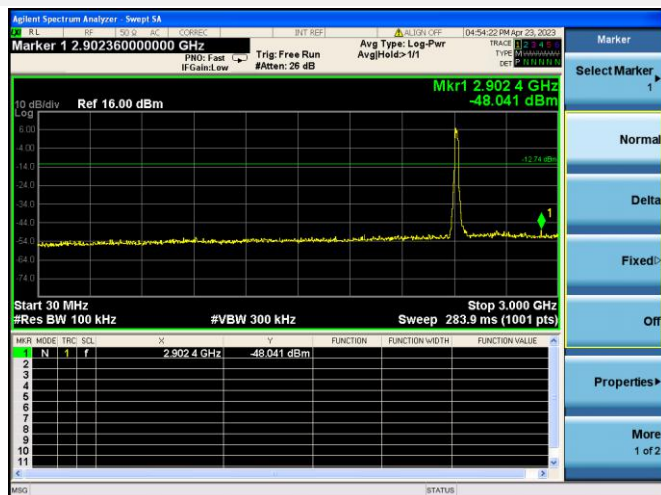


### 802.11n-20 MHz CHANNEL 6 CARRIER LEVEL



 
### 802.11n-20 MHz CHANNEL 6, SPURIOUS 30 MHz ~ 3 GHz

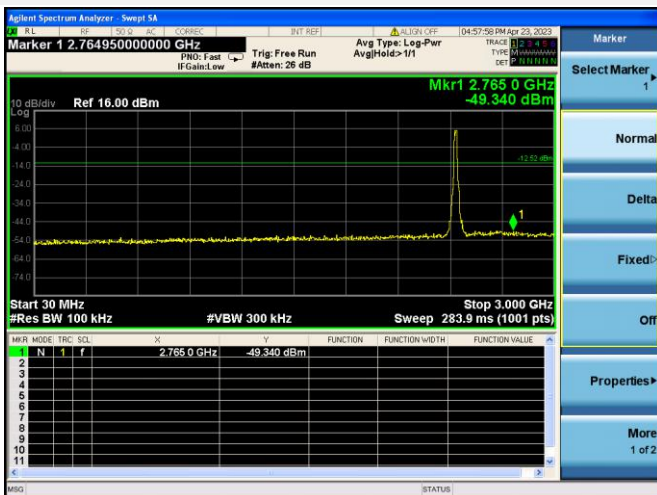


### 802.11n-20 MHz CHANNEL 6, SPURIOUS 2 GHz ~ 25 GHz

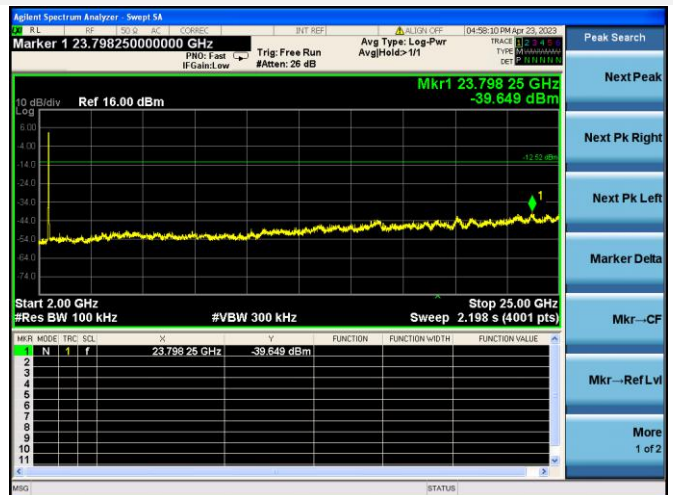 


### 802.11n-20 MHz CHANNEL 8 CARRIER LEVEL

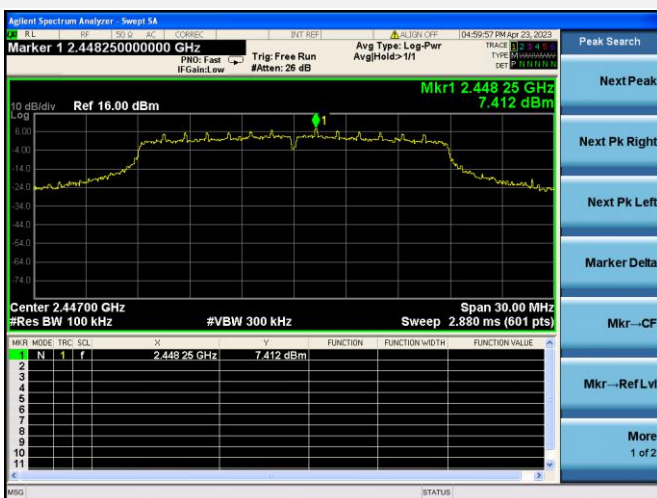 

 
802.11n-20 MHz CHANNEL 8, SPURIOUS  
30 MHz ~ 3 GHz

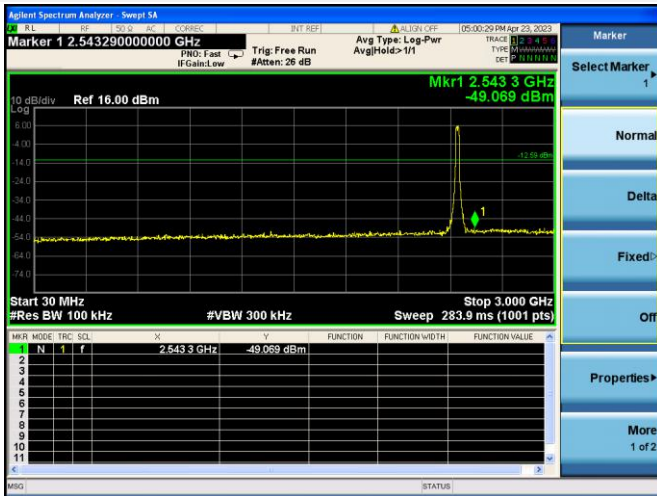

 
802.11n-20 MHz CHANNEL 8, SPURIOUS  
2 GHz ~ 25 GHz

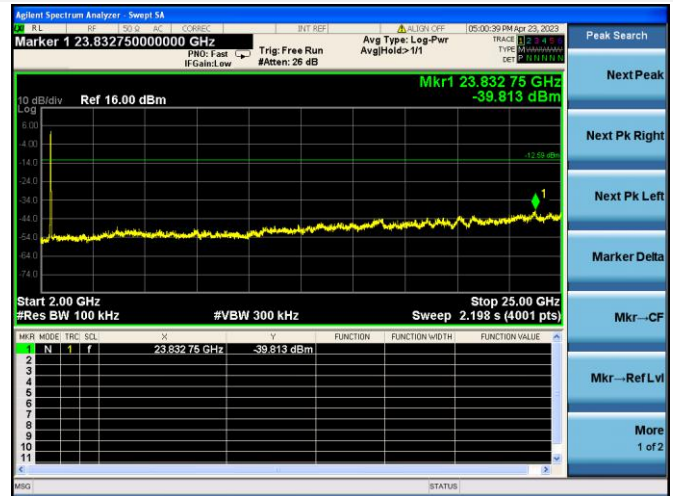

 
802.11n-20 MHz CHANNEL 9 CARRIER LEVEL

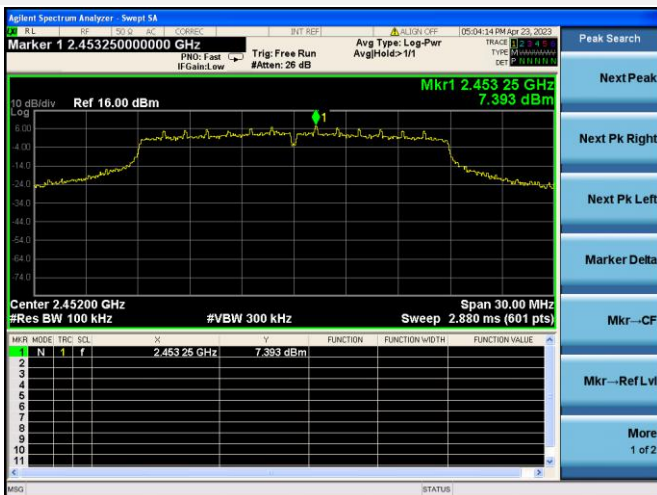

 802.11n-20 MHz CHANNEL 9, SPURIOUS  
30 MHz ~ 3 GHz

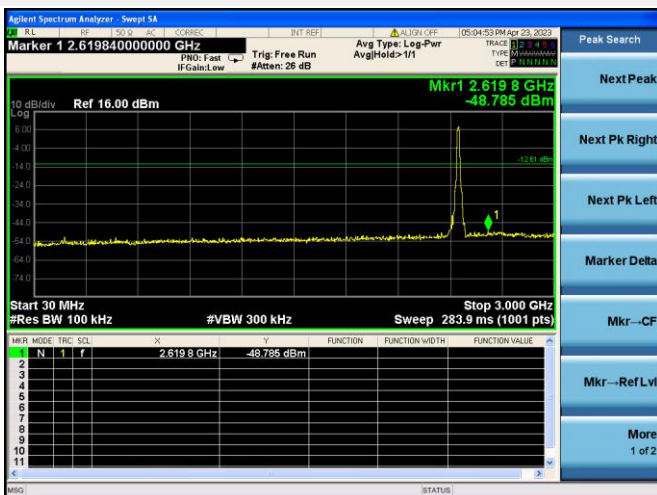

 
802.11n-20 MHz CHANNEL 9, SPURIOUS  
2 GHz ~ 25 GHz

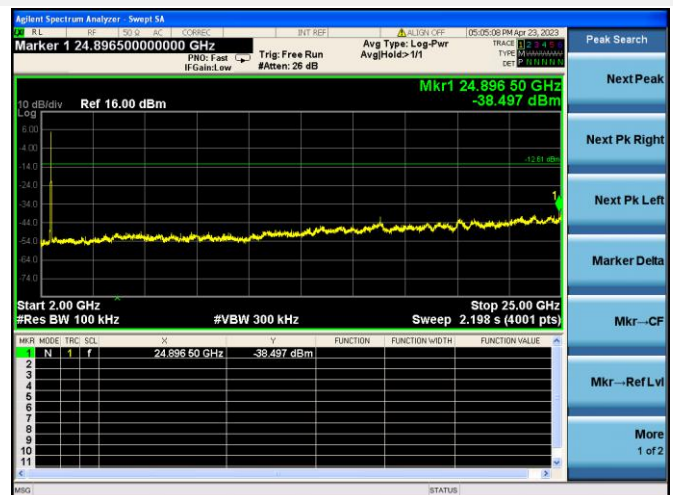


### 802.11n-20 MHz CHANNEL 10 CARRIER LEVEL



 
### 802.11n-20 MHz CHANNEL 10, SPURIOUS 30 MHz ~ 3 GHz

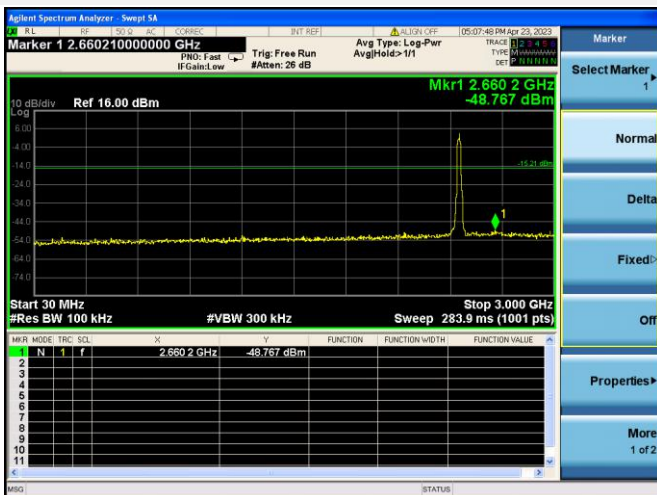


### 802.11n-20 MHz CHANNEL 10, SPURIOUS 2 GHz ~ 25 GHz

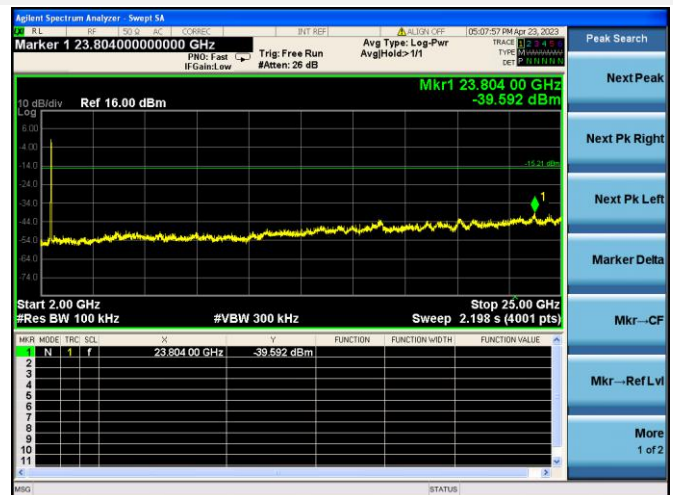 


### 802.11n-20 MHz CHANNEL 11 CARRIER LEVEL

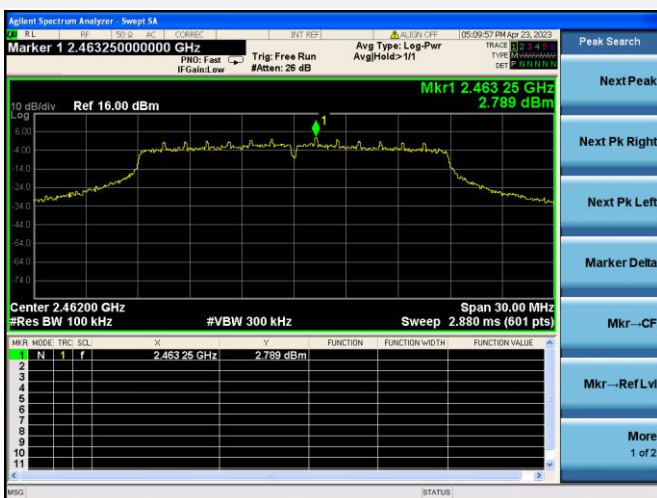 

 
802.11n-20 MHz CHANNEL 11, SPURIOUS  
30 MHz ~ 3 GHz

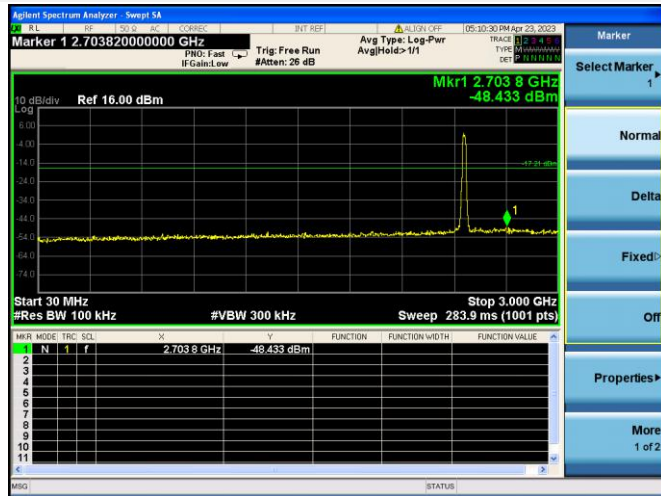

 
802.11n-20 MHz CHANNEL 11, SPURIOUS  
2 GHz ~ 25 GHz

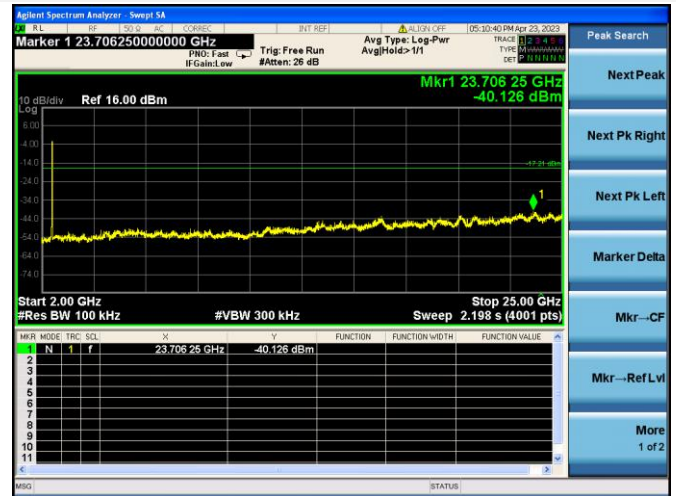

 
802.11n-40 MHz CHANNEL 3 CARRIER LEVEL

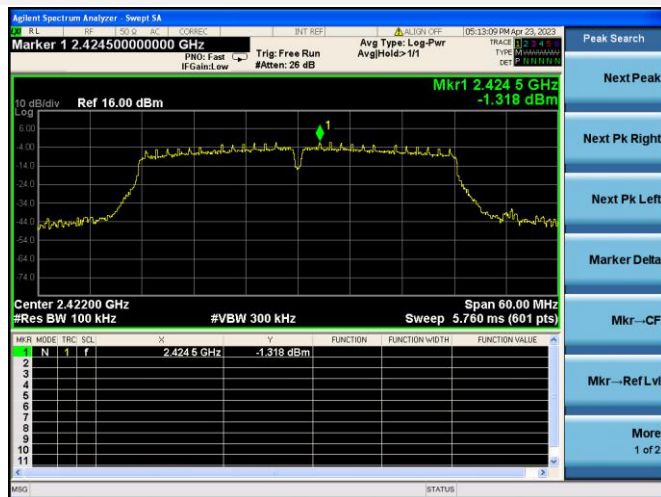

 802.11n-40 MHz CHANNEL 3, SPURIOUS  
2 GHz ~ 25 GHz

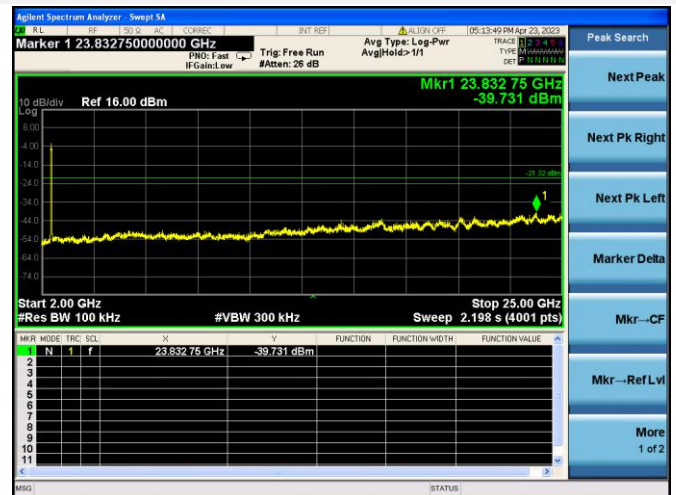


 802.11n-40 MHz CHANNEL 3, SPURIOUS  
30 MHz ~ 3 GHz

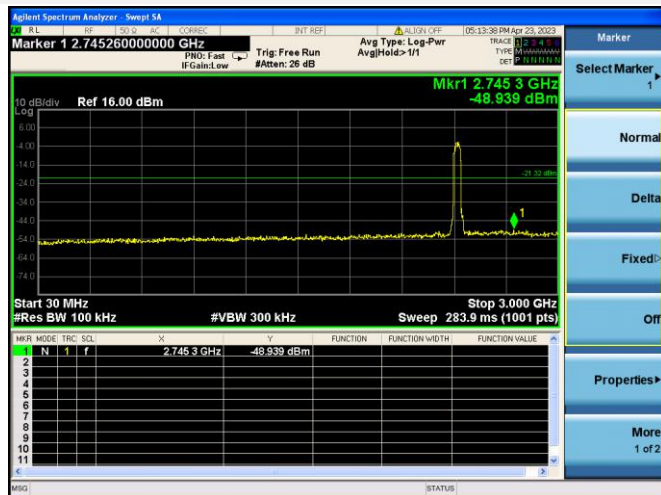





### 802.11n-40 MHz CHANNEL 4 CARRIER LEVEL

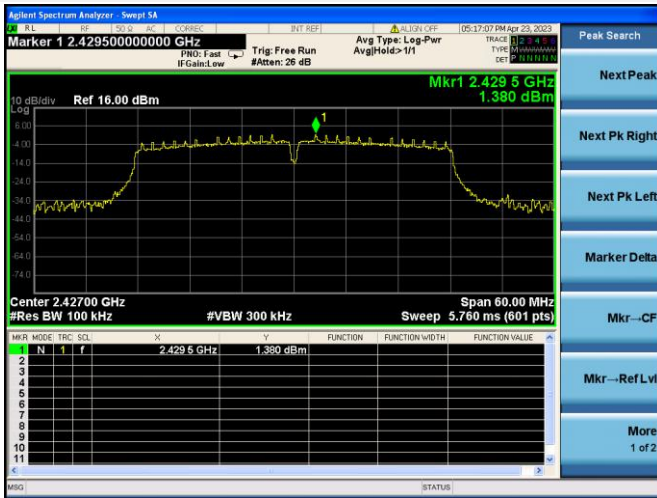 


### 802.11n-40 MHz CHANNEL 4, SPURIOUS 30 MHz ~ 3 GHz

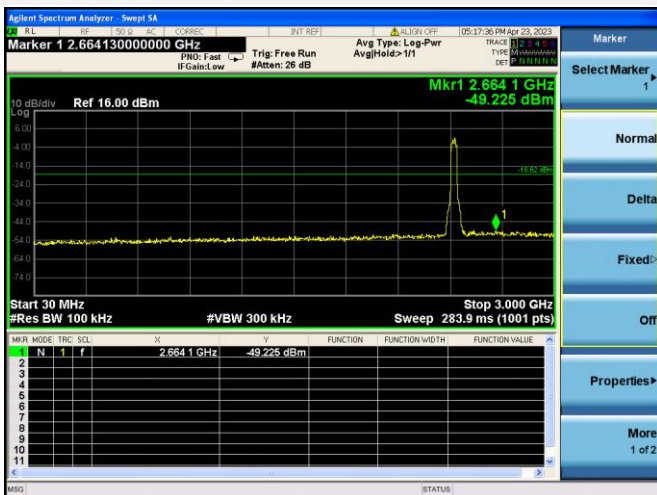 


### 802.11n-40 MHz CHANNEL 4, SPURIOUS 2 GHz ~ 25 GHz

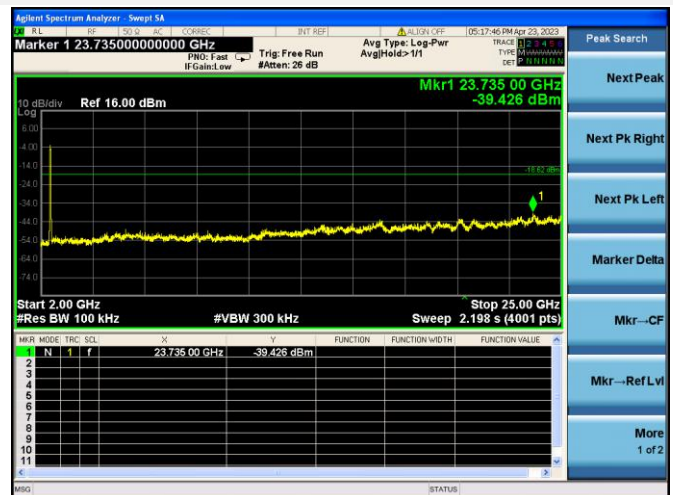 


### 802.11n-40 MHz CHANNEL 5 CARRIER LEVEL

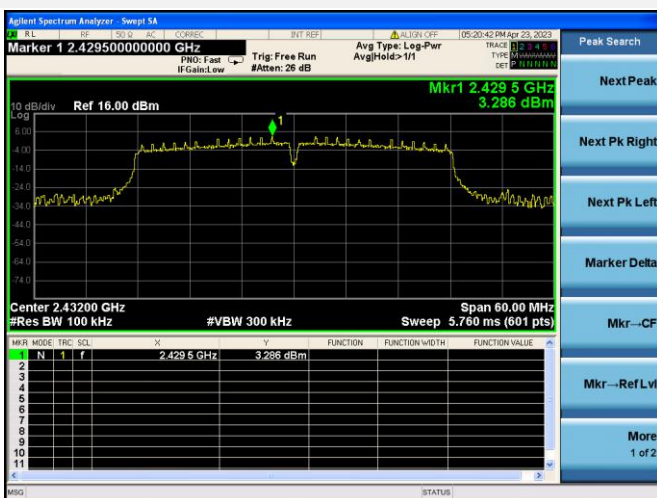 

 
802.11n-40 MHz CHANNEL 5, SPURIOUS  
30 MHz ~ 3 GHz

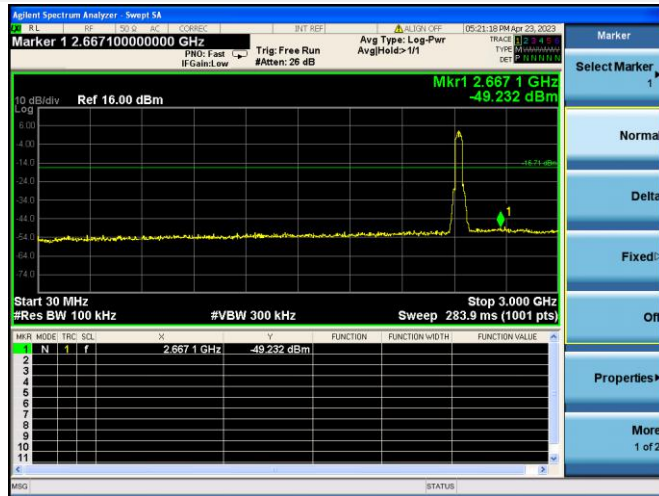

 
802.11n-40 MHz CHANNEL 5, SPURIOUS  
2 GHz ~ 25 GHz

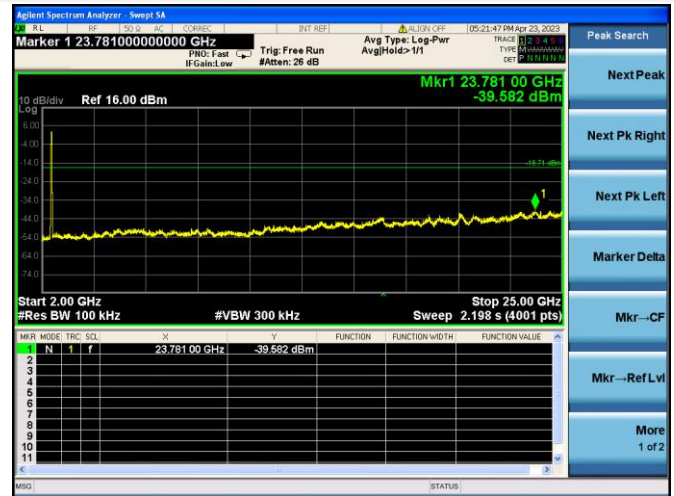

 
802.11n-40 MHz CHANNEL 6 CARRIER LEVEL

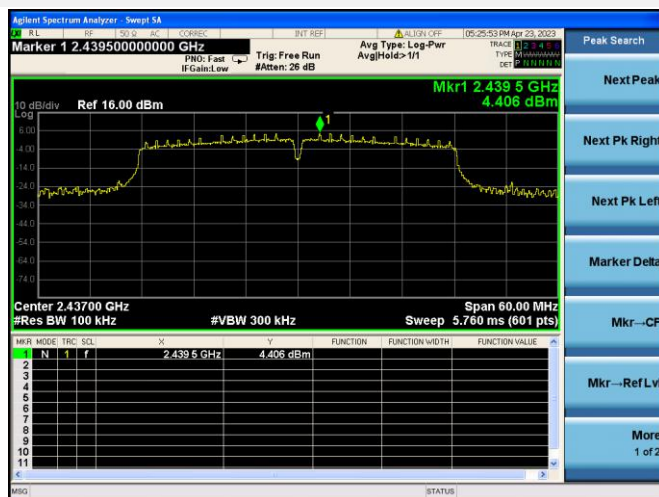

 
802.11n-40 MHz CHANNEL 6, SPURIOUS  
30 MHz ~ 3 GHz

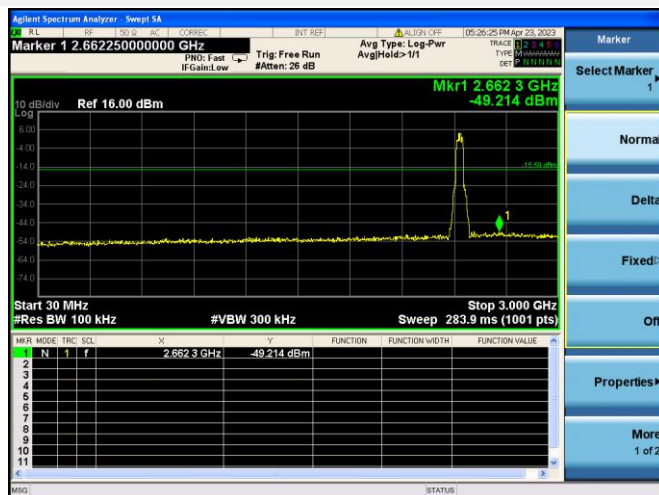

 802.11n-40 MHz CHANNEL 6, SPURIOUS  
2 GHz ~ 25 GHz

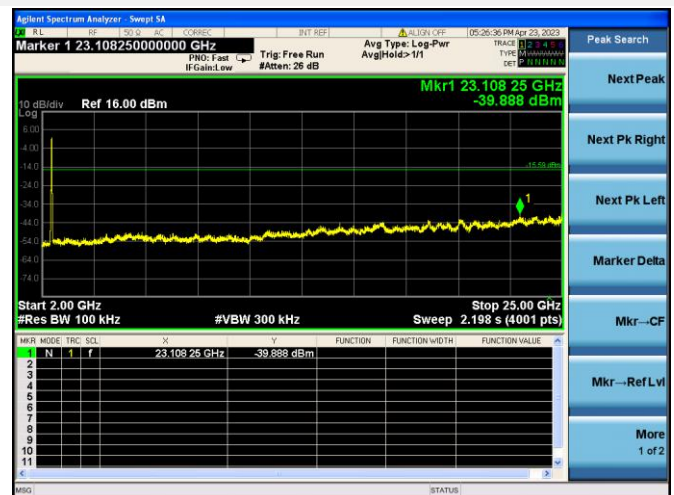


### 802.11n-40 MHz CHANNEL 7 CARRIER LEVEL

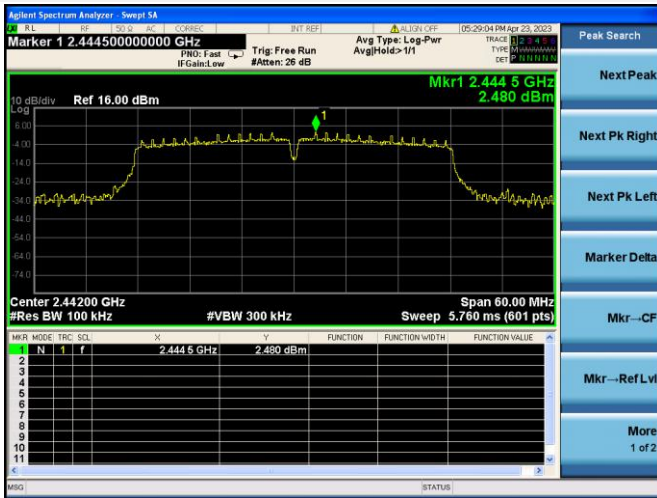 


### 802.11n-40 MHz CHANNEL 7, SPURIOUS

 30 MHz ~ 3 GHz

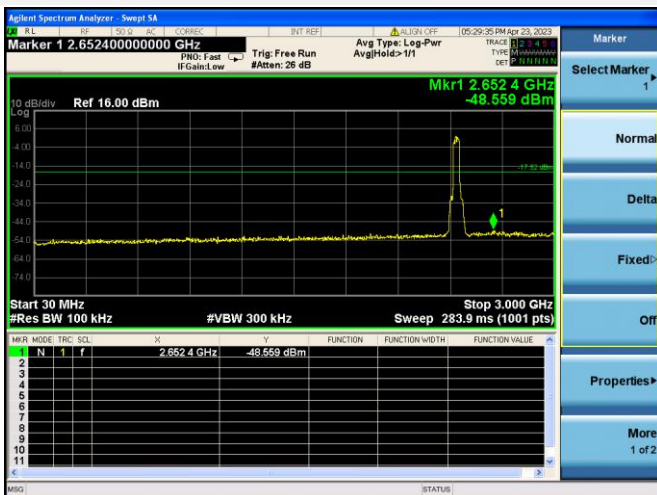


### 802.11n-40 MHz CHANNEL 7, SPURIOUS

 
2 GHz ~ 25 GHz

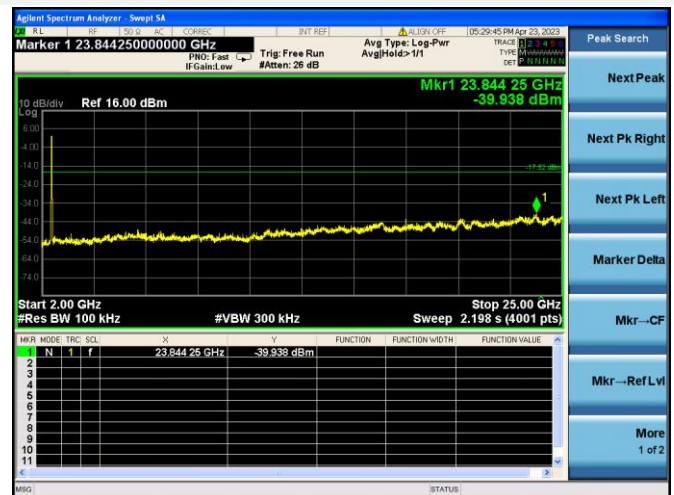


### 802.11n-40 MHz CHANNEL 8 CARRIER LEVEL

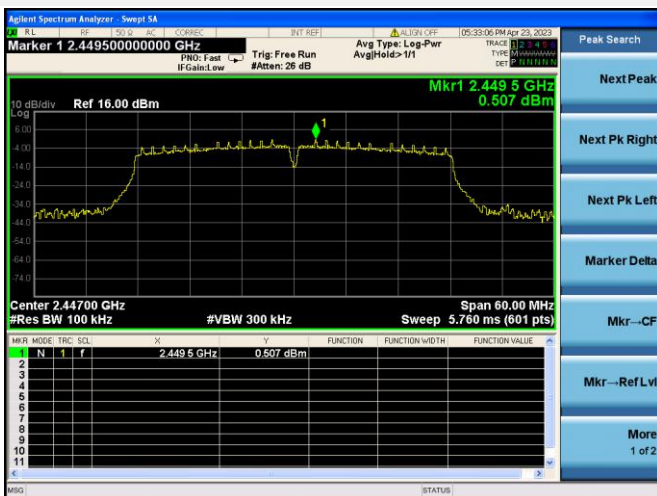 

 
802.11n-40 MHz CHANNEL 8, SPURIOUS  
30 MHz ~ 3 GHz

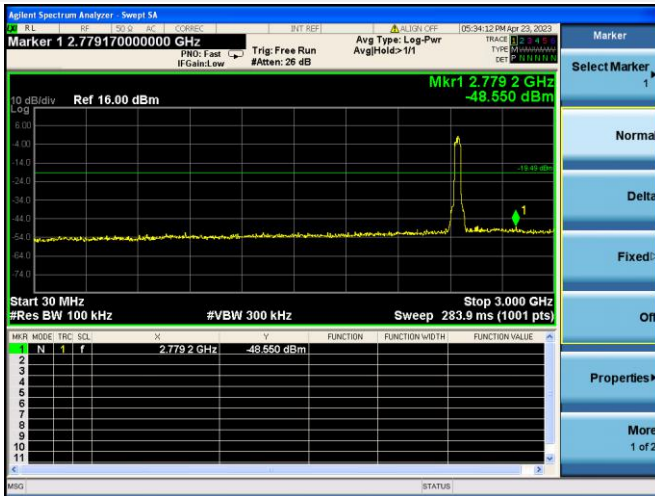

 
802.11n-40 MHz CHANNEL 8, SPURIOUS  
2 GHz ~ 25 GHz

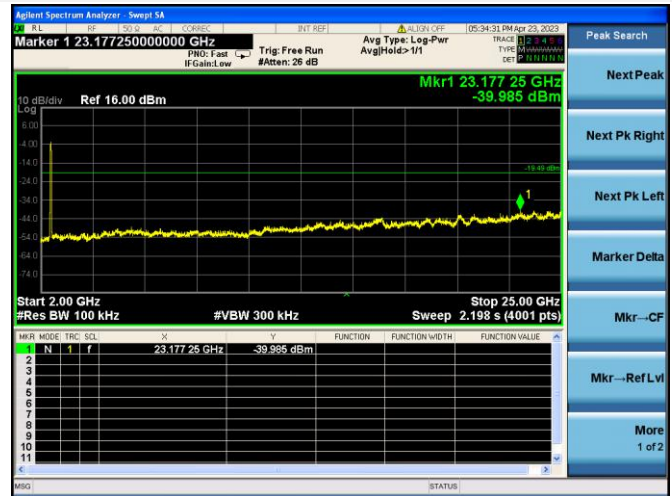

 
802.11n-40 MHz CHANNEL 9 CARRIER LEVEL

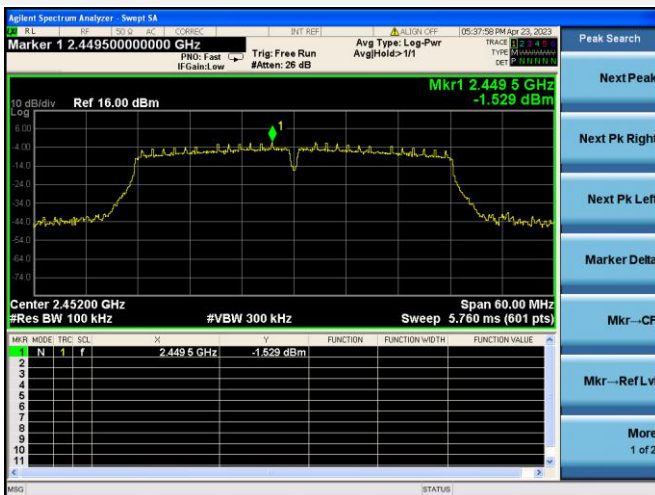

 802.11n-40 MHz CHANNEL 9, SPURIOUS  
30 MHz ~ 3 GHz

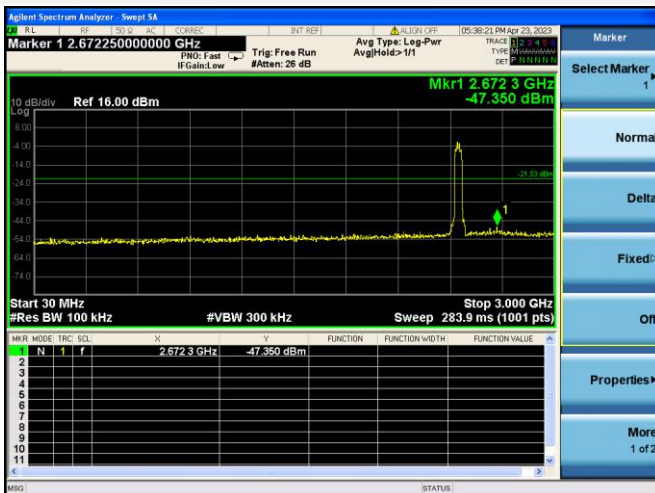

 
802.11n-40 MHz CHANNEL 9, SPURIOUS  
2 GHz ~ 25 GHz

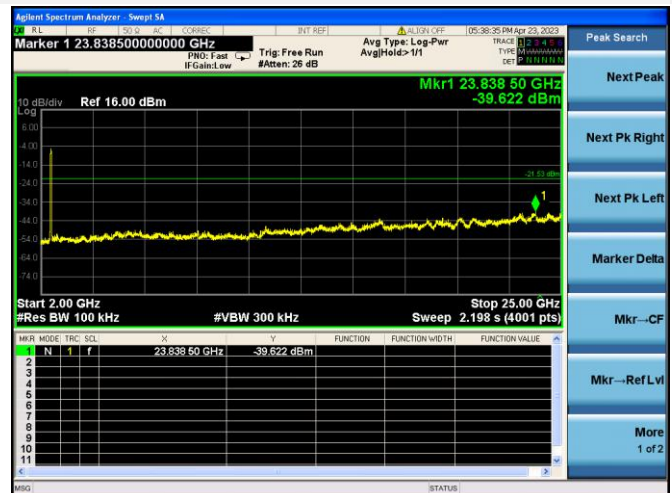


### VHT-20 MHz CHANNEL 1 CARRIER LEVEL



 
### VHT-20 MHz CHANNEL 1, SPURIOUS 30 MHz ~ 3 GHz

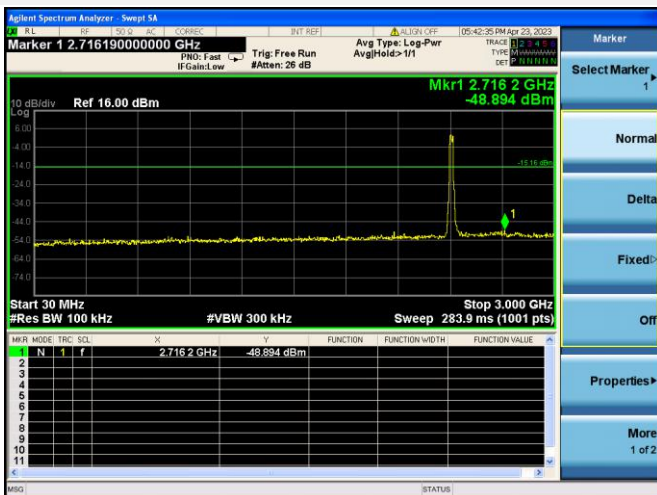


### VHT-20 MHz CHANNEL 1, SPURIOUS 2 GHz ~ 25 GHz

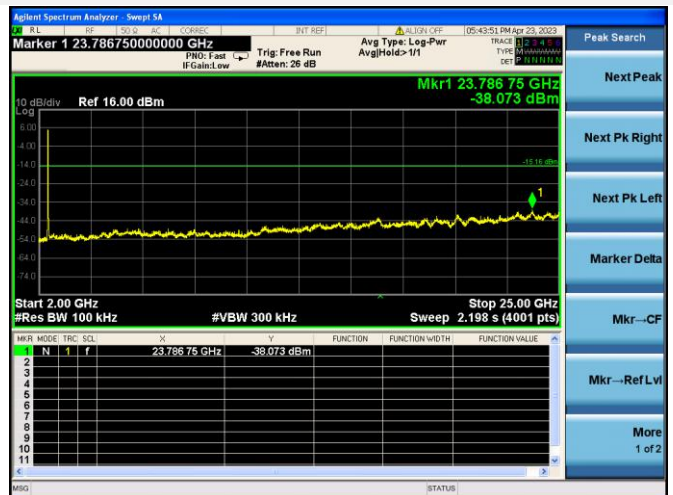 


### VHT-20 MHz CHANNEL 2 CARRIER LEVEL

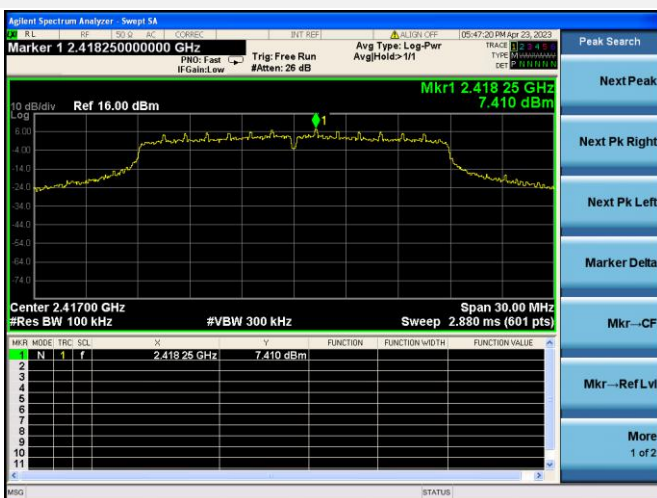 

 
VHT-20 MHz CHANNEL 2, SPURIOUS  
30 MHz ~ 3 GHz

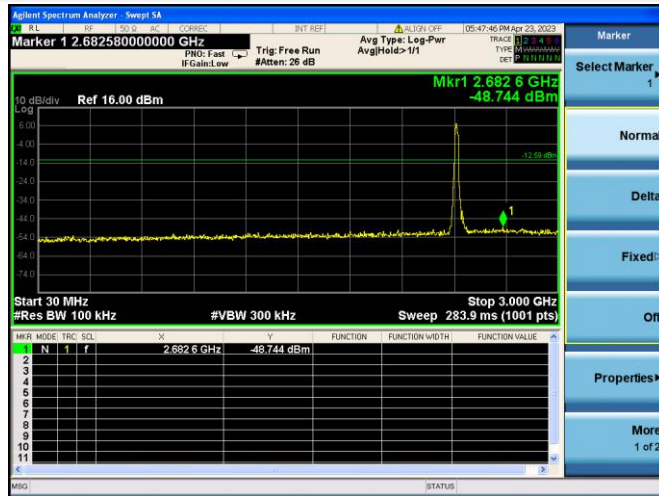

 
VHT-20 MHz CHANNEL 2, SPURIOUS  
2 GHz ~ 25 GHz

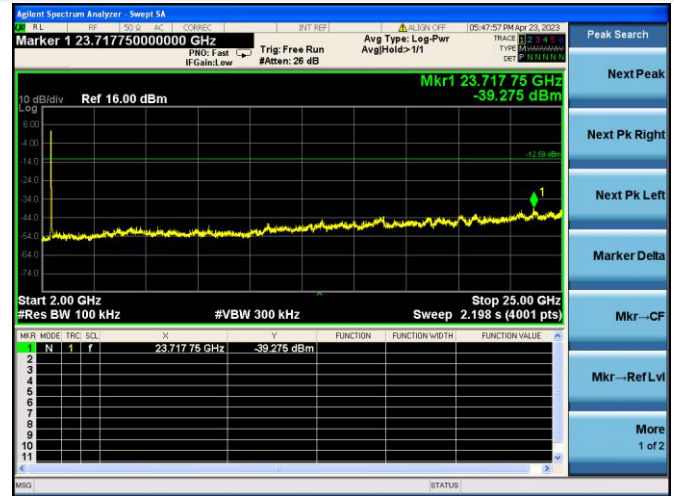


VHT-20 MHz CHANNEL 6 CARRIER LEVEL

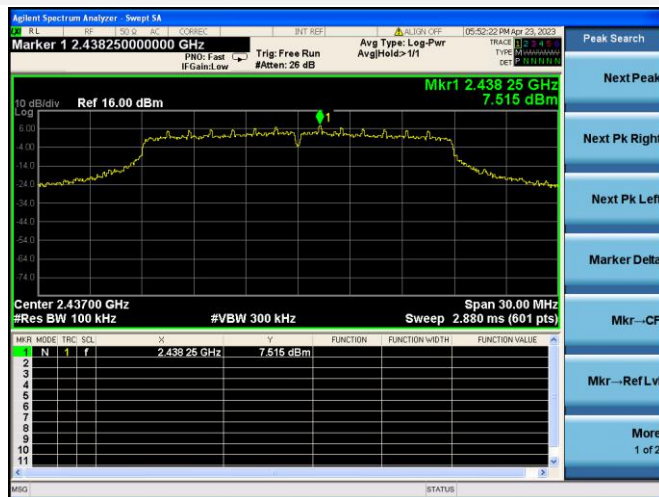 

 VHT-20 MHz CHANNEL 6, SPURIOUS  
2 GHz ~ 25 GHz

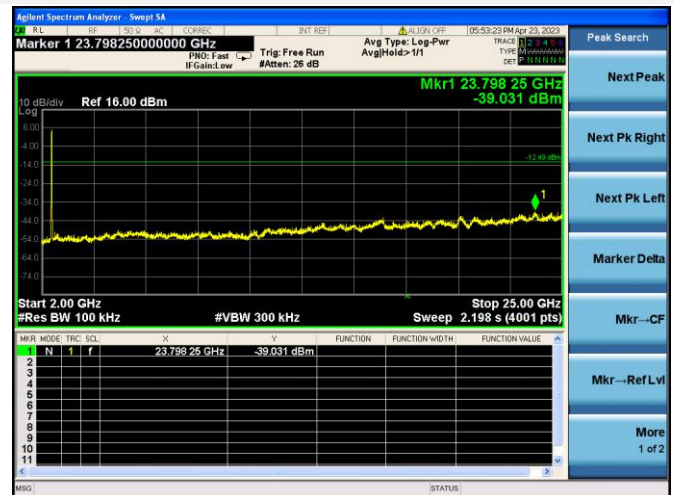

 
VHT-20 MHz CHANNEL 6, SPURIOUS  
30 MHz ~ 3 GHz

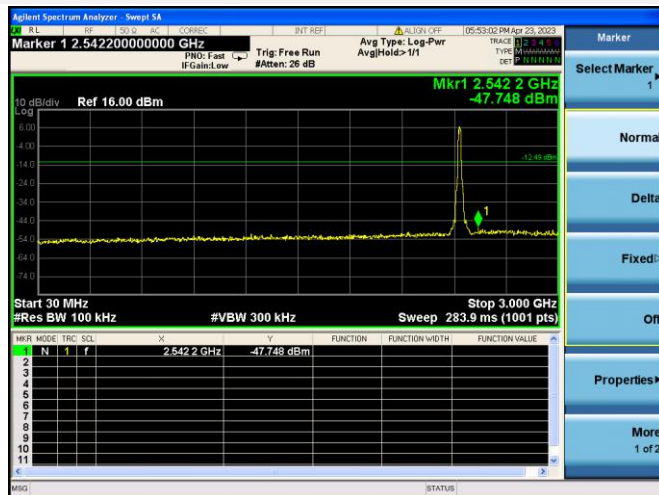


### VHT-20 MHz CHANNEL 8 CARRIER LEVEL


 
### VHT-20 MHz CHANNEL 8, SPURIOUS 30 MHz ~ 3 GHz

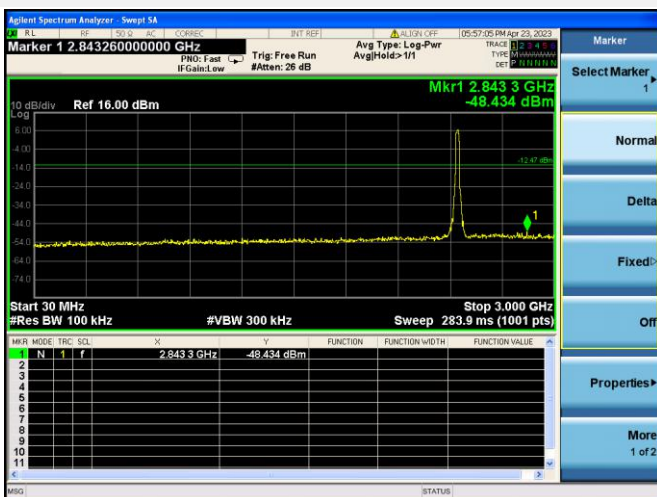


### VHT-20 MHz CHANNEL 8, SPURIOUS 2 GHz ~ 25 GHz

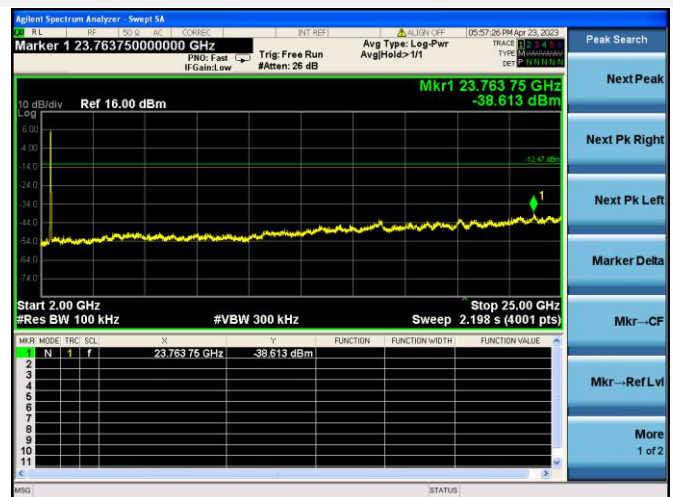 


### VHT-20 MHz CHANNEL 9 CARRIER LEVEL



 
VHT-20 MHz CHANNEL 9, SPURIOUS  
30 MHz ~ 3 GHz

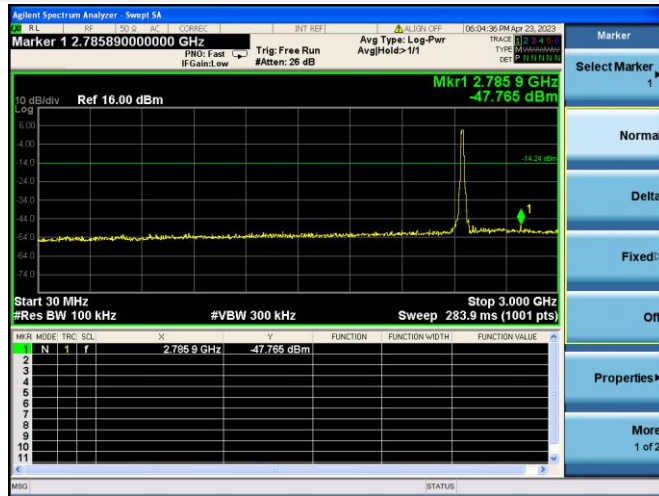

 
VHT-20 MHz CHANNEL 9, SPURIOUS  
2 GHz ~ 25 GHz

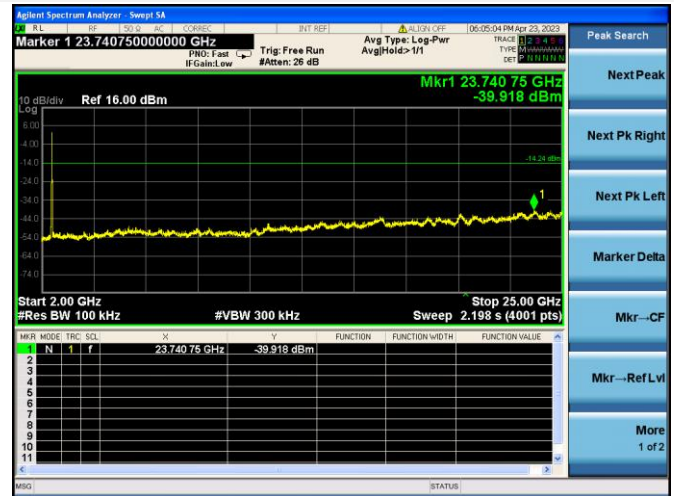


VHT-20 MHz CHANNEL 10 CARRIER LEVEL

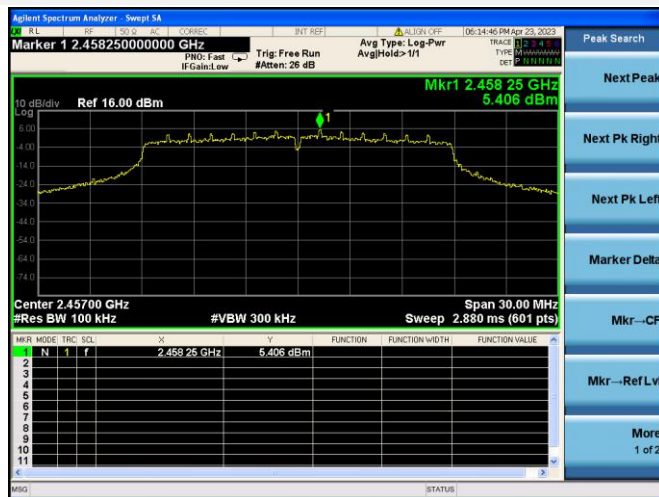 

 VHT-20 MHz CHANNEL 10, SPURIOUS  
30 MHz ~ 3 GHz

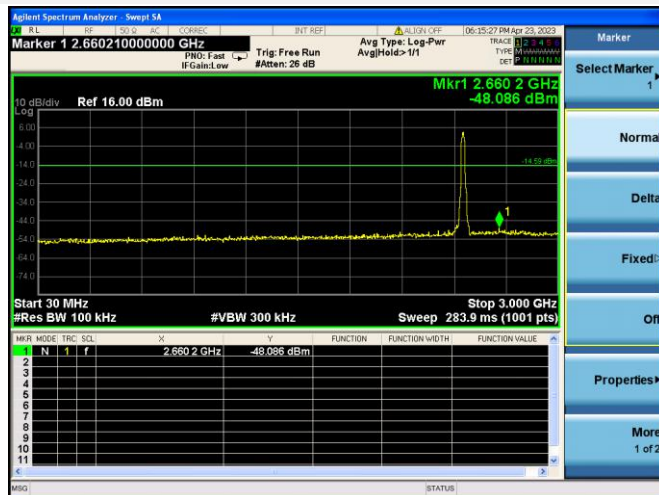

 VHT-20 MHz CHANNEL 10, SPURIOUS  
2 GHz ~ 25 GHz

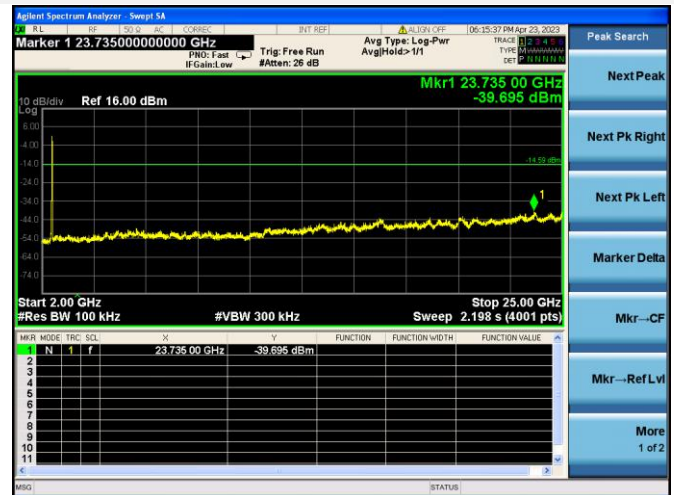





### VHT-20 MHz CHANNEL 11 CARRIER LEVEL


 
### VHT-20 MHz CHANNEL 11, SPURIOUS 30 MHz ~ 3 GHz

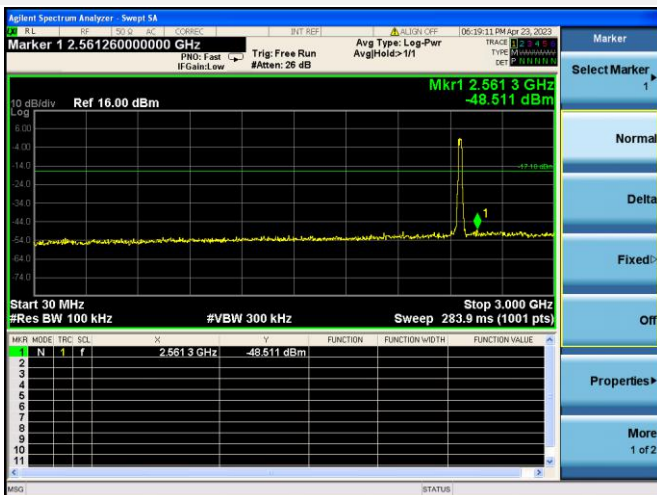

### VHT-20 MHz CHANNEL 11, SPURIOUS 2 GHz ~ 25 GHz

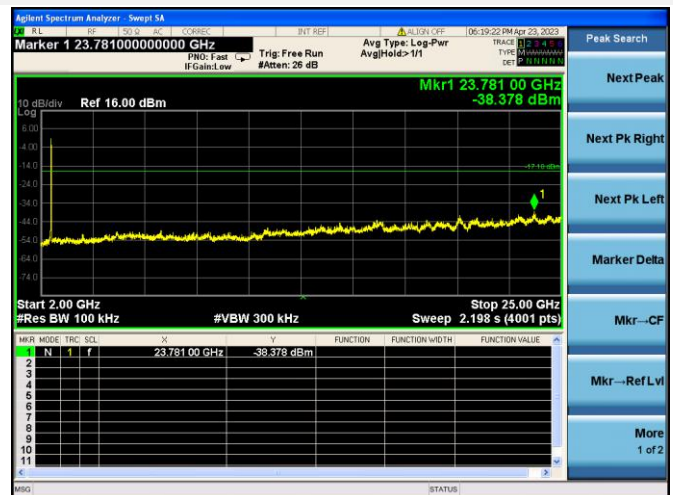 

### VHT-40 MHz CHANNEL 3 CARRIER LEVEL

