

1

2

3

4

5

6

Remark

Description

Editor

Date

A

A

FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

HUIZHOU MTN WEYE TECHNOLOGY DEVELOPMENT CO.,LTD.
Address: No.22 Huihai Road Huzhou High-tech Industrial Park,Huzhou Avenue,Huzhou City, Guangdong Province,China

Package Contents Wireless Router * 1
Power Adapter * 1
Quick Installation Guide * 1
Network cable * 1

24hour Online After-Sales Service Scan QR Code To Visit: <https://hmk.aftersales.com>



More detailed instruction can be downloaded from www.hmk.com

More Features
In addition to some of the settings described above, there are more functions. Including QOS, Firewall, Port Mapping, Static Route, etc. For more instructions, please refer to the website: <https://hmk.aftersales.com>

II. Hardware
1 Power Button: Press the Power Button to power on/off the router.
2 LED Button: Press the LED Button to light on/off the LED indicator lights.
3 Wi-Fi Button: Press the Wi-Fi Button to startup/shutdown the router's Wi-Fi.
4 Reset Pinhole: Keep stick the Reset Pinhole for more than 10 seconds, the product will restore factory settings.
5 DC Port: The DC Port can connect to the power.
6 WAN Port: The WAN Port can connect this router to the internet.
7 LAN Port: There are 4 LAN Ports in total. The LAN Ports can connect wired devices such as computers or switches.
8 USB Port: The USB Port is used to connect devices that support USB 3.0, and can also support USB 2.0.
9 Power LED Indicator:
• Solid green: The device is ready.
• Off: Power is not supplied to the router.

10 WAN LED Indicator:
• Solid green: WAN port has been connected with network cable.
• Blinks green: WAN port has data transmission.
• Off: The router is not connected to the internet.


11 LAN LED Indicator:
• Solid green: LAN port has been connected with network cable.
• Blinks green: LAN port has data transmission.
• Off: The router is not connected to the LAN.

12 2.4G LED Indicator:
• Solid green: There are devices connected to the 2.4G band of the router.
• Off: There are no device connected to the 2.4G band of the router.

13 5G LED Indicator:
• Solid green: There are devices connected to the 5G band of the router.
• Off: There are no device connected to the 5G band of the router.

14 USB LED Indicator:
• Solid green: U disk has been inserted.
• Off: No U disk has been inserted.

III. FAQ
1.Q: Why can't I log in to the web UI of the router?
A: Step 1: Please confirm that your devices connect to the HNK-AX1800 router.
Step 2: Please confirm if your IP address is "192.168.0.1".
Step 3: Please confirm both the user name and password is "admin".

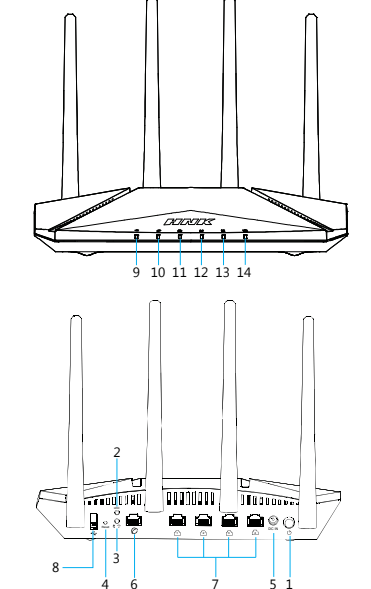


2.Q: How can I reset the router?
A: Method 1: When the power is on, using the router's "Reset" pinhole for 10 seconds to restore the factory settings.
Method 2: Please log in to the management page (IP address is "192.168.0.1") and click the "Management->System Admin->System", then click on "Restore Factory" button to restore the factory setting.

3.Q: How can I change my admin password?
A: Please log in to the management page (IP address is "192.168.0.1") and click the "Management->System Admin". In this interface, you can change the admin password.

4.Q: How to change my network name and password?
A: Please log in to the management page (IP address is "192.168.0.1") and click the "Settings->Wireless". In this interface, you can change your network name and password.

5.Q: How can I select my connection type?
A: Please log in to the management page (IP address is "192.168.0.1") and click the "Settings->Internet". In this interface, you can choose your connection type.




封底

封面


B

B


I. Set up the new router for internet access
Step 1: Enter the IP address.
1. Launch a web browser from a computer or mobile device that is connected to the network.
2. Enter 192.168.0.1 to open a login window.
3. In the Password field, type the password to log into the management interface. The default admin password is empty.

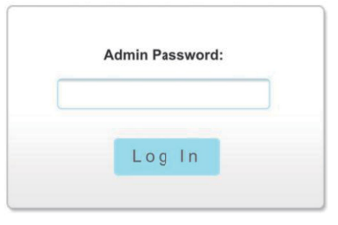

Step 2: Open the configuration wizard page
If this is the first time using the router, the page will automatically jump to the configuration wizard page. If the configuration wizard page doesn't show up, you can click the "Settings->Wizard" for your initial setup.

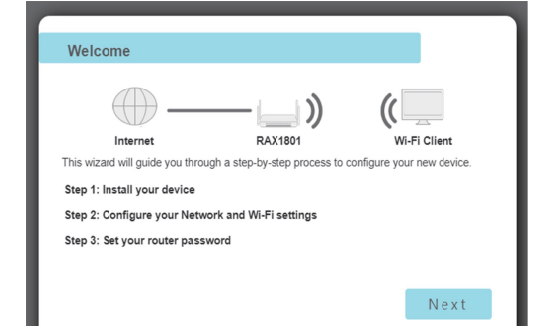


Step 3: Configure your internet connection
Please select your internet connection type.

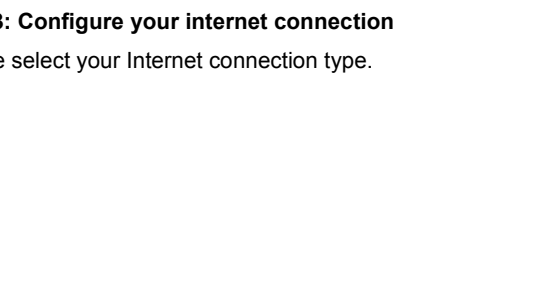


Note: The password you entered in this step is not the Wi-Fi password, it is the password for the router's management interface. If you cannot log into the web UI of the router, refer to the Q1 in FAQ.


Step 4: Set up your Wi-Fi
To setup a Wi-Fi network you need to give your Wi-Fi network a name(SSID) and password.

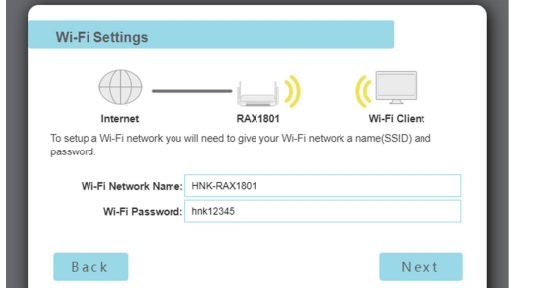


Configure Your Internet Connection
Please select your internet connection type.

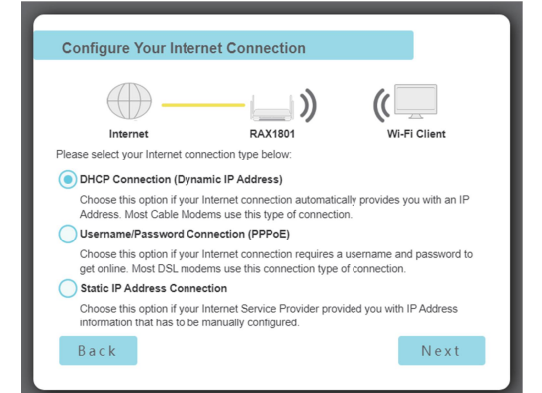


Step 5: Set your device admin password
By default, your new device does not have a password configured for administrator access to the Web-based configuration utility. To secure your new device, please create a password below.

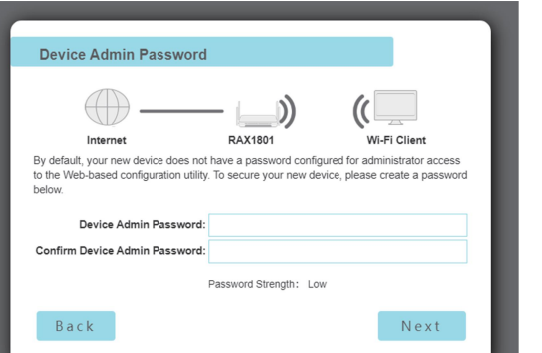


Step 6: Check out the setting summary and finish initial setting
A setting summary will show up to you for checking. If everything is okay, click on "Next" to finish the initial setting steps.

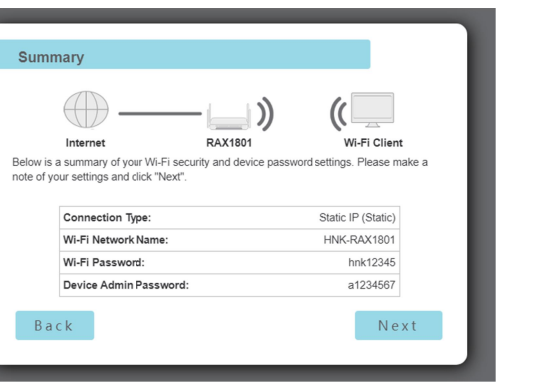


Guest Network
1. Please log in to the management page. The IP address is "192.168.0.1".
2. Click "Settings->Wireless->Guest Zone" to the guest network setting page.
3. Configure the settings for your guest, including time limit, internet resources, 2.4GHz settings.
4. Click on the "Save" button to save your configuration settings. Then you can separate your network route to your guest.

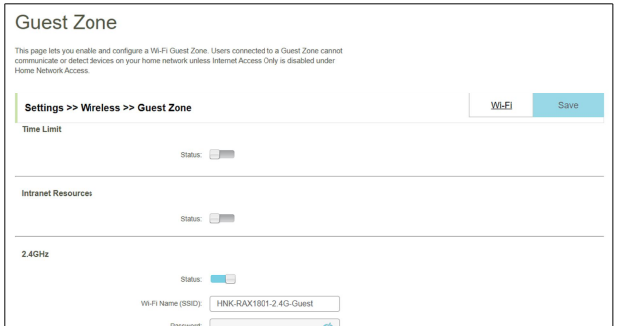

Dual Band Settings
1. Please log in to the management page. The IP address is "192.168.0.1".
2. Click "Settings->Wireless" to the wireless setting page.
3. Turn off the "Smart Connect" button, then show on the dual band settings.
4. Configure the router 2.4G or 5G Wi-Fi SSID and password.

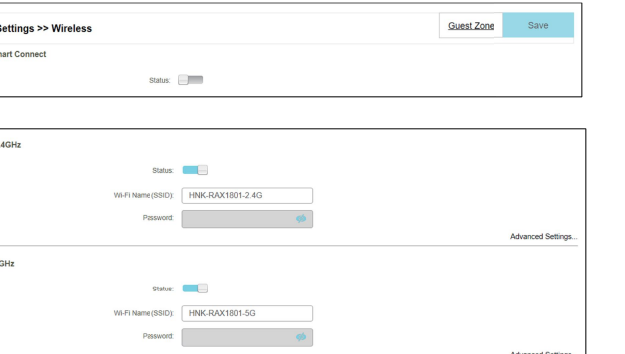

5. If you want more settings of the dual band, click on "Advance Settings". Then the advance settings interface will show on.

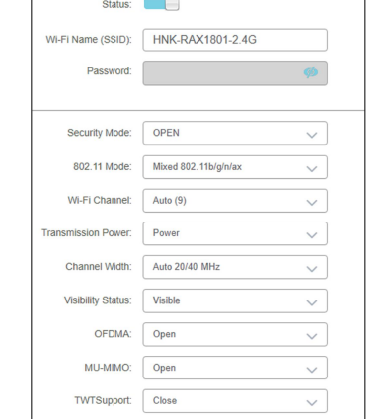

6. Click on the "Save" button to save your configuration settings.

— 1 —

— 2 —

— 3 —

— 4 —

C

C

NOTES(技术要求):

- 1.成品尺寸: 220*145mm, 展开尺寸: 880*145, 公差±1mm.
- 2.材质: 105g亚粉纸
- 3.印刷要求: 四色印刷
- 4.装订要求: 风琴折, 封面封底在外
- 5.原材料及后处理工艺均能满足ROHS2.0, HF及WEEE的要求.

DIM	TOL±		▲	C4	
	C1	C2			C3
RANGE	0~6	0.1	0.1	0.15	0.2
	6~30	0.2	0.3	0.4	0.5
	30~80	0.25	0.5	0.9	1.2
	80~180	0.3	0.8	1.2	1.5
	180~315	0.5	1.3	1.8	3
	315~500	0.7	1.5	2.5	4
	500~800	0.9	1.8	3	5
ANG.TOL±	0°~30°/0.1°	30°~60°/0.3°	60°~90°/0.5°		

	CUSTOMER:		 深圳市迈腾电子有限公司 SHENZHEN MTN ELECTRONICS CO.,LTD www.mtncn.com			
	HNK		MODEL:		PART NO.:	
TITLE:	MANUAL		MTO-WR1806AX		17.P6.700009S01 17.P6.700009S02	
UNIT'	S mm	VER:	A0	DRAW	丁慧明	DATE:2021-01-15
MAT'	L /	SCALE	1:1	CHECK	邬立平	
FINISH	/	SHEET	1/1	APPD	N/A	

1

2

3

4

5

6

D

D