




# USER MANUAL

# MANUAL DE USO



SP5730

# Tablet and button diagram

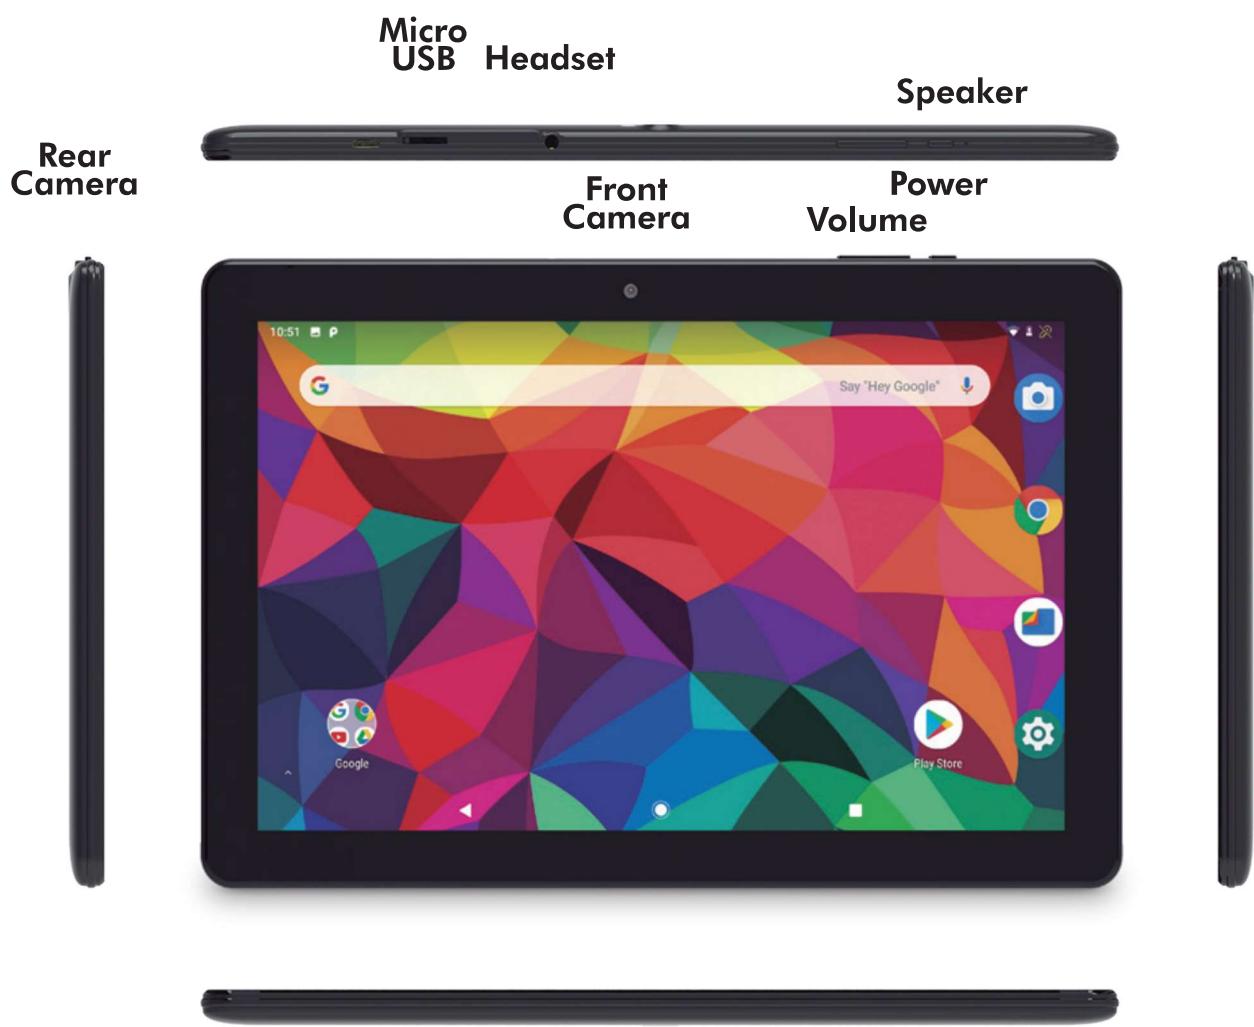

# Quick Start Guide

## 1. Buttons Function

### TABLET:

Power button	Press briefly to turn the screen on or off, press for a few seconds to start and turn off the tablet.
Volume + (up)	Increase volume.
Volume - (down)	Decrease volume.
Start button (Start) 	Click to return to the main interface.
Back button (Back) 	Click to return to the previous menu.
Setting button 	It will show recently browsed history.

### NOTE:

### EXTERNAL KEYBOARD

The Windows start key  is only functional with computers with Windows operating system in all its versions.

## 3. Power and off

### Power

Press and hold the POWER button for a few seconds to start the system. If it enters screen lock status, unlock it.

### Off

1. With the tablet on, press and hold the power button and the closing window will open.
2. This window contains the modes: silence, airplane, restart and shutdown.
3. Click on OFF, is the last step.

**Note: The tablet operates with a monaural sound.**

### 3. Open and close the screen


**The screen will close on its own when no operation is performed.**

1. The screen will close on its own if no operation is performed for a while to save battery power.
2. When the screen is open, press the POWER button. The screen will close immediately.

**To open the screen when it is closed.**

If the screen is closed, press POWER briefly to open. The screen will open, Figure 1 will be displayed. To unlock the screen, slide the open lock icon up.

**Figure-1**

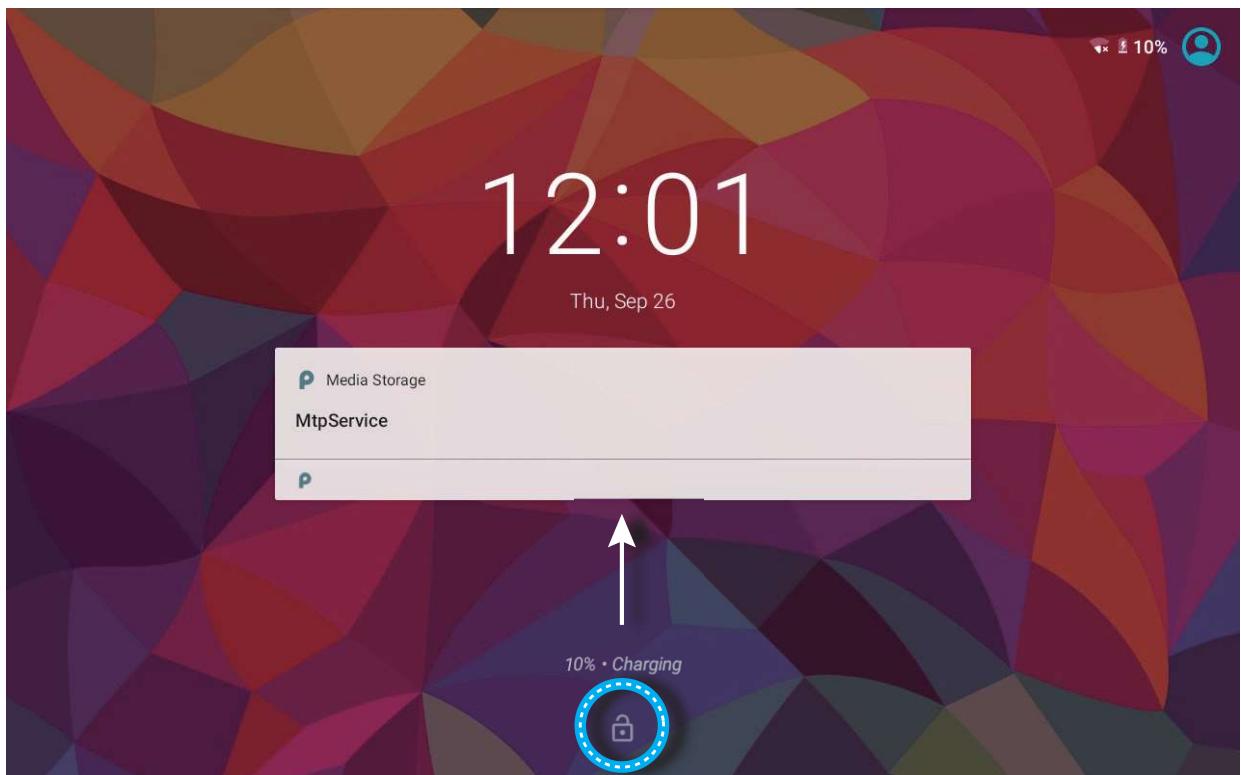

## **4. Using the touch screen**

### **Operation methods**

There are methods to see the main screen, the menu and the application procedure on your tablet.

#### **Click**

You only have to touch the screen with your finger when you want to use the keyboard or choose an application in the main interface.

#### **Go ahead**

Click on this item if you wish to open an item (text box or link on the web page).

#### **Slide / Slide quickly**


Indicates a rapid vertical or horizontal movement with your finger.

#### **Turn**

For most images, it is only necessary to turn the tablet sideways to change the direction of the screen from horizontal to vertical. For example, when you are writing words and watching movies.

## 5. Homepage

Figure 2 shows the distribution of the interface and the icons that make it up:

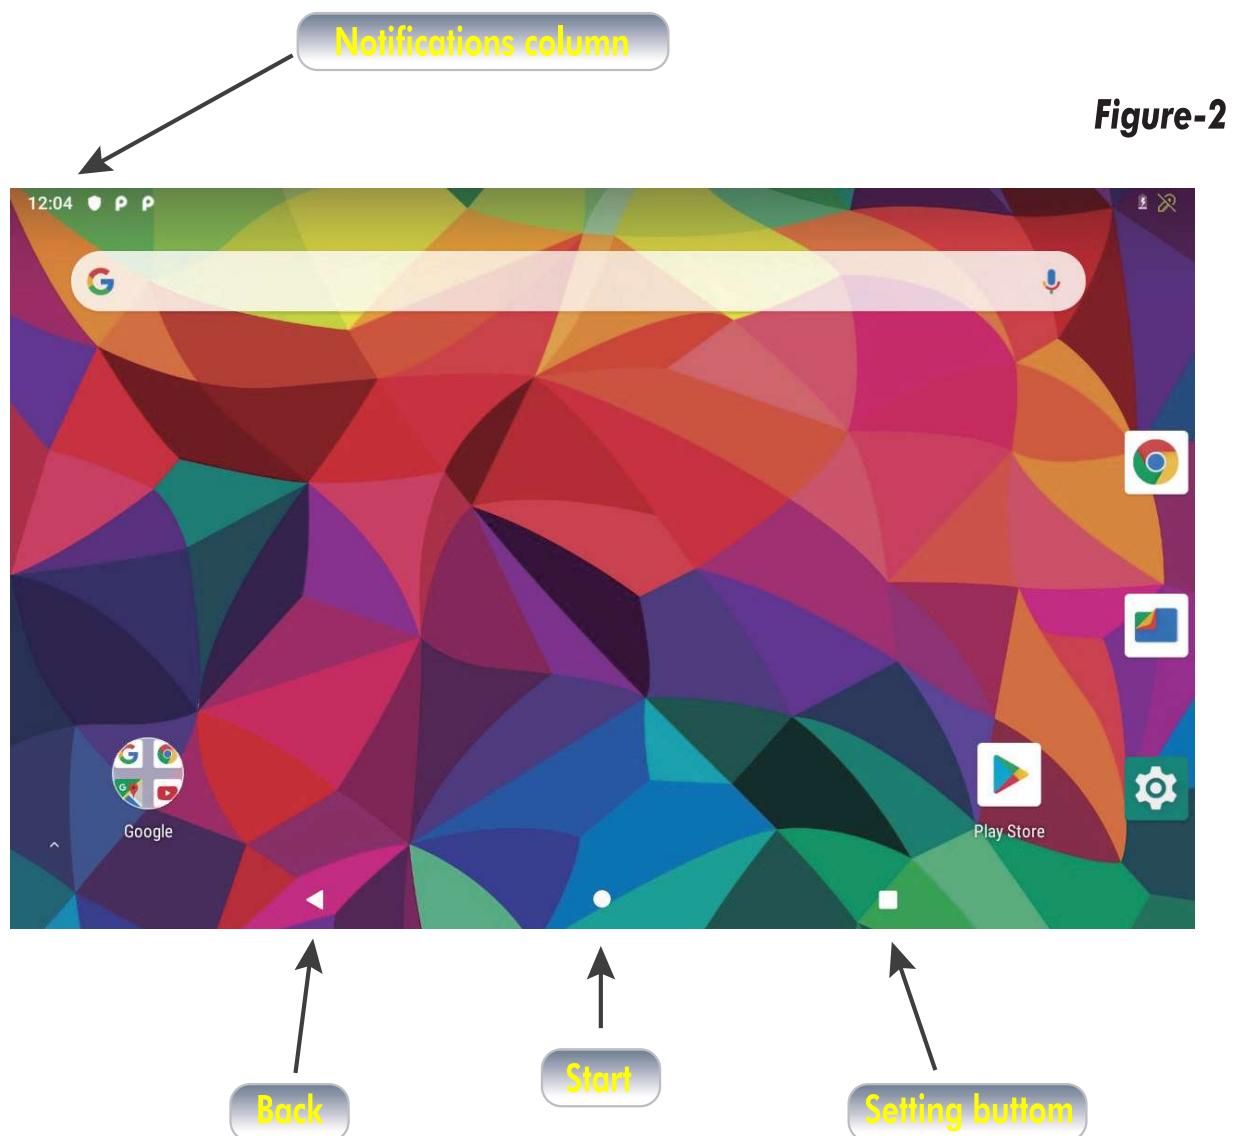

## Extended Start Page

The homepage can be extended beyond the breadth of the screen to provide more space, which can put new shortcuts and widgets. Click on the empty space on the main page and then slide it to the right or left to extend on both sides of the screen.

**Figure-3**



## Application desktop shortcut icon management

Create a folder icon on the desktop

- Drag the icons to be put together in an icon (it can also overlay several icons) like Figure 4.
- Next, click on the overlapping icons, the applications can be folded, like Figure 5.

Click on the "unnamed folder", the keyboard will open, so the folder name can be changed.



Figure-4



Figure-5

## Delete icons on the desktop

- Press and hold and drag the icon you want to delete, the “delete” icon X will be displayed at the top of the screen.
- Drag the icon to be deleted to the delete icon, it will be deleted.

## Change the wallpaper

- On the home page press in any empty space of the main screen, a window will appear to change the wallpaper.
- Click on the gallery or the gallery of backgrounds to select the wallpaper.

## 6. Accessing applications

Slide up, figure 6, then choose the application you want to use.

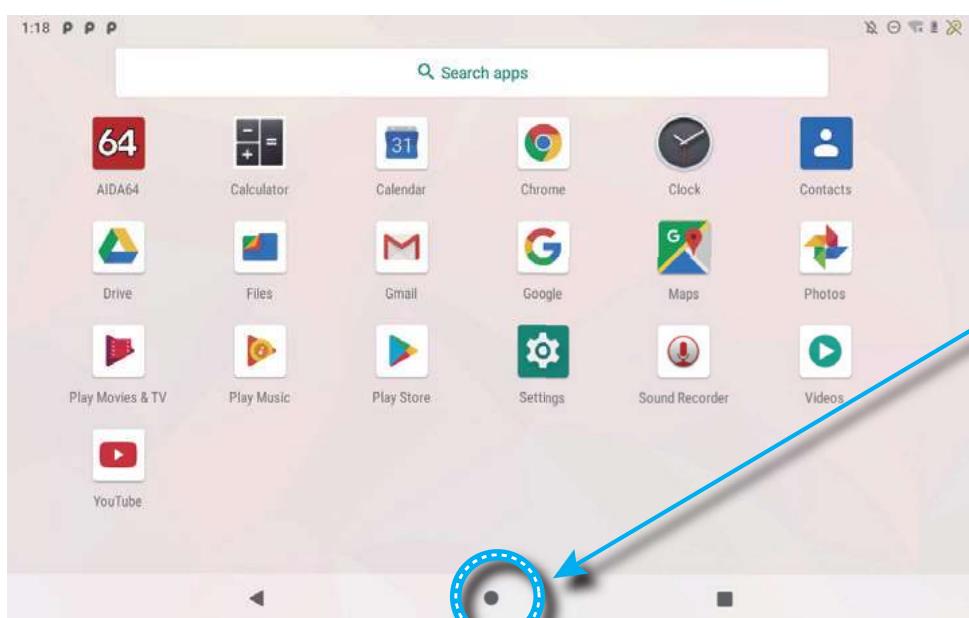


Figure-6


## 7. USB connection

### Tablet storage settings

Before transferring documents, you must perform storage settings on your tablet:

- a) Connect the tablet to the computer using the USB cable, in the notification area it will seem a message.
- b) Open the message to see the USB connection options.
- c) The USB Preferences will appear, as in Figure 7, then click on “file transfers”.
- d) Now the USB is connected correctly.

**Figure-7**

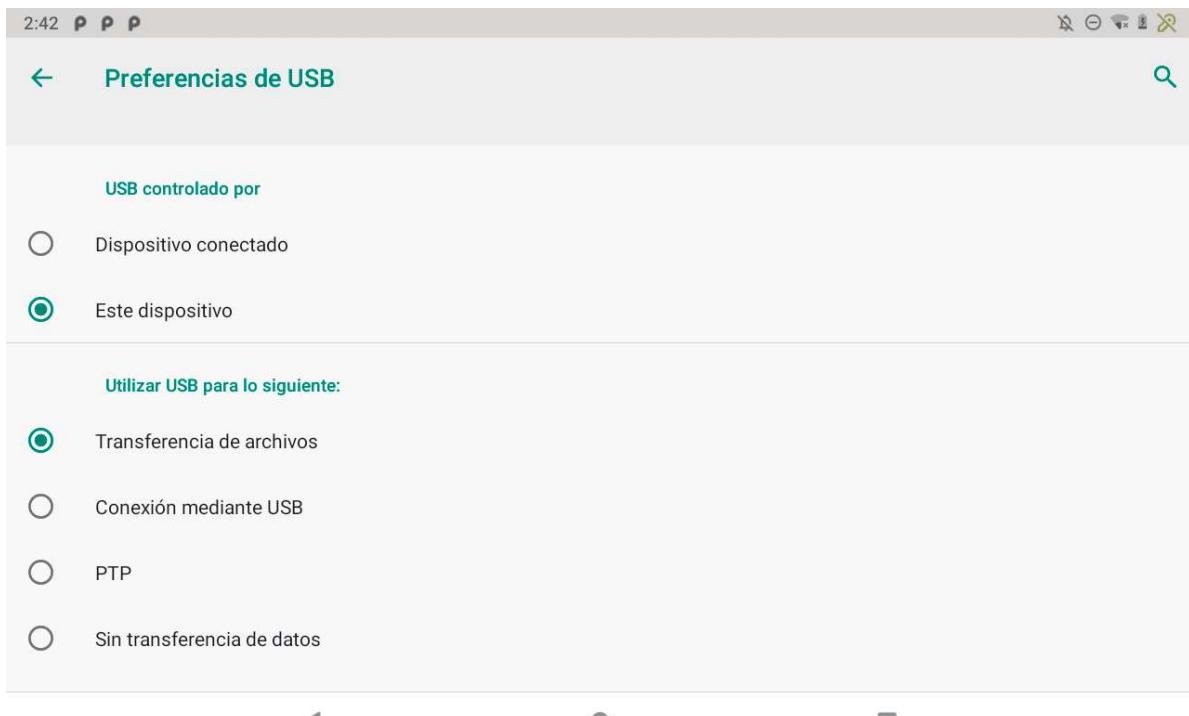

## **Copy a document to the memory card**

- a) Connect the tablet to the computer with the USB cable.
- b) In tablet storage settings, click on “file transfers”.
- c) Open the "My Computer" on your computer, then open SP5730 check the items in "SD Card".
- d) Copy the documents you need in “SD Card”.
- e) After copying the files, disconnect the USB cable.

## **8. Write words**

### **Use the on-screen keyboard**

When you start a procedure or choose to edit words or numbers, the screen keyboard will be displayed. The keyboard contains the following typing options:


#### **a) Android keyboard**

Choose the typing method you want

- Click on Settings.
- Click System.
- Click on languages and input.
- All keyboards installed on your tablet will be displayed on the virtual keyboard, by default it is on Gboard.
- Mark the typing method you want.

Use and change of input method

**Figure-8**

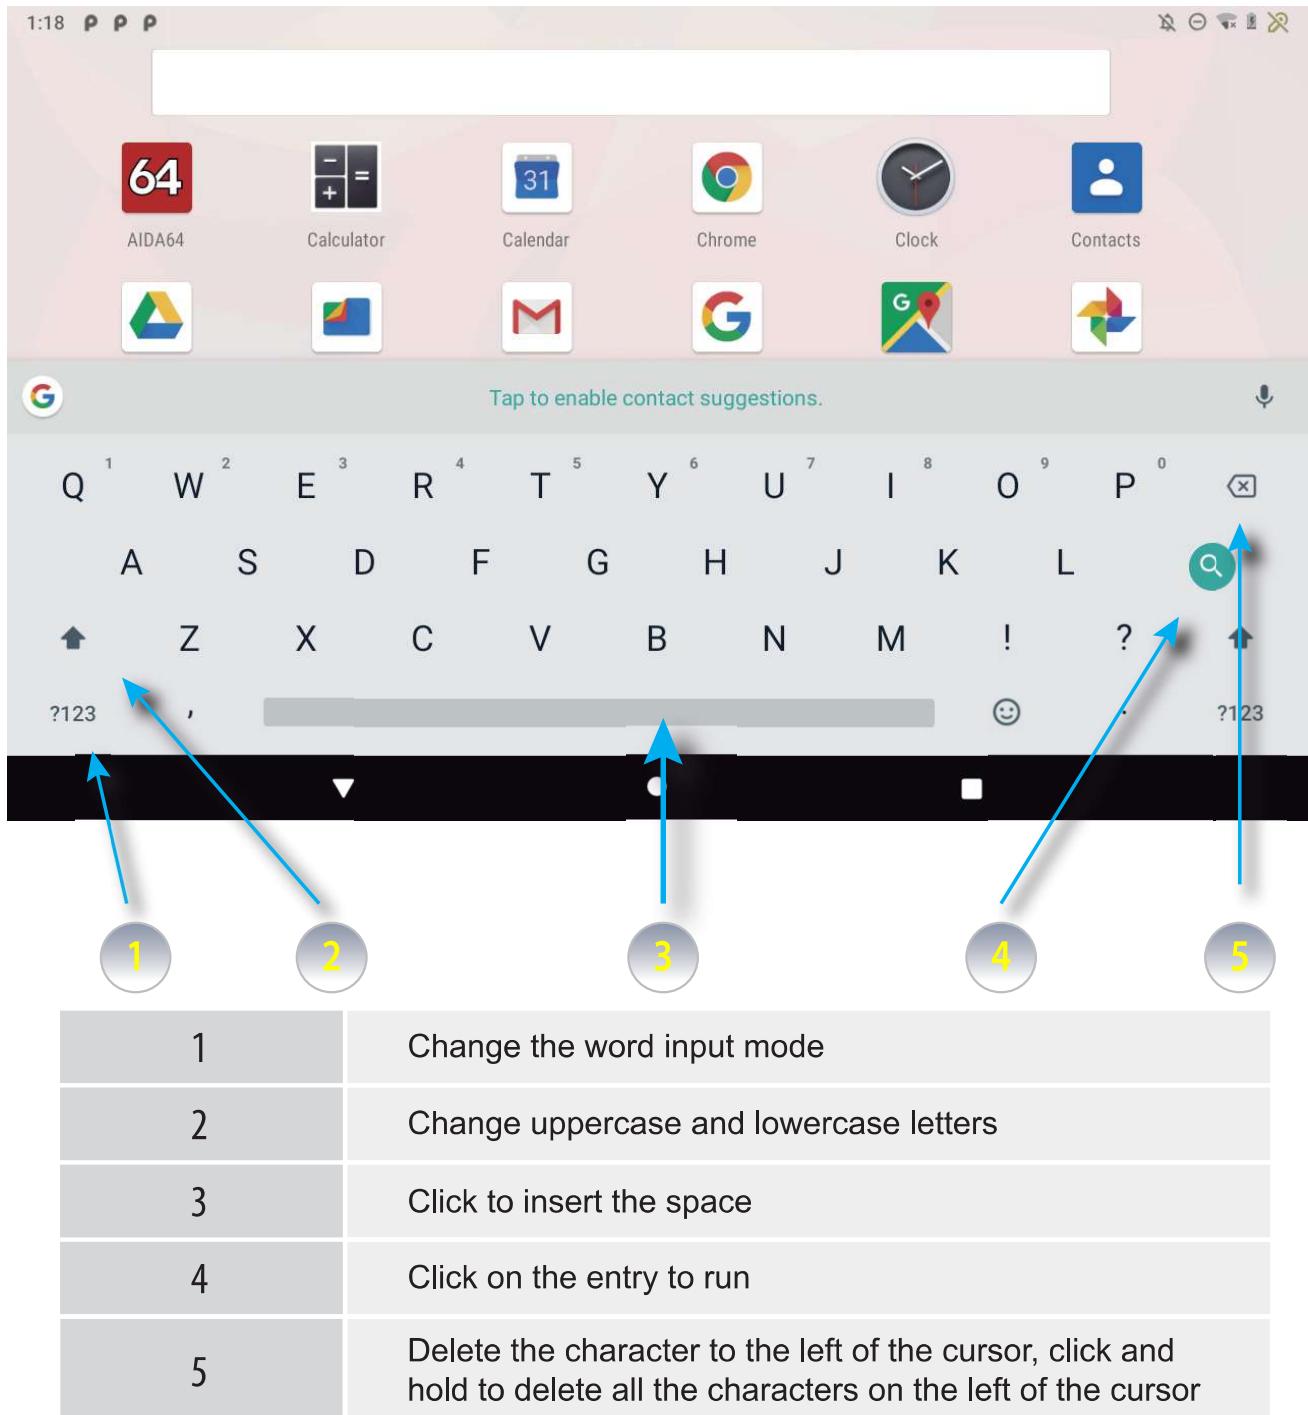

## 9. Operation technique

### Enter the widget interface

Touch the screen on an empty site, click on widgets then you can show the widget interface. Press any widget to create your shortcut, then you can enter the application through the shortcut icon.

### Create application shortcut icons on the desktop


In the application interface or widget interface, press any icon to automatically switch to the desktop, drag and hold the icon, you can move to any position on the desktop.

**Remember:** If the target position has no space, the widget will not be added on the main screen.

## 10. Quick setup

From the top, slide down, shortcut icons will be displayed, such as Wi-Fi, Bluetooth, Auto-rotation, etc. In the full list of quick settings you can also touch the edit button in the lower right to rearrange the tiles or replace them with others, as in Figure 9.


**Figure-9**

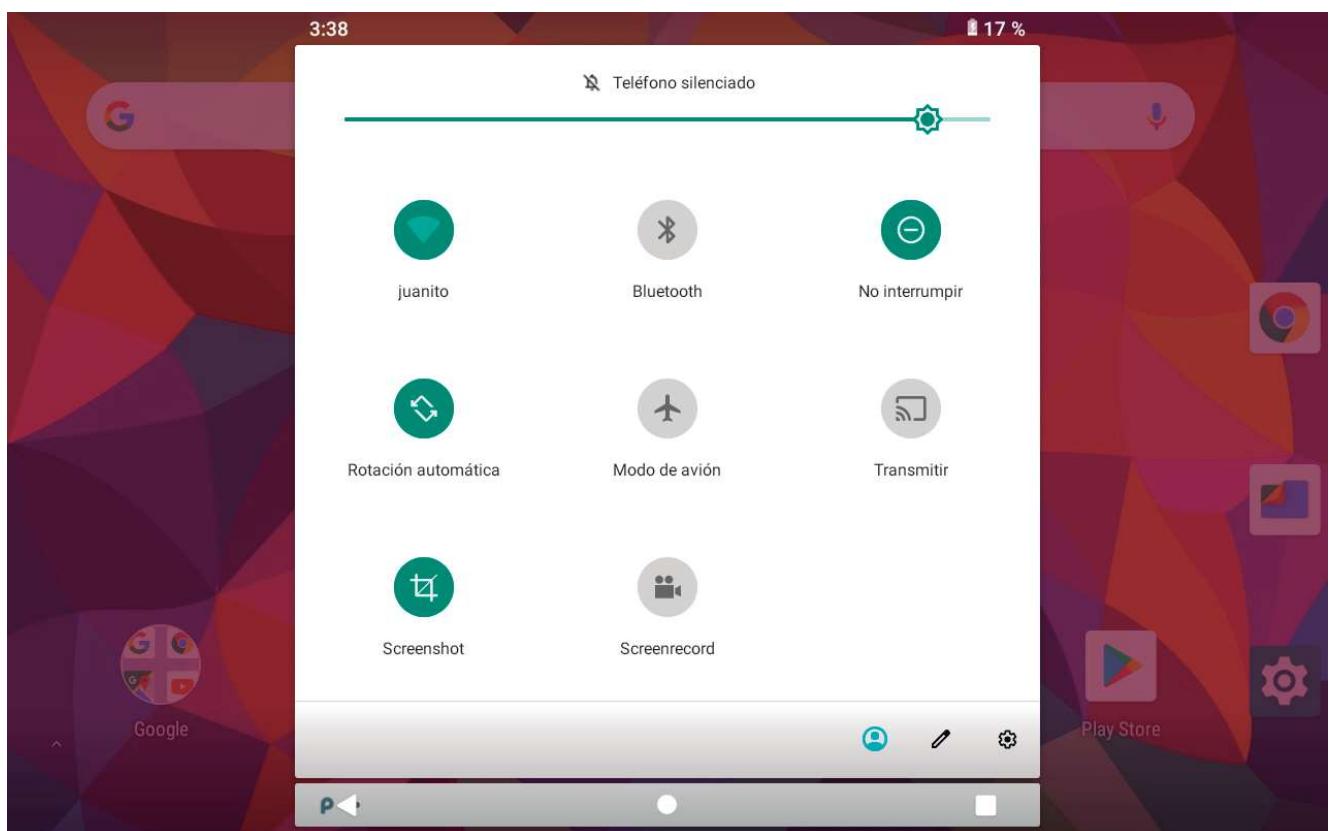


## 11. Hard Reset

This option allows you to return the tablet to the initial factory settings through a general reset, all information (data, applications, games, photos, etc.) will be permanently deleted.

- a) Make sure the tablet is turned off and then press the volume (+) button and the power button at the same time for 5 seconds, then release the buttons, the system startup logo will appear, you should Wait until I show you the recovery menu.


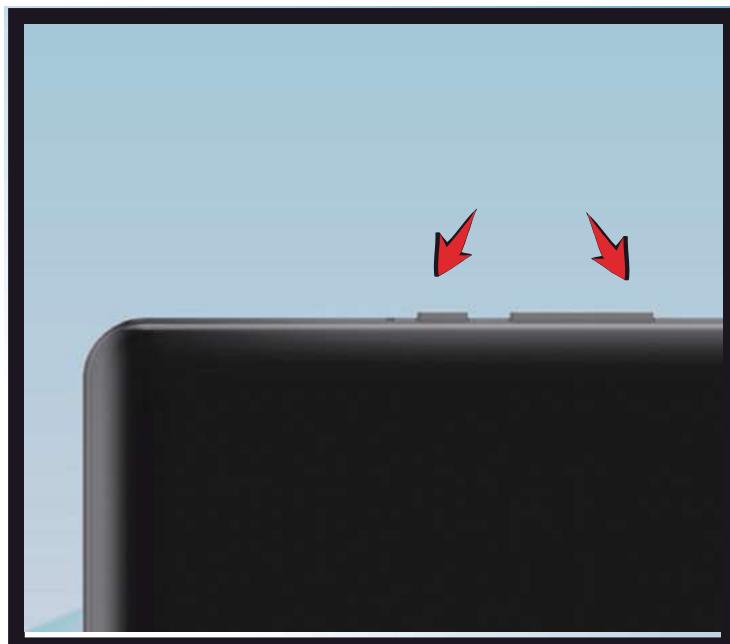


b) You will find the following interface.

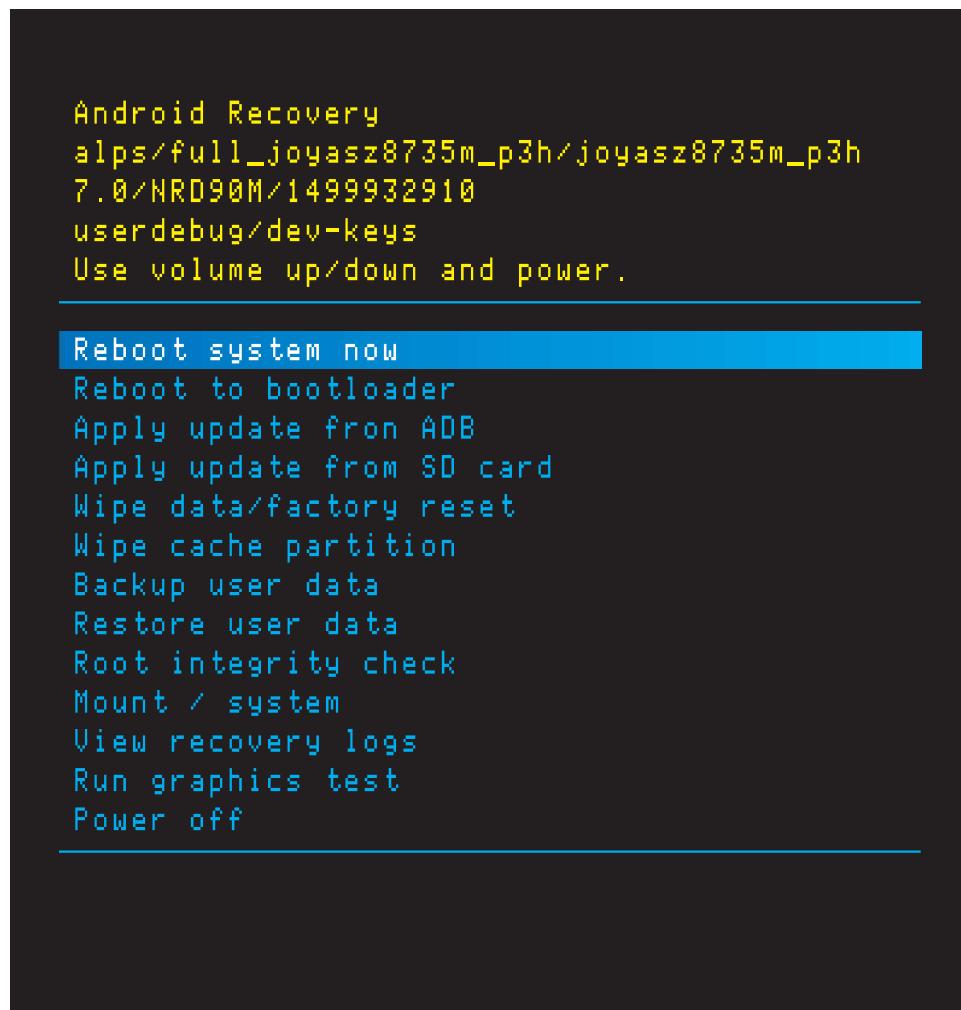


c) Choose the “Wipedata / factory reset” option with the volume (+) button and volume (-) button. Confirm with the power button.

d) It will show you the following interface, here you must select the option “Yes - delete all user data”. Remember that selecting this option will lose all your information.

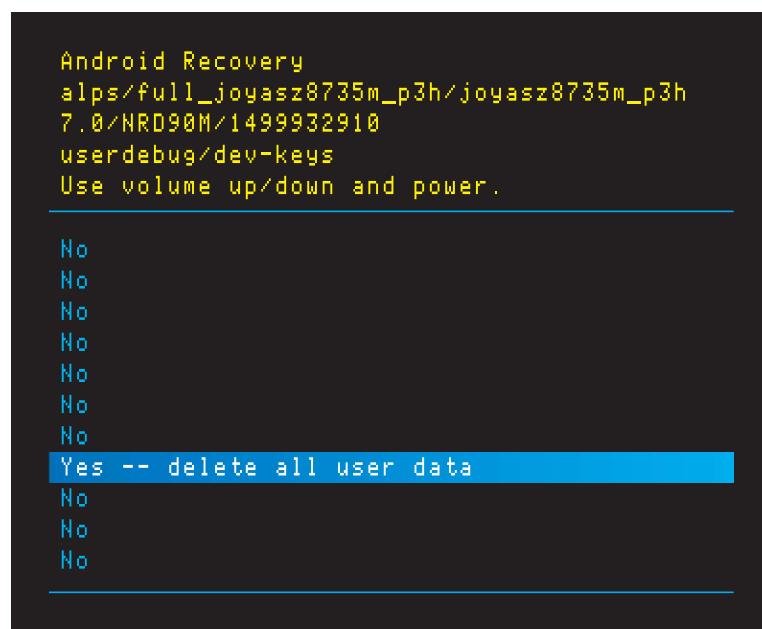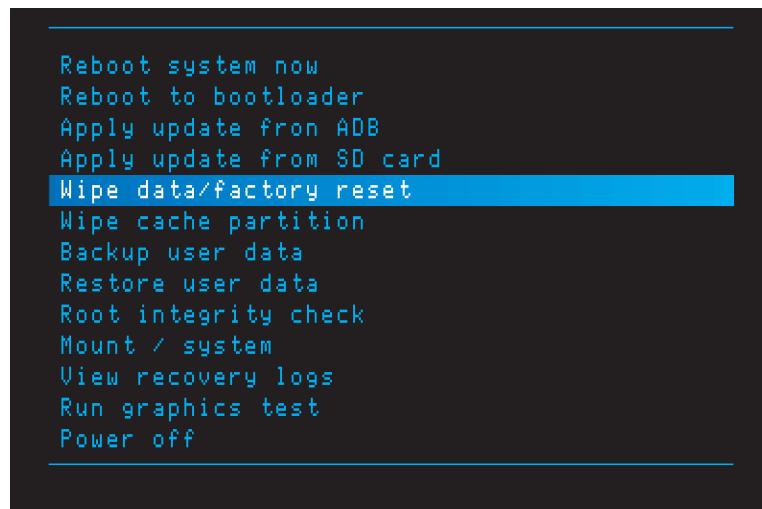

e) After restoring to factory mode it will show you the following interface:

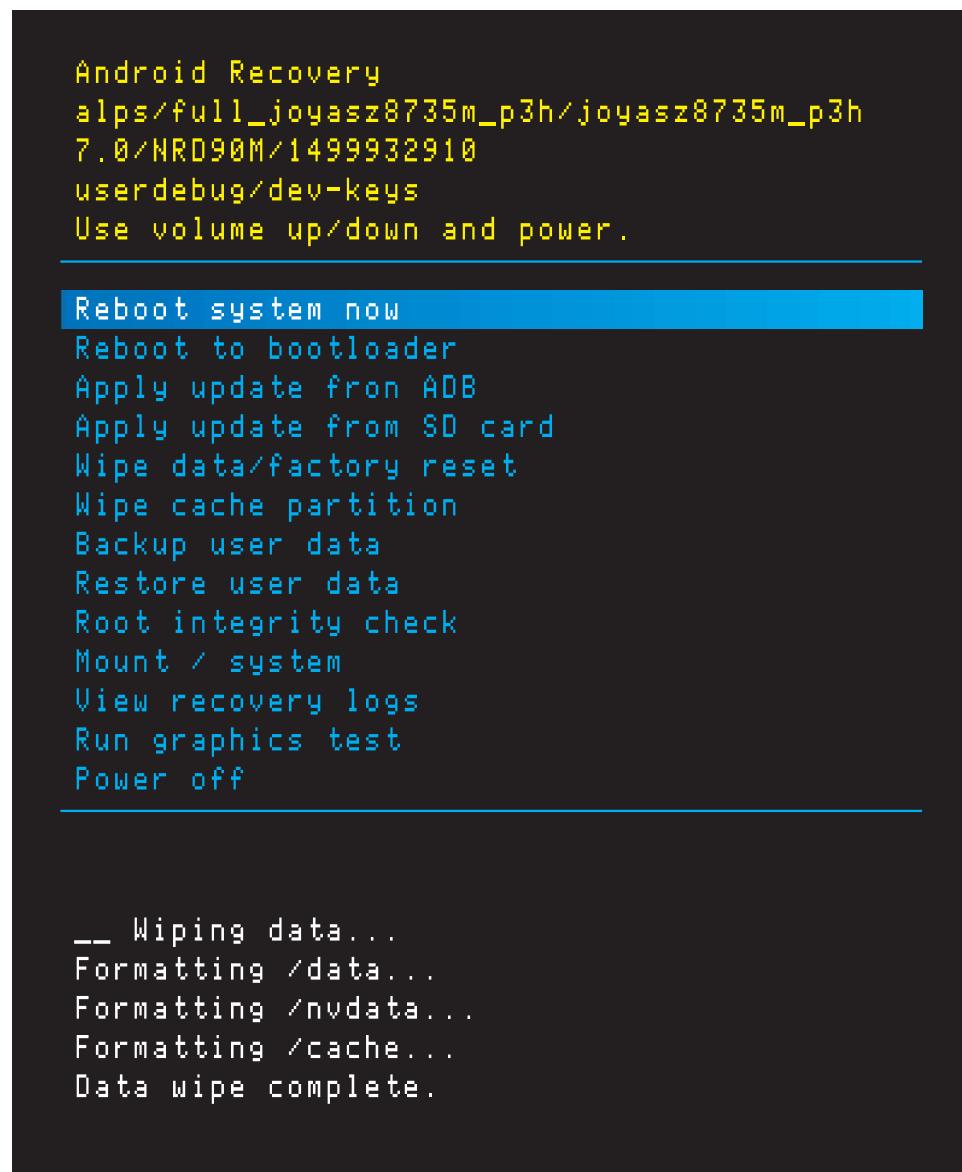

f) Choose the "reboot system now" option, now your tablet will start with the factory settings.

# Technical specifications



Screen 10.1" IPS  
800\*1280



All Winner A50  
1.8 GHz



RAM  
2GB



32GB  
Storage



Wifi



Front 0.3 MP  
Rear 2.0 MP



BT 4.0



Android 9



7000 mAh  
Battery



Supports 3G  
external Dongle



Includes micro USB  
to USB cable

# Diagrama de tablet y botones



# Guía de inicio rápido

## 1. Función de los botones

### TABLET:

Botón de encendido	Presione brevemente para encender o apagar la pantalla, presione por unos segundos para iniciar y apagar la tablet.
Volume + (arriba)	Aumentar volumen.
Volume - (abajo)	Disminuir volumen.
Botón de inicio (inicio) 	Haga clic para volver a la interfaz principal.
Botón de retroceso (atrás) 	Haga clic para volver al menú anterior.
Botón de ajuste 	Mostrará el historial navegado recientemente.

### NOTA:

### TECLADO EXTERNO

La tecla de inicio Windows  solo es funcional con equipos con sistema operativo Windows en todas sus versiones.

## 2. Encendido y apagado

### Encendido

Mantenga presionada el botón POWER durante unos segundos para iniciar el sistema. Si entra en estado de bloqueo de pantalla, desbloquéelo.

### Apagado

1. Teniendo la tablet encendida, presione durante unos segundos el botón de encendido y se abrirá la ventana de cierre.
2. Esta ventana contiene los modos: silencio, avión, reinicio y apagado.
3. Hacer clic en APAGAR, es el último paso.

**Nota: La tablet opera con un sonido monoaural.**

### **3. Abrir y cerrar la pantalla**

**La pantalla se cerrará por sí sola cuando no se realice ninguna operación.**


1. La pantalla se cerrará por sí sola si no se realiza ninguna operación durante un tiempo para ahorrar energía de la batería.

2. Cuando la pantalla está abierta, presione el botón de ENCENDIDO. La pantalla se cerrará inmediatamente.

**Para abrir la pantalla cuando está cerrada.**

Si la pantalla está cerrada, presione brevemente POWER para abrir. La pantalla abrirá, se mostrará la Figura 1. Para desbloquear la pantalla, deslice el icono del candado abierto hacia arriba.

*Figura-1*

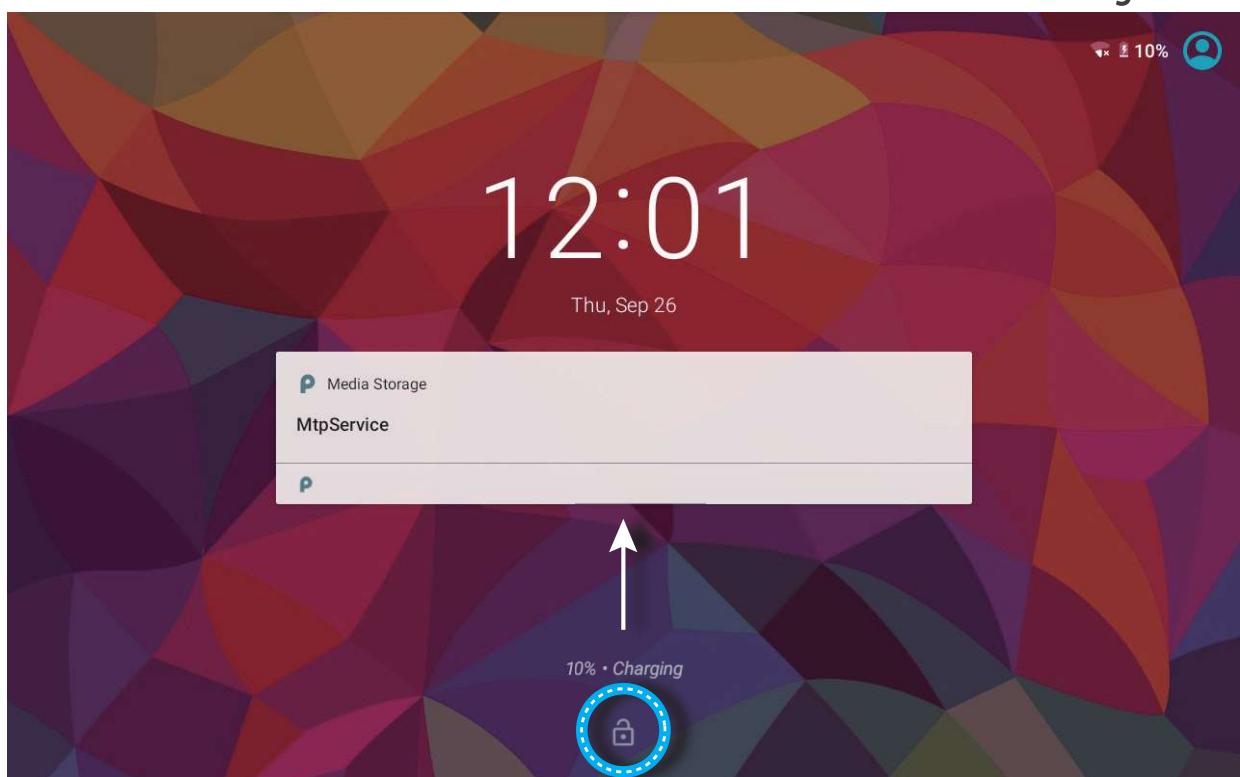

## 4. Uso de la pantalla táctil

### **Métodos de operación**

Hay métodos para ver la pantalla principal, el menú y el procedimiento de aplicación en su tablet.

#### **Hacer clic**

Solo tendrá que tocar la pantalla con el dedo cuando desee utilizar el teclado o elegir una aplicación en la interfaz principal.

#### **Seguir adelante**

Pulse sobre este elemento si desea abrir algún ítem (cuadro de texto o el enlace en la página web).

#### **Deslice/deslice rápidamente**


Indica un movimiento rápido vertical u horizontal con el dedo.

#### **Girar**

Para la mayoría de las imágenes, solo es necesario girar la tablet lateralmente para cambiar la dirección de la pantalla de horizontal a vertical. Por ejemplo, cuando está escribiendo palabras y viendo películas.

## 5. Página de inicio

La figura 2 muestra la distribución de la interfaz y los iconos que la conforman:

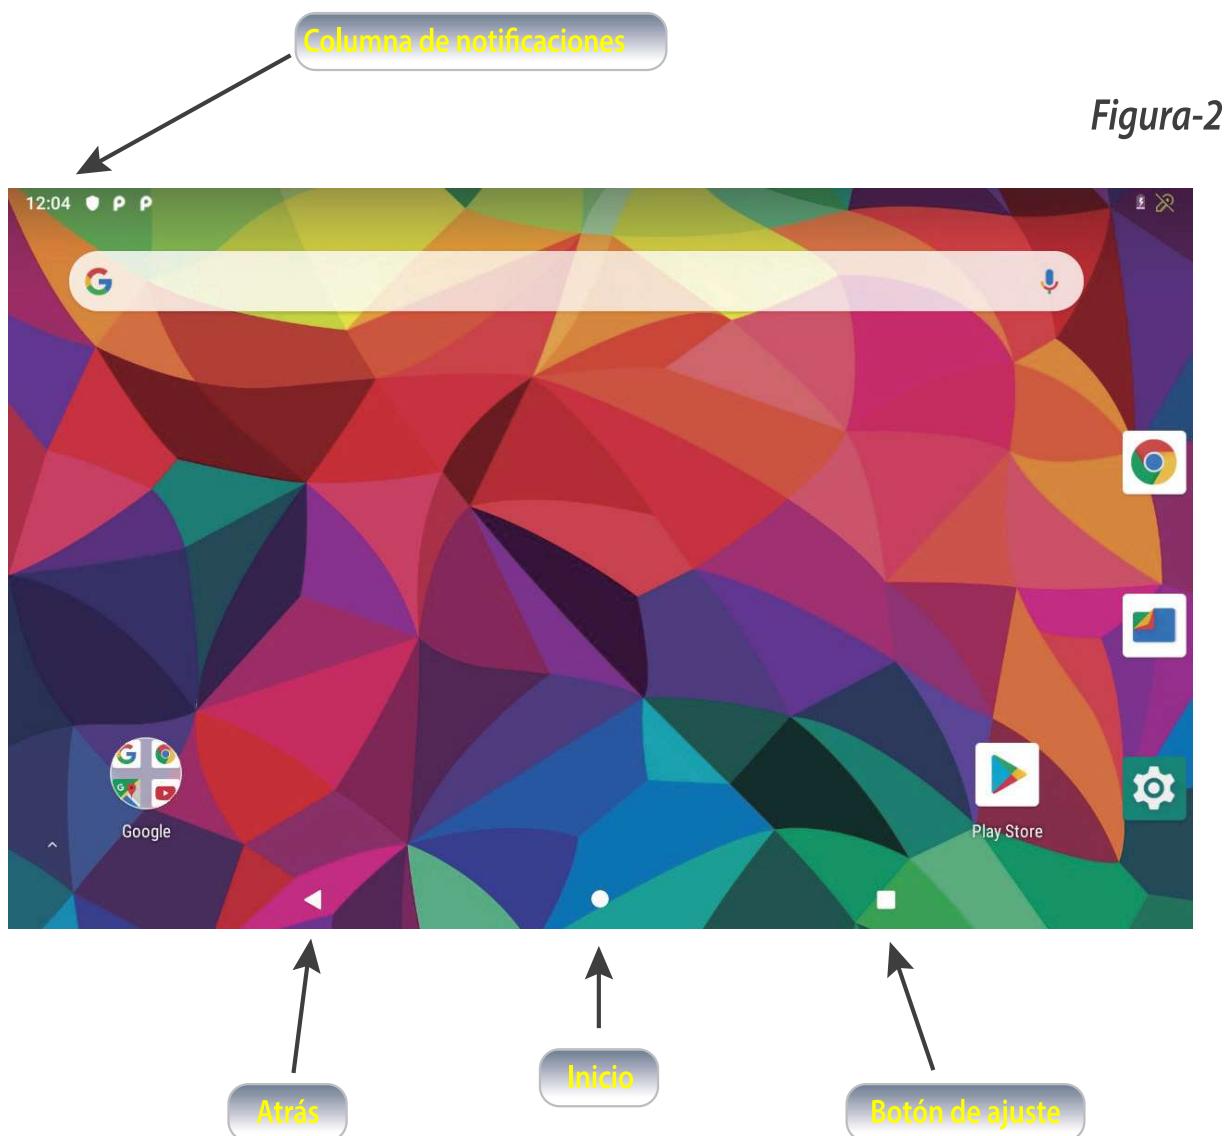

## **Página de inicio extendida**

La página de inicio se puede extender más allá de la amplitud de la pantalla para proporcionar más espacio, lo que puede poner nuevos atajos y widgets. Haga clic en el espacio en vacío de la página principal y, a continuación, deslícelo hacia la derecha o izquierda para extenderse en ambos lados de la pantalla.

*Figura-3*



## **Gestión de íconos de atajo del escritorio de aplicaciones**

Crear un ícono de carpeta en el escritorio

a) Arrastrar los íconos que hay que poner juntos en un ícono (también puede superponer varios íconos) como la figura 4.

b) A continuación, haga clic en los íconos superpuestos, las aplicaciones se pueden plegar, como la figura 5.

Haga clic en la “carpeta sin nombre”, se abrirá el teclado, así el nombre de la carpeta puede ser cambiado.



*Figura-4*



*Figura-5*

## Eliminar los iconos en el escritorio

- Mantenga presionado y arrastre el icono que deseé eliminar, se mostrará en la parte superior de la pantalla el icono “eliminar” X.
- Arrastre el icono a borrar hasta el icono de eliminación, este se borrará.

## Cambiar el fondo de escritorio

- En la página de inicio presione en cualquier espacio vacío de la pantalla principal, aparecerá una ventana para cambiar el fondo de pantalla.
- Haga clic en la galería o en la galería de fondos para seleccionar el fondo de pantalla.

## 6. Accediendo a las aplicaciones

Deslice hacia arriba, figura 6, luego elija la aplicación que deseé usar.

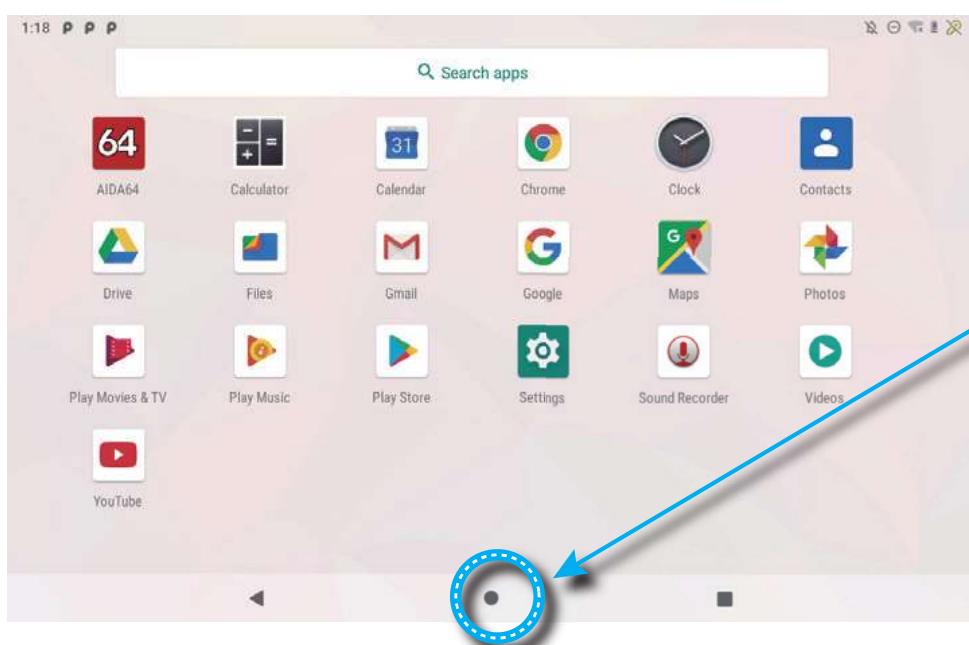


Figura-6


## 7. Conexión USB

### Configuración del almacenamiento de la tablet

Antes de transferir documentos, debe realizar la configuración de almacenamiento en su tablet:

- a) Conecte la tablet a la computadora por medio del cable USB, en el area de notificaciones le parecerá un mensaje.
- b) Abra el mensaje para ver las opciones de conexión USB..
- c) Le aparecerá las Preferencias USB, como en la figura 7, luego haga clic en “transferencias de archivo”.
- d) Ahora el USB está conectado correctamente.

Figura-7

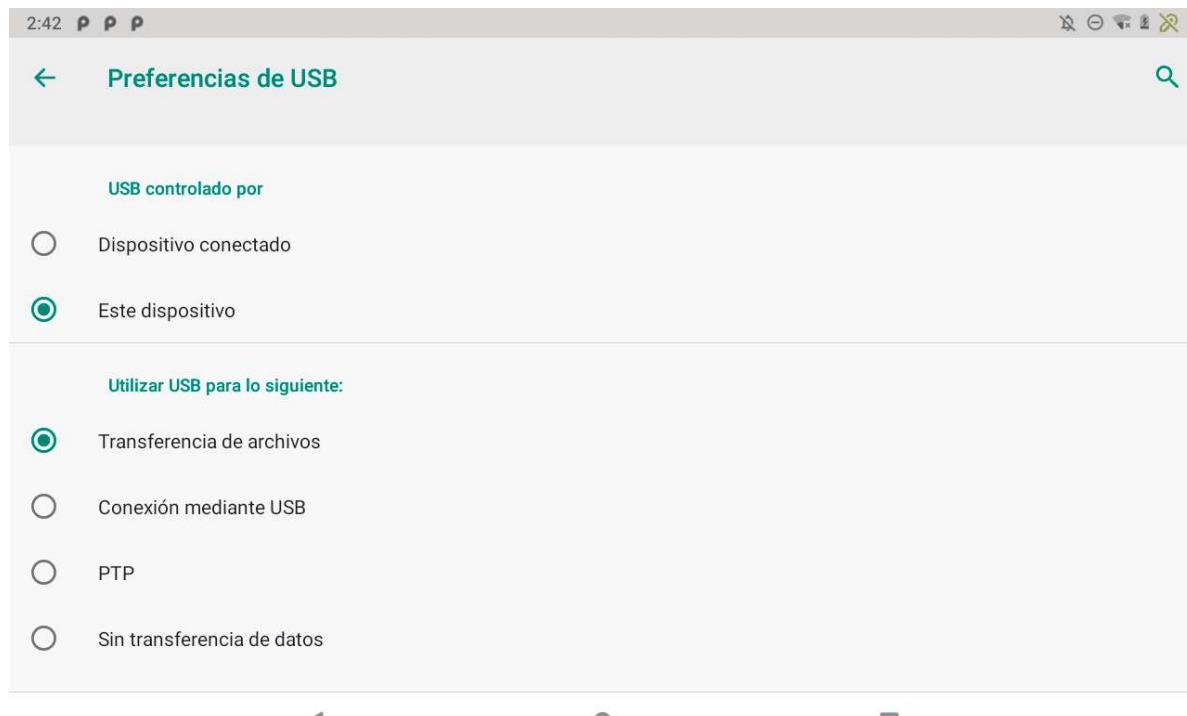

## **Copiar un documento en la tarjeta de memoria**

- a) Conecte la tablet a la computadora con el cable USB.
- b) En configuración de almacenamiento de la tablet, haga clic en “transferencias de archivo”.
- c) Abra el “Mi PC” en su computadora, luego abra SP5730 compruebe los elementos en “SD Card”.
- d) Copie los documentos que necesita en “SD Card”.
- e) Despues de copiar los archivos, desconecte el cable USB.

## **8. Escribir palabras**

### **Utilizar el teclado en pantalla**

Al iniciar algun procedimiento o elegir la edición de palabras o números, se mostrará el teclado de la pantalla. El teclado contiene las siguientes opciones de escritura:


#### **a) Teclado Android**

Elija el método de mecanografía que desee

- Haga clic en Configuración.
- Haga clic en Sistema.
- Haga clic en idiomas y entrada.
- En teclado virtual se mostrarán todos los teclados instalados en su tablet, por defecto esta en Gboard.
- Marque el método de mecanografía que desee.

Uso y cambio de método de entrada

Figura-8

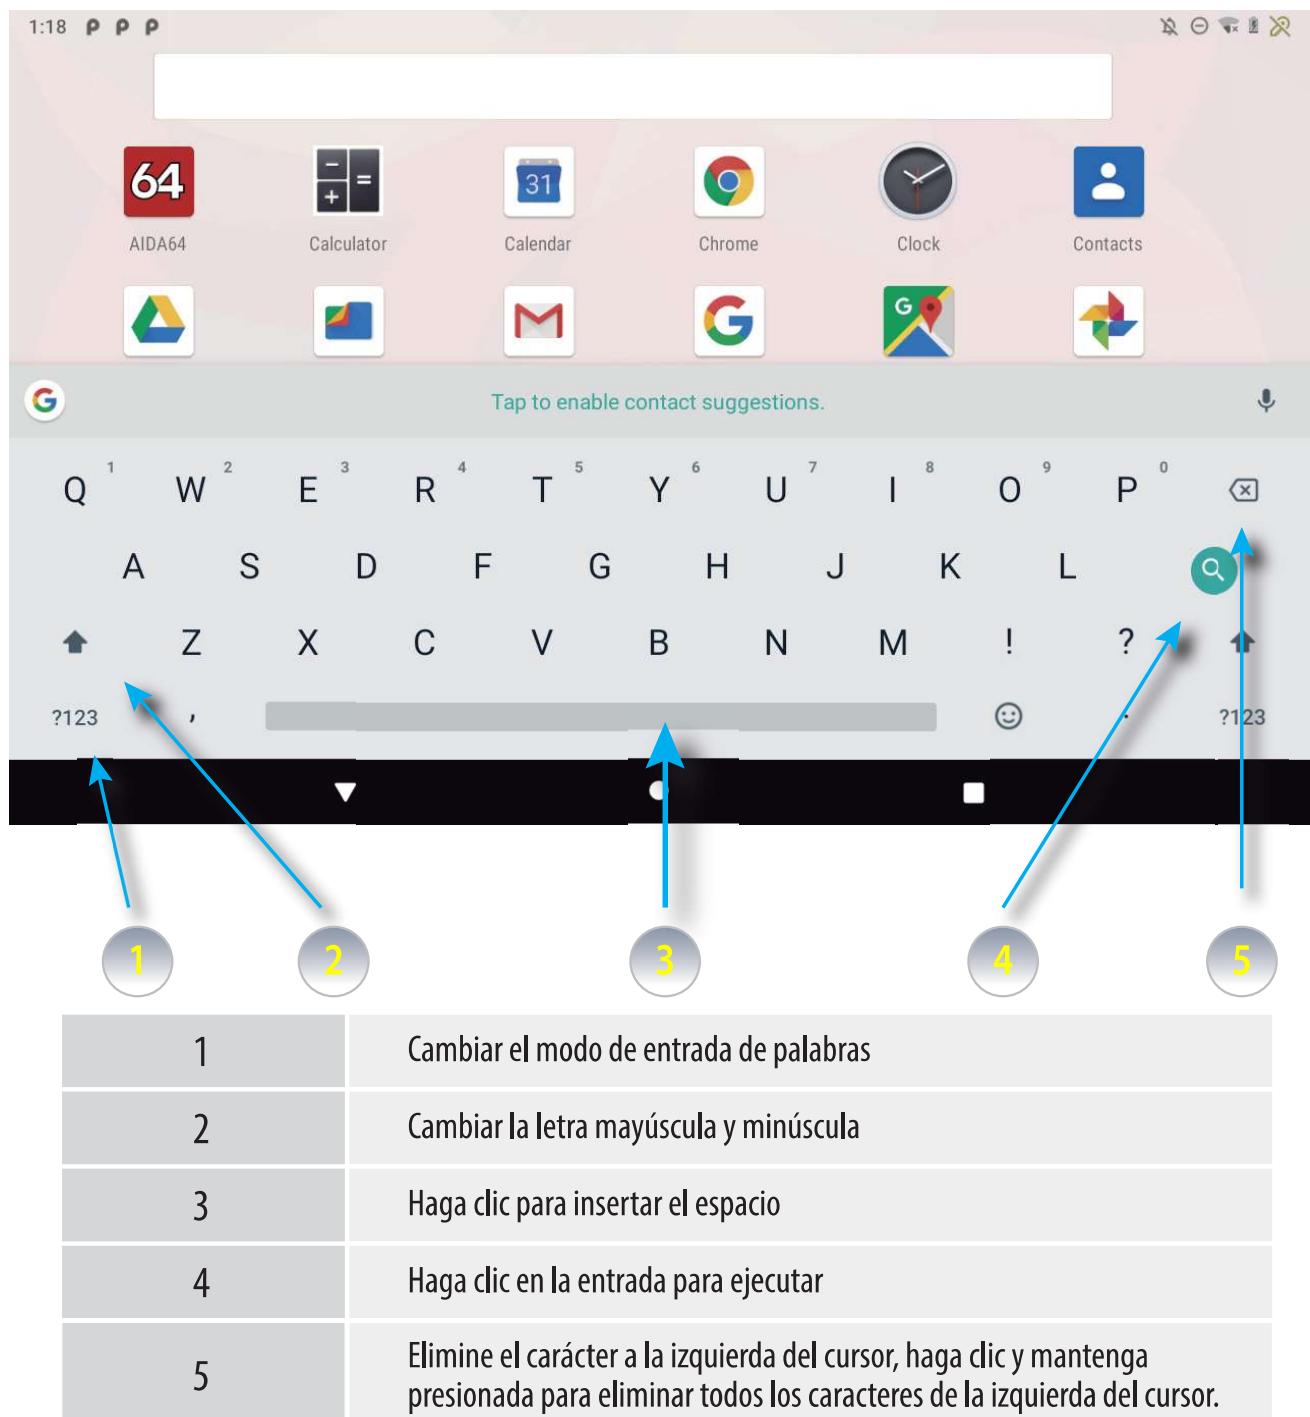

## 9. Técnica de operación

### Entrar en la interfaz de widgets

Toque la pantalla en un sitio vacío, haga clic en widgets luego se le podrá mostrar la interfaz de widgets. Pulse cualquier widget para crear su acceso directo, a continuación, puede entrar en la aplicación a través del ícono de acceso directo.

### Crear íconos de acceso directo de aplicación en el escritorio


En la interfaz de aplicación o interfaz de widgets, presione cualquier ícono para cambiar automáticamente al escritorio, arrastre y mantenga el ícono, puede mover a cualquier posición en el escritorio.

**Recordar:** Si la posición de destino no tiene espacio, el widget no se agregará en la pantalla principal.

## 10. Configuración rápida

Desde la parte superior, deslice hacia abajo, se mostrará los iconos de atajos, como Wi-Fi, Bluetooth, Auto-rotación, etc. En la lista completa de ajustes rápidos también puede tocar el botón de edición en la parte inferior derecha para reorganizar los mosaicos o reemplazarlos por otros, como en la figura 9.


Figura-9

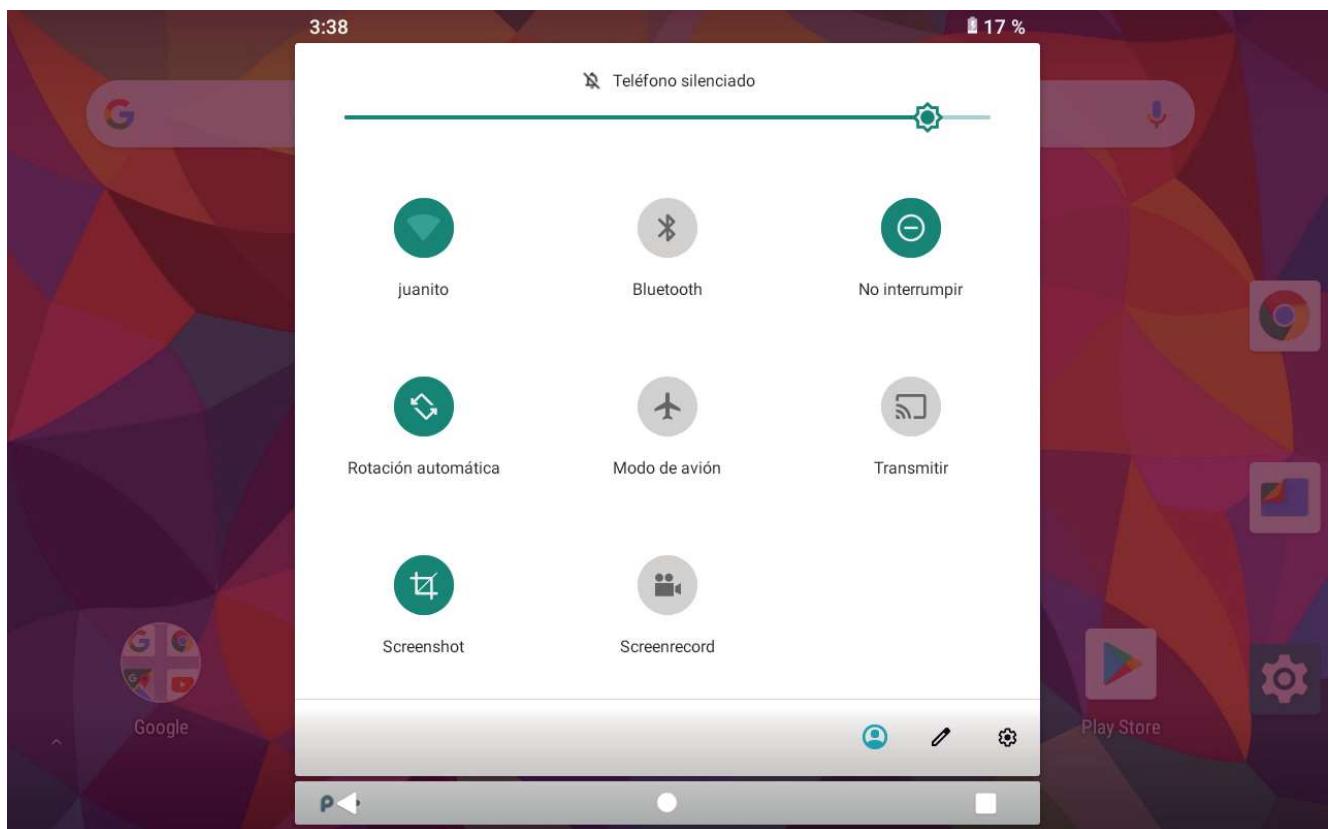


## 11. Hard Reset

Esta opción le permite regresar la tablet a la configuración inicial de fábrica mediante un reinicio general, toda la información (datos, aplicaciones, juegos, fotos, etc) se borrarán de forma definitiva.

- a) Asegúrese de que la tablet esté apagada y, a continuación, presione el botón de volumen (+) y el botón de encendido al mismo tiempo durante 5 segundos, luego suelte los botones, le aparecerá el logo de inicio de sistema, usted deberá esperar hasta que le muestre el menú de recovery.


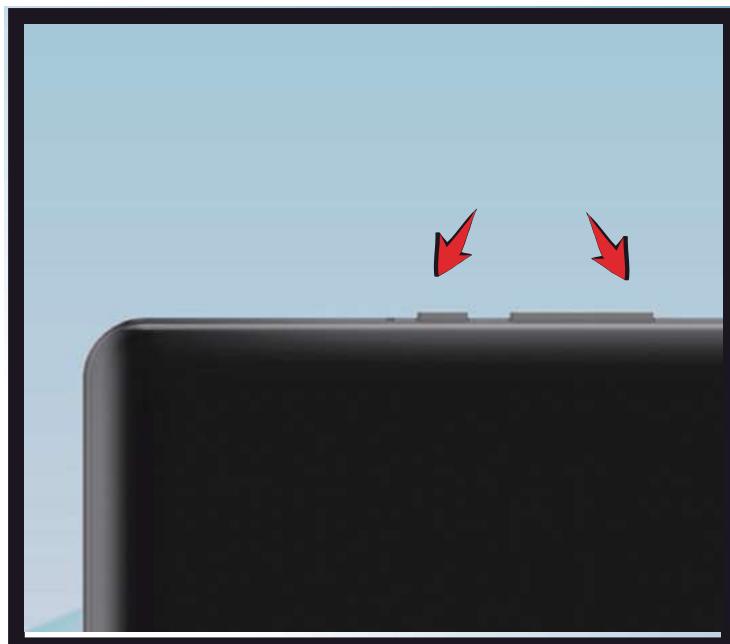


b) Le parecerá la siguiente interfaz.

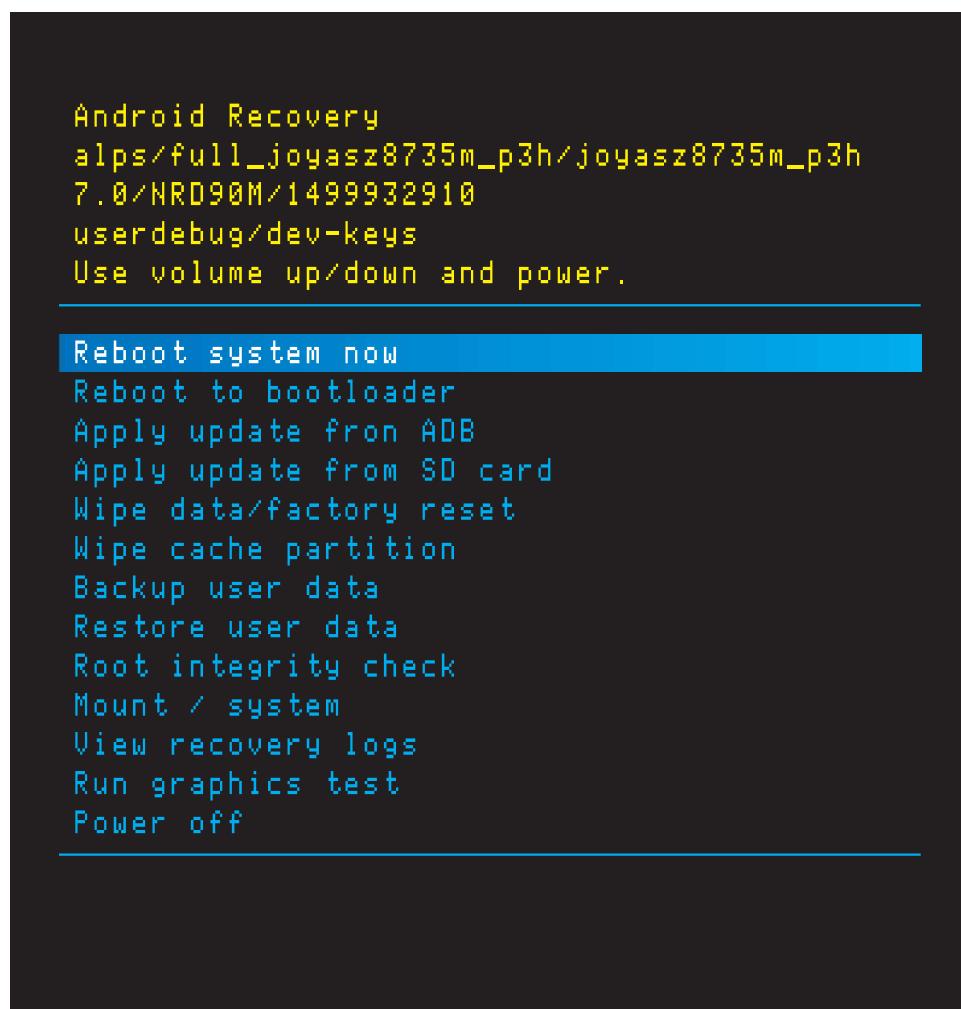

c) Elija la opción “Wipedata/factory reset” con el botón volumen (+) y botón volumen (-). Confirme con el botón de encendido.

d) Le mostrará la siguiente interfaz, aquí debe seleccionar la opción “Yes - delete all user data”. Recuerde que al seleccionar esta opción perderá toda su información.

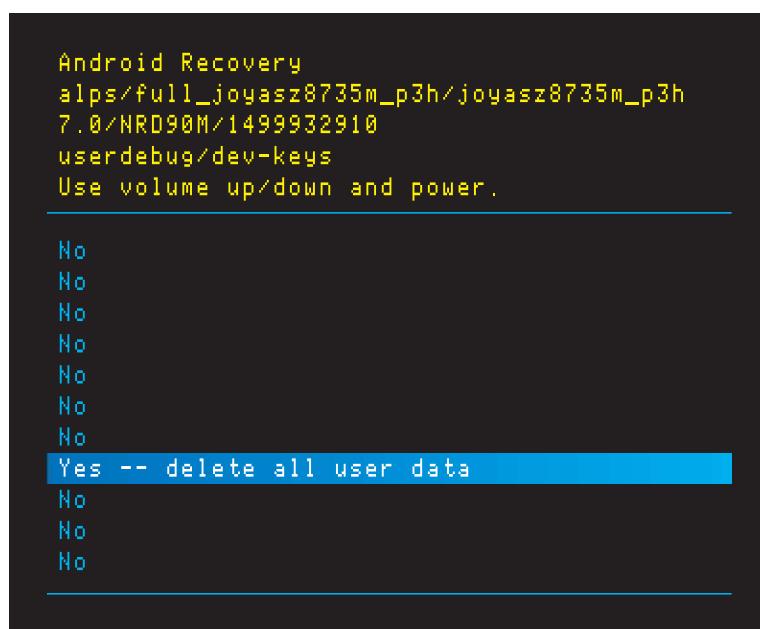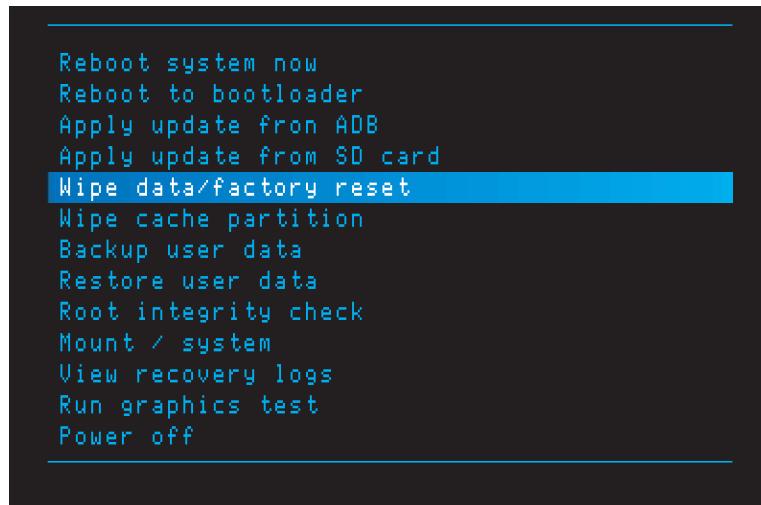

e) Despues de restaurar a modo de fábrica le mostrará la siguiente interfaz:

```
Android Recovery
alps/full_joyasz8735m_p3h/joyasz8735m_p3h
7.0/NRD90M/1499932910
userdebug/dev-keys
Use volume up/down and power.

Reboot system now
Reboot to bootloader
Apply update from ADB
Apply update from SD card
Wipe data/factory reset
Wipe cache partition
Backup user data
Restore user data
Root integrity check
Mount / system
View recovery logs
Run graphics test
Power off

__ Wiping data...
Formatting /data...
Formatting /nvdata...
Formatting /cache...
Data wipe complete.
```

f) Elija la opción “reboot system now”, ahora su tablet iniciará con las configuraciones de fábrica.

# Especificaciones Técnicas



Pantalla 10.1" IPS  
800x1280



All Winner A50  
1.8 GHz



RAM  
2GB



Almacenamiento  
32GB



Wifi



Frontal 0.3 MP  
Posterior 2.0 MP



BT 4.0



Android 9



Bateria 7000 mAh



Soporta Dongle  
externo 3G



Incluye cable  
micro USB a USB

## FCC compliance statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Important:** Changes or modifications to this product not authorized by TECHNOSOURCE HK LIMITED could void the electromagnetic compatibility (EMC) and wireless compliance

and negate your authority to operate the product.

This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

### **SAR Statement:**

This Tablet meets the government's

requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement  
the SAR limit of USA (FCC) is 1.6 W/kg  
averaged over one gram of tissue. Device types:  
SP5730 (FCC ID: 2AV3BSP5730) has also  
been tested against this SAR limit. This device

was tested for typical body-worn operations with the back of the Tablet kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user's body and the back of the Tablet. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

### Body-worn Operation

This device was tested for typical body-worn

operations. To comply with RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the Tablet, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.