 


Specification

MODEL:iCare10 MULTI-TOUCH TABLET

Operating System	Android 10
CPU	QUAD Core 1.3GHz CPU
Memory	2 GB DDR
Storage	16 GB
Display Resolution	10.1" ULTRA HD IPS LED Display
Touch Panel	Capacitive Multi-touch 10 points
Camera	ULTRA HD Front and Rear Cameras
Wi-Fi	IEEE 802.11b/g/n · Connect to internet wirelessly
Gyro Sensor	Supported
Audio Output	Stereo
Video Output	Mini HDMI
Mic/Earphone	Mic & 3.5mm headphone jack
Battery	5000mAh - upto 8hrs Battery Life
Hard Disk Slot	Hard Disk supporting upto 32 GB
USB Port	USB 3.0, Micro USB port
Bluetooth	Bluetooth 4.0 version
3G Function	Dongle external (optional)
Power Adaptor	AC Adaptor

Description of the device

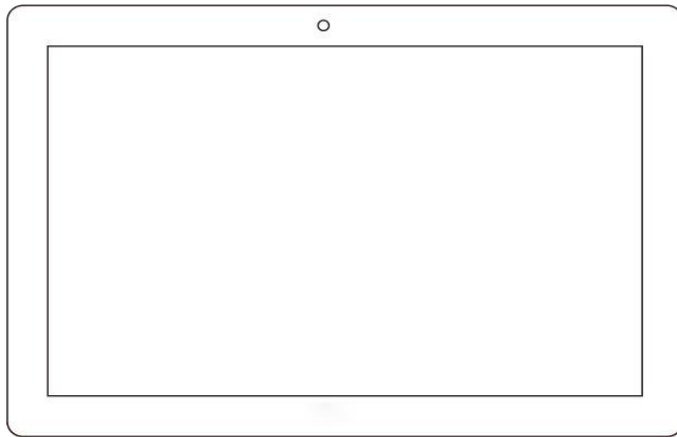

Front camera

Headphone jack

Loudspeaker

Back camera

Micro-USB port

Back

ON/OFF button

HDMI

Mic

Reset button

Hard Disk Slot

Through the Wizard

The first time you start up your tablet, the installation wizard will help you set up your device:

- Touch-screen calibration
- Language
- Date & time
- WiFi connection
- Location service options
- 3rd party apps

TIP:

We recommend that you set up your device in the WiFi zone of the network that you will regularly be using.

Connecting to a WiFi Network

CAUTION: Make sure that you are in a WiFi zone.



- ① Touch and hold the time & battery icons to reveal the status bar. A blue line is displayed.



 
- ② Pull the blue line down to display the status dashboard.




- ③ Touch "WiFi off" in the status dashboard. The WiFi page will be displayed.



- ④ Slide the WiFi switch to "ON" position.

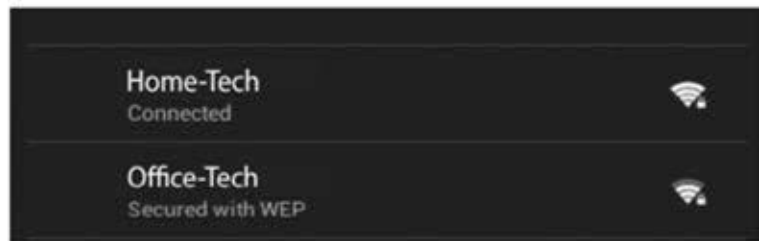

- ⑤ The tablet will scan for WiFi networks in range. Touch the name of network you want to connect to.

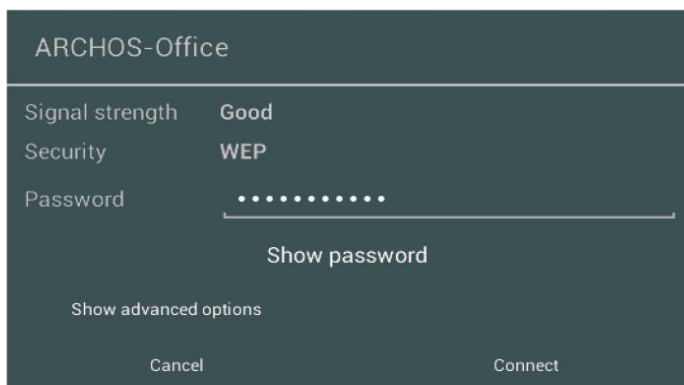


The screenshot shows a dark-themed WiFi connection interface. At the top, the network name 'ARCHOS-Office' is displayed. Below it, the signal strength is 'Good' and the security type is 'WEP'. A password field is shown with ten dots, and a 'Show password' button is located directly beneath it. Further down is a 'Show advanced options' link. At the bottom, there are 'Cancel' and 'Connect' buttons.

Private networks are shown with a lock icon and will require you to enter your password.


TIPS:

- When entering a WiFi password, we recommend that you select “Show password” so you can see the characters you are typing. To get the correct WiFi password (or settings) for the network, contact the WiFi network provider. If your WiFi is on and you are in range of a network that you previously connected to, your tablet will automatically attempt to connect to it.
- To keep your WiFi connection ON when the device is on sleep, select the Menu icon in the “WiFi” page. Then, select Advanced > Keep WiFi on during sleep > Always.

 The Interface

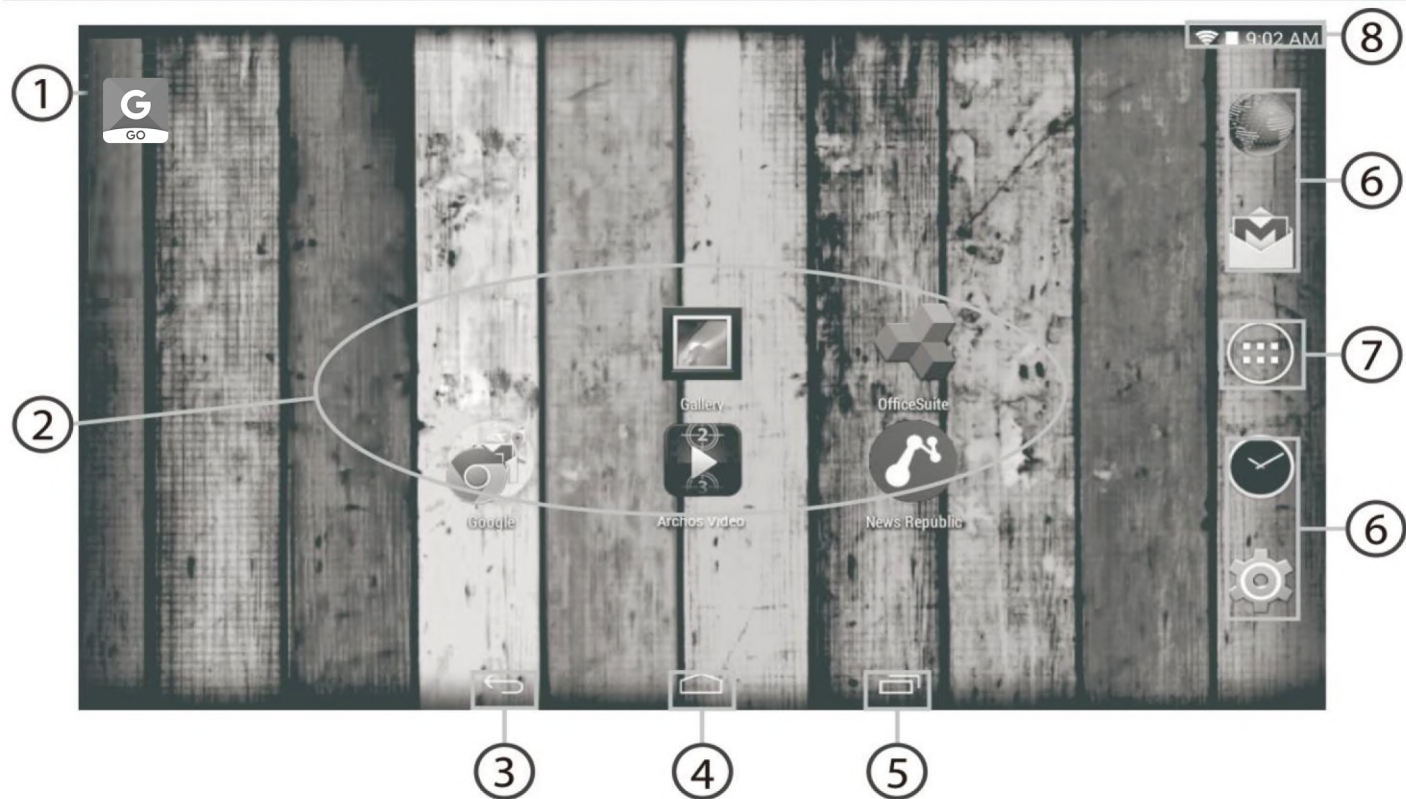

The Interface

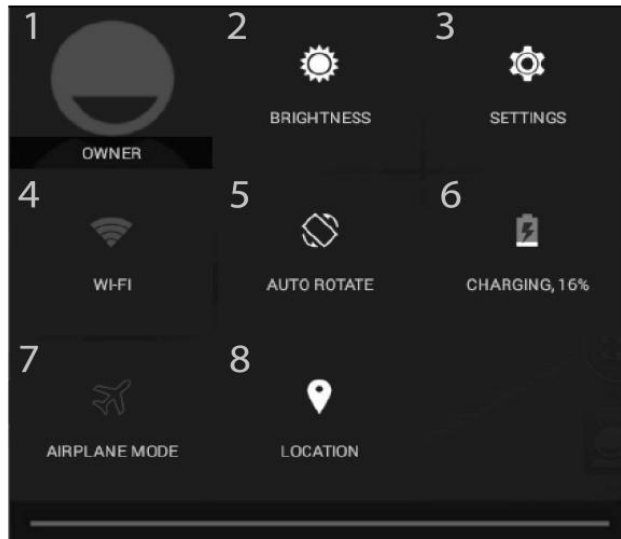 

The Quick settings

- 1 Current user*
- 2 To adjust the screen brightness.
- 3 To access all your settings.
- 4 To turn on/off your WiFi connection.
- 5 To activate/deactivate automatic screen orientation as you turn your tablet.
- 6 Percentage of battery remaining
- 7 To activate/deactivate all wireless connections, especially when flying.
- 8 Location services

*New multi-user support for tablets lets different users have their own separate, customizable spaces on a single device. Add users in Settings > Device.

-
- ① **Google Search**
> Touch "Google" for text search or touch the microphone icon for voice search.
 - ② **Android apps shortcuts**
> Touch to start an application.
 - ③ **Back button**
 - ④ **Home button**
 - ⑤ **Recent apps buttons**
 - ⑥ **Permanent Android apps shortcuts**
> Touch to start an application
 - ⑦ **All Apps button**
> Touch this icon to show all the applications and widgets installed on your tablet. All your downloaded applications are here.
 - ⑧ **The status bar**
> Displays notifications and quick settings

The Recent Apps

Opens a list of thumbnail images of apps you've worked with recently:



Touch: to open an app.

Hold down: to display options



Swipe up or down: to close an app.

Getting familiar with below

The extended home screen:

Navigate between different home screen panels by swiping left and right.

Moving a home screen item:

Touch and hold your finger onto it until the positioning gridlines appear, then slide it to the desired location, and release your finger.

Removing a home screen item:

Touch and hold it, slide your finger towards the top of the screen and drop it over the Remove icon.

 
Uninstalling an item:

From the All apps screens, touch and hold it, slide your finger towards the top of the screen and drop it over Uninstall bin.



Creating application folders:

Drop one app icon over another on a home screen and the two icons will be combined.

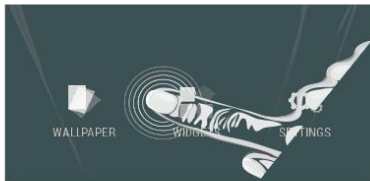

Widgets:

Hold your finger on a home screen at an empty location, then choose from the list: Widgets.



Changing your wallpaper:

Hold your finger on a home screen at an empty location, then choose from the list: Wallpaper.



Locking the touchscreen:

In Settings, scroll down and touch security. Touch Screen lock. Touch the type of lock you would like to use. After you set a lock, a lock screen is displayed whenever your screen wakes up, requesting the pattern, PIN or other specified key.

FCC compliance statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Changes or modifications to this product not authorized by TECHNOSOURCE HK LIMITED could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product.

This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

SAR Statement:

This Tablet meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: SP5760 (FCC ID: 2AV3BSP5760) has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the Tablet kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user's body and the back of the Tablet. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the Tablet, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Warning: The Wi-Fi 5.2G use is restricted in indoor.