



## User Manual

Please read this instruction thoroughly before using this product and keep it for future reference.

## INTRODUCTION

Congratulations on choosing to buy an **ADVANCE** product. All products brought to by **ADVANCE** are manufactured to the highest standards of performance and safety.

Before use, please read this manual carefully. It gives important instructions about safety, use and maintenance of your Tablet. We hope you enjoy using your purchase for many years to come.

Remove all packaging material. You may wish to keep packaging for future use or storage of your Tablet. Alternately, dispose of accordingly.

FUNCTION OVERVIEW	01
GETTING STARTED	02
HOME SCREEN	03
SETTING BASICS	04
NETWORK CONNECTION	07
APP MANAGEMENT	08
INTERNET NAVIGATION	08
MULTIMEDIA	08
SPECIFICATION	10
TROUBLESHOOTING	10
GUARANTEE	11



## Getting started

Before Powering up the Tablet, ensure that it is fully charged.

1. Reset
2. Power On/Off
3. Volume +
4. Volume -
5. USB Type-C interface
6. 3.5mm AUX Slot
7. 5.0MP Camera
8. Double Speaker
9. Magnetic interface
10. 8.0MP Camera
11. Lights Flash

### Power On/Off

Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide. Press and hold the power button for 2s, then release it. It will show Power Off and Restart on the screen. Tap Power Off to turn off the tablet. Press and hold the power button for 5s to do a forced shutdown when it's frozen.

### Battery

Rechargeable Li-Ion battery is installed in the tablet. We suggest you drain the battery completely once a month if you use your tablet occasionally. DO NOT dispose of tablet in a fire.

### Sleep Mode

Simply press the power button once to switch the tablet to the Sleep Mode when the tablet is ON. Press again to wake it up.

### Tip :

Go to Settings>Display>Sleep to set the time of entering the Sleep Mode.

## HOME SCREEN

Icons on the Bottom Menu



### Wallpapers, Widgets and Home Settings

Tap and hold the empty section of a Home screen. WALLPAPERS, WIDGETS and HOME SETTINGS will be displayed. Tap WALLPAPERS icon to change the current wallpaper of the tablet from the default wallpapers or your photos. Tap WIDGETS, touch and hold any widget (e.g. Clock), then slide and add it to a Home screen. Remove it by sliding to X. Tap HOME SETTINGS to enable/disable Add icon to Home screen. This is applicable to the new Apps installed from Play Store.

## SETTING BASICS

Quick Settings

## More Settings

Swipe down from the top of the screen to access Quick Settings. Tap the icon to change the options in the Quick Settings.

### Network & Internet

Swipe from the top of the screen, then tap the icon to enter the detailed Setting interface. Or, tap the Settings icon on the Home screen to enter.

### Connected devices

- ★ Connect to any working Wi-Fi
- ★ Enable/disable the Airplane Mode
- ★ Monitor the data usage

### Screenshots

- ★ Set the delay time for screenshot
- ★ Set the location folder of screenshots
- ★ Switch on/off Show the screenshot button in the statusbar

### Tip :

Press the volume down button and the power button together to capture a screenshot. Or, switch on show the screenshot button in the statusbar, then tap the icon on the bottom menu to capture a screenshot.

## Apps & notifications

- ★ Check the Apps recently opened
- ★ Check at the Apps on the tablet
- ★ Set the App permissions
- ★ D/Uninstall the third-party Apps
- ★ Adjust App notification settings
- ★ Clear the cache of the Apps

### Battery

- ★ Display the remaining battery power as a percentage
- ★ Enable/disable the Battery Saver
- ★ Adjust the time of entering the Sleep Mode

### Display

- ★ Adjust the screen brightness
- ★ Adjust the font size and display size
- ★ Set a screen save
- ★ Change the wallpaper
- ★ Adjust the time of entering the Sleep Mode

### Sound

- ★ Set volume levels for media, alarms, and notifications
- ★ Set preferences of Do Not Disturb
- ★ Set the tones for notifications and alarms
- ★ Turn on/off the sound for screen lock, charging and touch

### Screenshots

- ★ Set the delay time for screenshot
- ★ Set the location folder of screenshots
- ★ Switch on/off Show the screenshot button in the statusbar

### Tip :

Press the volume down button and the power button together to capture a screenshot. Or, switch on show the screenshot button in the statusbar, then tap the icon on the bottom menu to capture a screenshot.

## Storage

Go to Wi-Fi settings in the Settings interface or directly enter Quick Settings.

### Security&location

- ★ Set screen lock pattern, e.g. password, PIN, Swipe etc.
- ★ Enable/disable all the notifications while the screen is locked
- ★ Activar / desactivar los servicios de localización
- ★ Turn on/off the location services for specific Apps
- ★ Set to show/hide the password when input a password

### Users&accounts

- ★ Add and manage the user accounts on your tablet

### Accessibility

- ★ For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

### Google

- ★ Set the preferences for Google™ related services

### Sistema

- ★ Set Language. Tap Languages>Languages>add, a language to add your language. After adding, hold the language to the top to change the language.
- ★ Restore factory setting. Tap Languages>input>Languages>add, a language to add your setting.
- ★ Set the date and time
- ★ Turn on/off the Backup
- ★ Check the detailed information about the tablet

## NETWORK CONNECTION

Go to Wi-Fi settings in the Settings interface or directly enter Quick Settings.

### Wi-Fi Connection

1. Tap Network and Internet and turn on the Wi-Fi. All Wi-Fi connections available will be listed;
2. Select your Wi-Fi and input the correct password.

### Remove the App from the Home screen

Tap and hold the App, then slide to X to remove it from your Home screen.

### Uninstall the App

Tap and hold the App, then slide to the trash bin to uninstall the App.

### Clear the Cache of the App

1. Go to Settings>Apps>notifications;
2. Select an App>Storage>CLEAR CACHE.

### INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wi-Fi network before navigating the Internet. You may use the Chrome™ browser pre-installed or use another browser downloaded.

### Bluetooth Paring

Please turn on the Bluetooth on your tablet and your bluetooth device.

1. Tap Connected devices and turn on the Bluetooth;
2. Tap Bluetooth>pair new device to enter the scanning interface. Devices available will be displayed after a few seconds;
3. Tap the desired device to get a pairing code and click PAIR on both devices. An automatic connection will be applied to some devices.

## APP MANAGEMENT

### App Download and Installation

1. Tap and open Google Play on the Home screen;
2. Log into your Google Account, search and download the App you need.

### App Management

Tap and hold the App, then slide it to a desired screen.

### Remove the App from the Home screen

Tap and hold the App, then slide to X to remove it from your Home screen.

### Uninstall the App

Tap and hold the App, then slide to the trash bin to uninstall the App.

### Clear the Cache of the App

1. Go to Settings>Apps>notifications;
2. Select an App>Storage>CLEAR CACHE.

### INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wi-Fi network before navigating the Internet. You may use the Chrome™ browser pre-installed or use another browser downloaded.

### MULTIMEDIA

#### Connecting to the Computer

1. Connect your tablet to the computer with USB cable and go to Quick Settings;
2. Tap Android™>Systems>USB charging this device>Tap for more options>Use USB to;
3. Select Transfer files;
4. Go to your computer and find your tablet J5 to transfer files between your tablet and computer

## Tip :

Select Charging this device to charge your tablet; Select Transfer photos(PTP) to transfer photos between the devices.



### Connecting to an External Device

- 1.1. Install a microSD card into the microSD card slot and go to Quick Settings;
2. Tap New SD card detected or Set Up prompt;
3. Set the microSD card as a portable storage by selecting Use as portable storage. Enter microSD Card storage to move files between the card and tablet.



## SPECIFICATION

Size	10.1	Connection	Wi-Fi & 4G Network
RAM	2 G	ROM	32 G
Ports	Type-c Port/microSD Card Slot		
Display	1200*1920	Cámara frontal	2.0MP
Network	AC/a/b/g/n(2.4 GHz +5G Wi-Fi), BT5.0		
Back Camera	5.0MP	Power Supply	DC/5V 3A
Battery	5000mAh	Touch	Multitáctil
Operating System	Android™10		

## SOLUCIÓN DE PROBLEMAS

### Q1. La tableta no se enciende.

- ★ REBoot su tableta después de cargar durante 30 minutos
- ★ Presione el botón de encendido para verificar si la tableta está en modo de suspensión;
- ★ Mantenga presionado el botón de encendido durante 5 segundos para reiniciar la tableta, luego reinicie.
- ★ Presione el botón de reseteo con un alfiler para reiniciar la tableta.

### Q2. The tablet doesn't charge.

- ★ Asegúrese de que el cable USB esté enchufado correctamente en el puerto de carga.
- ★ Pruebe con otro cable USB y adaptador compatibles

### Q3. Mensaje de error ocurre durante la operación.

- ★ Desinstale la aplicación con el mensaje de error, luego descargue e instale nuevamente;
- ★ Presione el botón Restablecer con un alfiler para reiniciar la tableta.

## Q4. The tablet cannot be detected by the computer.

- ★ Make sure the tablet is powered on;
- ★ Try another USB cable;
- ★ Try another USB port on the computer;
- ★ Instead of Charge this device, choose Transfer files or Transfer photos (PTP) when connecting the tablet to the computer.

### Q5. The tablet cannot connect to the Wi-Fi.

- ★ Make sure the Wi-Fi in your tablet is ON;
- ★ Make sure you input the correct password when connecting the Wi-Fi;
- ★ Restart the router;
- ★ Make sure there is no filter setting or device connection limitation in the setting of the router;
- ★ Forget the current Wi-Fi, reset the router and connect the Wi-Fi again.

### Q6. The storage space of the tablet is not enough.

- ★ Delete the Apps you don't use;
- ★ Clear the cache of the Apps regularly;
- ★ Install an microSD card to expand the storage.

## GUARANTEE

### User File

User Name	Sex	Age
Address		
Telephone		Zip
Purchasing Address		
Retail Price		Odd Numbers
Commodity Name & Specification		Model No
Dealer Signature		User Signature

### Guarantee Item

1. months upon date of purchase, if there is a function problem. We should offer the Same item subject to goods and packing maintain perfect.

2. 1 year upon date of purchase, we will guarantee to keep the goods in repair (not including fittings).

3. Guarantee service is subject to normal use.

4. All of damage by man-made (tear open the housing, tear off the sticker, unnormal use), or losing this card, we will not guarantee.

Google™ app and Google Chrome™ pre-installed

Google, Android, Google Play and other marks are trademarks of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Thank you for your reading

Your Name : \_\_\_\_\_  
Mobile NO. : \_\_\_\_\_  
Date of purchase : \_\_\_\_\_  
Customer Email : \_\_\_\_\_  
Customer Order NO : \_\_\_\_\_





This device complies with part 15 of the FCC Rules. Operation is subject to the condition that (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### Specific absorption rate (SAR):

This Tablet meets the government's requirements for exposure to radio waves. The guidelines are based on standards developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a margin of safety designed to ensure the safety of all people regardless of their age or health. The FCC Statement of Exposure to RF and the SAR limit for the United States (FCC) is 1.6 W/kg average for each gram of tissue. This device was tested for typical operations of use on the body, with the back of the Tablet from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain between the user's body and the back of the phone. The use of belt clips, covers and similar accessories must not contain metallic components in their assembly. The use of accessories that do not meet these requirements may not meet FCC RF exposure requirements and should be avoided. Functioning in the body This device was tested for typical operations of use in the body. To comply with RF exposure requirements, a minimum separation must be maintained between the user's body, including the antenna. Third-party accessories such as belt clips, covers and similar accessories used with this device should not contain metallic components, accessories that do not meet these RF exposure requirements and should be avoided from use on the body. Use only the supplied antenna or an approved antenna.