 




Groove 2 Portable Outdoor Speaker

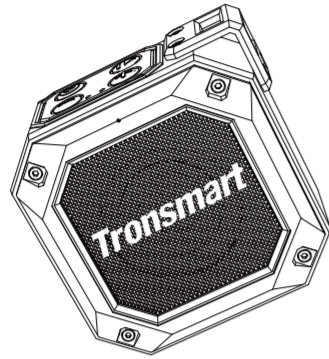

 
USER MANUAL

English

Thank you for purchasing the Tronsmart Groove 2. Please read the user manual before use and keep it handy for future reference. If you have trouble understanding or following the instructions in this manual, please contact our customer support team directly at: support@tronsmart.com

Button Configuration

- ① Power On/Power Off
- ② Play/Pause
- ③ Volume -
- ④ Bluetooth Indicator
- ⑤ Power Indicator/Charging Indicator
- ⑥ Volume +
- ⑦ Type-C Charging Port
- ⑧ TF/SD Card Slot
- ⑨ Aux-in Port
- ⑩ Mounting Screw

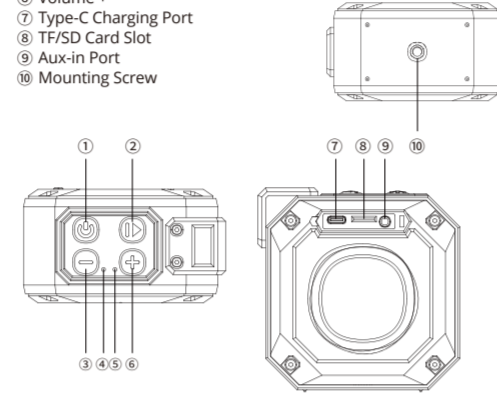

01

	Press for 2s to turn on
	Press for 2s to turn off
	Press once to turn on/off LED Indicator
	Double Press to Enter/Exit Stereo Pairing
	Triple press to enter/exit SoundPulse® EQ Mode
	Press once to play or pause the music
	Press once to answer or hang up the phone call
	Double press to switch music playing mode among Bluetooth, Aux-in & Micro SD Card
	Press for 2 seconds to reject the phone call
	Press for 8 seconds to reset
	Triple press to activate voice assistant
	Press once to turn up volume
	Press for 2s to skip to next track
	Press once to turn down volume
	Press for 2s to skip to previous track
	Press for 2s to disconnect from device

1. The volume synchronizes with iOS devices ONLY.
2. If the volume could not synchronize between speaker & phone on some Android devices, please adjust the volume of both speakers & phone synchronously.
3. Auto-switch to last playing mode while powering on.

Package Contents

- 1 x Groove 2 Portable Outdoor Speaker
- 1 x Aux-in Cable
- 1 x Type-C Charging Cable
- 1 x Warranty Card
- 1 x User Manual
- 1 x Carabiner


02

Specifications

Model	Groove 2
Bluetooth Version	5.3
Bluetooth Profile	HSP / HFP / A2DP / AVRCP
Audio Codec	SBC
Bluetooth Range	Up to 18m/59ft (Open Area)
IP Rating	IPX7
Input Power	5W/1A, via Type-C port
Output Power	10W
Frequency Range	20Hz - 20kHz
Battery	2500mAh
Playtime(Varied by Volume Level & Audio Content)	Up to 18 Hours(LED Off) Up to 6 Hours(LED On)
Charging Time	3.5 Hours

How to Use

 1. Turn On/Off

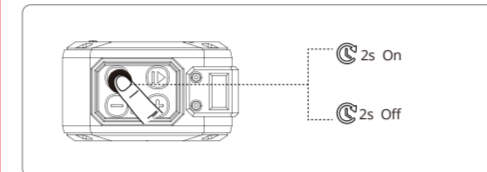


On	White Indicator On
Off	Red Indicator Off

2. Bluetooth Connection

Search & click 'Tronsmart Groove 2' to connect.

 
03

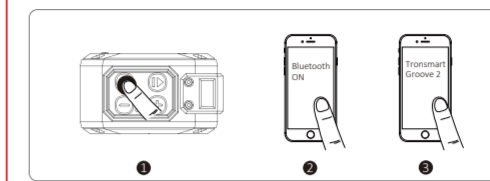

Pairing	Blue Indicator Flashes Slowly
Connected	Blue Indicator On

3. Disconnect from Bluetooth

 Quickly connect to another device, you could press the 'Volume + & Volume -' button for 2 seconds to disconnect from Bluetooth.

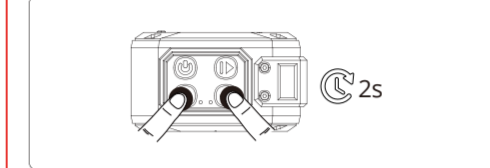


4. True Wireless Stereo Mode


Connect 2 Tronsmart Groove 2 speakers to enjoy powerful stereo sound.

1) Turn on both speakers. Please make sure either speaker has entered pairing mode.

 04

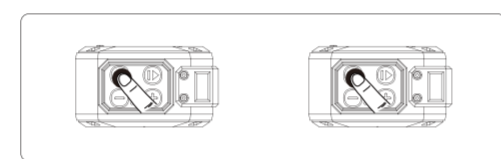

 2) Double Press the 'Power' Button of either speaker(Host Speaker) to enter stereo pairing mode with the Power indicator flashing white.

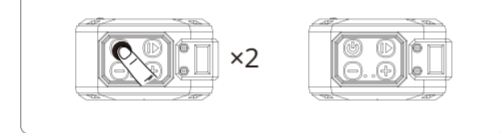

3) If paired successfully, the power indicator of host speaker will off while vice one will flash white.

Host Speaker	Bluetooth Indicator Flashes while Power Indicator off
Vice Speaker	Bluetooth Indicator & Power Indicator Flash

4) Search & click 'Tronsmart Groove 2' to connect.



05


Host Speaker	Bluetooth Indicator stays blue while power indicator off
Vice Speaker	Both Bluetooth Indicator & Power Indicator Flash

Note:

You could only pick up a call on the host speaker.

5. Dual EQ Modes

 Triple press to switch between default & SoundPulse® modes.

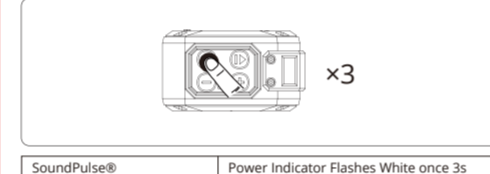

Power Indicator Flashes White once 3s

6. Aux-in Mode

 
Simply connect the speaker with your non-Bluetooth device via the 3.5 mm audio jack cable.
Note: After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.

7. TF/Micro SD Card Slot Mode

The speaker will play the music from your TF/Micro SD card when plugging the card into the slot.

06


8. Indicators

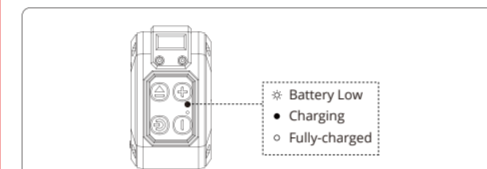

Red Indicator Flashes Slowly	Battery Low
Red Indicator On	Charging
Red Indicator Goes off	Fully-charged

9. Reset

 Press 'Play/Pause' button for 8s to reset. If reset successfully, the speaker will turn off.

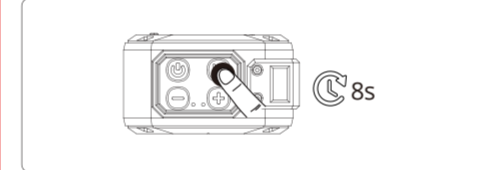

10. Auto Power Off

The speaker will power off automatically after 10 minutes if it does not pair with any device through Bluetooth. When in low battery, the speaker will power off automatically as well.

07

Care & Maintenance

Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable. Do not disassemble this product. It contains no user serviceable parts. Do not drop or jump on it and treat it with care for the best performance. Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place. Do not dispose this product in fire or batteries may explode or leak.

Warranty Information

Your 'Tronsmart Groove 2 Portable Outdoor Speaker', is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team at support@tronsmart.com.

08

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.