



HALO 100
PORTABLE PARTY SPEAKER

USER MANUAL

Button Configuration





(*Poke for 2s with a needle or card pin to reset.)

How to Use



- Power Button:** 2 s Turn on/turn off. Press for 2s.
- Light Switch:** x 1 Switch LED Lighting Modes. Press once to switch among 5 lighting modes & light-off mode. *Kindly note that you could press for 2s to turn it off.
- SoundPulse EQ Button:** x 1 SoundPulse EQ Effect On. Press Once; x 1 SoundPulse EQ Effect Off. Press Once.
- Mode Button:** x 1 Switch Music Playing Modes. Press once to switch among Bluetooth, TF/SD Card, USB Flash Disk & Aux-in Modes; 8 s Reset. Press for 8s.



- Play/Pause Button:** x 1 Play/Pause. Press Once; x 2 Activate Voice Assistant. Double Press; x 1 Answer/Hang up a Call. Press Once; 2 s Reject a Call. Press for 2s; 3 s Disconnect Bluetooth. Press for 3s.
- Volume-:** x 1 Turn down Volume. Press Once; 2 s Previous Song. Press for 2s.
- Volume+:** x 1 Turn up Volume. Press Once; 2 s Next Song. Press for 2s.
- Stereo Pairing Button:** x 1 Enter Stereo Pairing Mode. Press Once; x 1 Exit Stereo Pairing Mode. Press Once.



SHENZHEN GEEKBUY E-COMMERCE CO., LTD.
Warehouse 101H, No. 49 Wuhua Avenue, Wuhua Community, Bantian Street, Longgang District, Shenzhen
Email: support@tronsmart.com
800-270-1082 (USA & Canada)
+86-755-23603740 (Global)


FCC ID: 2AV3Z-HALO100

CE ROHS WEEE ETL

www.tronsmart.com Made in China

Bluetooth Connection

Click "Tronsmart Halo 100" to Connect.

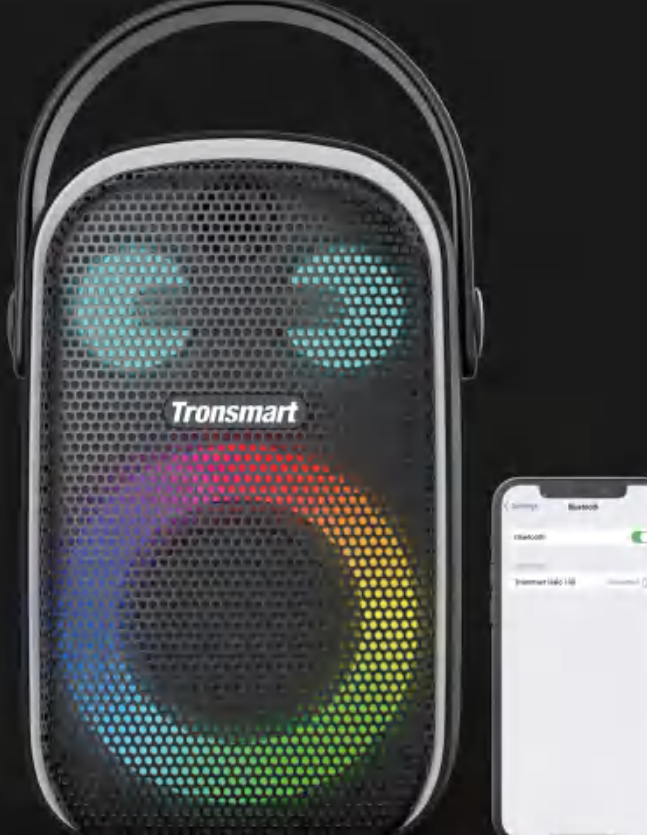


Dual Audio Modes

- Search & click "Tronsmart Halo 100" to connect with device A.
- Disconnect "Tronsmart Halo 100" from the device A (Note that do not clear the pairing record on the device).
- Tronsmart Halo 100 will re-enter pairing mode.
- Search & click "Tronsmart Halo 100" to connect with the device B.
- Click "Tronsmart Halo 100" on device A to connect.

How to Enter/Exit Stereo Pairing

- Turn on two speakers and make sure they haven't connected with any device.
- Press "Stereo Pairing button" once on either speaker (Host Speaker) to enter stereo pairing mode. The stereo pairing indicator of host speaker will flash white.
- If paired successfully, the stereo pairing indicator of both speakers will stay white.
- Search & click "Tronsmart Halo 100" to connect. The power indicator of host speaker will stay blue while vice one will off with stereo pairing indicator of both speakers stay white.
- Press "Stereo Pairing button" once on either speaker to exit stereo pairing mode.



Package Contents

- 1 x Tronsmart Halo 100 Portable Party Speaker
- 1 x 3.5mm Audio Cable
- 1 x Type-C Charging Cable
- 1 x Warranty Card
- 1 x User Manual
- 1 x SoundPulse Card

USB-A Power Bank Function

The speaker can use USB charge-out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A port under powering-on mode.

Aux-in Mode

Simply connect the speaker with your non-Bluetooth device via the 3.5mm audio jack cable. Note: After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.

TF Card Slot Mode

The speaker will play the music from your TF/Micro SD card when plugging the card into the slot. Note that Micro SD/TF Card shall not exceed 32GB.

USB Flash Drive Mode

The speaker will play the music from your U-disk when plugging into the slot.

Auto Power Off

The speaker will power off automatically after 30 minutes if it does not pair with any device through Bluetooth. It will also power off after 30 minutes if doesn't play any sound after pairing. When on low battery, the speaker will power off automatically as well.

Specifications

Model	Halo 100
Color	Black
Bluetooth Version	5.3
Audio Codec	SBC
Bluetooth Compatibility	A2DP, AVRCP, HFP, HSP
Transmission Distance	15m (98ft)
Frequency Range	40Hz-20KHz
Response	10Hz-18 (dependent by Volume Level & Audio Contents)
Battery Capacity	7,4Vx10200mAh
Input Power	50W Max Type-C Port
Output Power	60W
IP Rating	IPX6
Charging Time	3.5 Hours
Frequency Band	2402-2480MHz

Care & Maintenance

- Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable.
- Do not disassemble this product. It contains no user serviceable parts.
- Do not drop or jump on it and treat it with care for the best performance.
- Keep the product in a dry location. Dust, oil & moisture from humidity can accumulate on the body of the product if kept at an off-dry place.
- Do not dispose this product in fire or batteries may explode or leak.

Warranty Information

Your "Tronsmart Halo 100 Portable Party Speaker" is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team at support@tronsmart.com.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Warning Statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

		制作日期	2022-9-30	制作员	黄焕丽
名称	Halo 100				
尺寸	95.46x135mm				
材质说明	128g铜版纸、手风琴样式、总页数16页				
工艺说明	正面四色印刷、背面黑白印刷, 过哑膜				
版本	V1.3				
备注	V1.0 初稿 V1.1 添加说明内容 V1.2 修改内容 V1.3 修改产品图片				