 




# Mega Pro Bluetooth Speaker

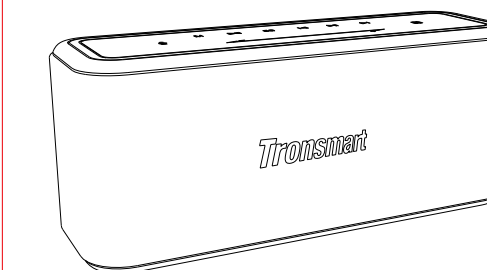

# User Manual

## CONTENTS

English .....	01~08
Italiano .....	09~15
Español .....	16~22
Deutsch .....	23~29
Français .....	30~36
русский .....	37~43
日本語 .....	44~50

 
 
**ENGLISH**  
Thank you for purchasing the Tronsmart Mega Pro Bluetooth Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: [support@tronsmart.com](mailto:support@tronsmart.com)

### PACKAGE CONTENTS

- 1 x Mega Pro Bluetooth speaker
- 1 x 3.5mm audio cable
- 1 x Type-C charging cable
- 1 x Warranty card
- 1 x User manual
- 1 x Storage bag

### BUTTON CONFIGURATION

- ① Voice assistant; Answer/End a phone call
- ② Disconnect Bluetooth; Reset; Music playing mode
- ③ TWS
- ④ EQ
- ⑤ Previous track
- ⑥ Play/Pause
- ⑦ Next track
- ⑧ NFC
- ⑨ Volume +/- slider;
- ⑩ Power ON/OFF
- ⑪ USB-A port (USB flash drive / power bank function)
- ⑫ TF/Micro SD card slot
- ⑬ Aux-in port
- ⑭ Type-C charging port

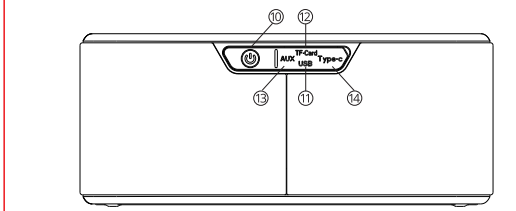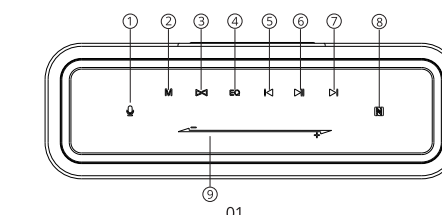

	Power On: Press and hold for 1 second to turn it on. Power Off: Press and hold for 2 seconds to turn it off. Reset: Press and hold for 8 seconds to shut it down forcedly.
	Play/Pause: During music playing mode, tap to play or pause the music.
	Tap once to choose TWS mode or exit TWS mode.
	Tap once for volume up. Press and hold the button for continuous volume up. Slide from "+" button to "-" button for volume down.
	Tap once for volume down. Press and hold the button for continuous volume down. Slide from "-" button to "+" button for volume up.
	Voice assistant: After your device is paired with the speaker, tap once to activate the voice assistant. Answer/End a phone call: During an incoming call, tap to answer or hang up the phone call. Reject a phone call: During an incoming call, Press and hold for 2 seconds to reject the phone call. Redial: During Bluetooth connected mode, double tap quickly to redial the last dialed-out number.
	Tap to choose next track.
	Tap to choose previous track.


<b>EQ</b>	Three EQ effects switching: Tap to switch three equalizer audio effects among Deep Bass, Vocal and 3D in turn. Deep Bass (default): Without an indicator light Vocal: Green light 3D: Blue light
<b>M</b>	Press to switch music playing modes between Bluetooth, Aux-in and Micro SD card mode. Disconnect Bluetooth: Press and hold for 3 seconds to disconnect Bluetooth. (The indicator light will keep on blue when the speaker is connected to Bluetooth. Instead, it'll keep flashing on blue.) Reset: Press and hold for 8 seconds until a sound prompt is heard to clear all paired devices and reset to factory default settings.

### SPECIFICATIONS

 
Model	Mega pro
Bluetooth	5.0
Bluetooth profile	A2DP V1.3, ACRCP V1.4, HFP V1.6
Bluetooth transmission	Up to 20m/66ft (open area)
Power	60W
Waterproof	IPX5
Power supply	DC 5V/3A, via Type-C port
Frequency range	20Hz - 20000Hz
Battery	10400mAh
Playtime	Up to 10 hours (on a 50% volume)
Talk time	Up to 20 hours (on a 70% volume)
Standby	About 24 months
Charging time	3 - 4 hours
Dimension	9.92 x 3.31 x 4.13 inches / 252 x 84 x 105 mm
Weight	1780 g / 62.78 oz

### How to Use

#### 1. Turn On/Off

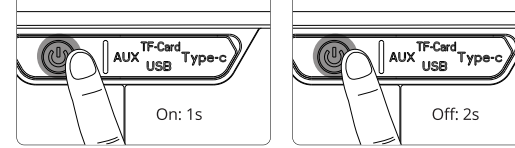


#### 2. Bluetooth Disconnect

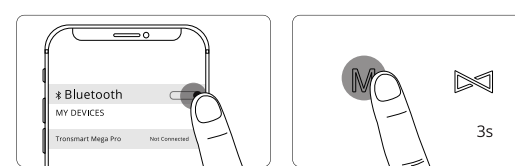 


Turn on the speaker and your device's Bluetooth settings, search for 'Tronsmart Mega pro' then tap to connect.

#### 3. Pair Two Mega Pro Bluetooth Speakers

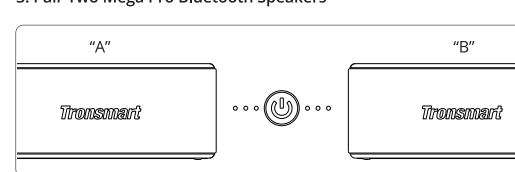 

 
Turn two speakers on and confirm they're not paired any Bluetooth devices.

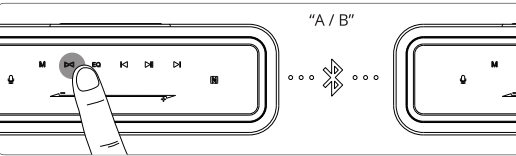

Press the 'TWS' button once on one of the speakers and the indicator light will keep flashing on yellow.

After two speakers have paired with each other successfully, you will hear a sound prompt and the indicator lights will go on yellow.

#### 4. Disconnect Two Speakers

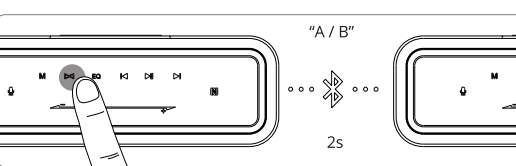 

Press the 'TWS' button once to disconnect two speakers from each other.

#### 5. Three Equalizer Audio Effects Switching

Tap the 'EQ' button to switch three equalizer audio effects between Balanced, 3D, and Deep Bass in turn.

Deep Bass (default)	Without an indicator light
Vocal	Green light
3D	Blue light

#### 6. NFC Streaming

Confirm Bluetooth & NFC functions are enabled on your device, and then put the device on the NFC area of the speaker to pair automatically. If you need to disconnect NFC streaming, put the device back to the area again to disconnect.

#### 7. USB-A Power Bank Function

This speaker carries a USB charge out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A port. The output power is up to DC 5V/1A. In order to maintain stable music playing performance, it's not recommended to use the music and power bank function at the same time.

#### 8. Aux-in Mode

Simply connect the speaker with your non-Bluetooth device via the 3.5 mm audio jack cable.  
Note: After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.

#### 9. TF/Micro SD Card Slot Mode

The speaker will play the music from your TF/Micro SD card when plugging the card into the slot. The maximum supported memory is 32 GB.

#### 10. USB Flash Drive Mode

The speaker will play the music from your USB flash drive when plugging the USB into the USB-A port. The maximum supported memory is 128 GB.

#### 11. Reset to Factory Default Settings

Press and hold the 'M' button for 8 seconds until a sound prompt is heard, which means that the speaker has been reset to factory default settings.

#### 12. Auto Power Off

The speaker will power off automatically after 1 hour if it does not pair with any device through Bluetooth or does not play any sound after pairing. When in low battery, the speaker will power off automatically as well.

#### 13. Charging

	Charging
	Charging completion

### Care & Maintenance

Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable. Do not disassemble this product. It contains no user serviceable parts. Do not drop or jump on it and treat it with care for the best performance. Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place. Do not dispose this product in fire or batteries may explode or leak.

### Warranty Information

Your 'Tronsmart Mega Pro Bluetooth Speaker', is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team at [support@tronsmart.com](mailto:support@tronsmart.com).

### FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.  
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.  
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to

which the receiver is connected.  
--Consult the dealer or an experienced radio/TV technician for help.  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF warning statement:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



**SHENZHEN GEEKBUY E-COMMERCE CO., LTD.**  
19th Floor, Galaxy World Tower B, #1 YaBao Rd.,  
LongGang District, Shenzhen, China  
Email: [support@tronsmart.com](mailto:support@tronsmart.com)  
800-270-1082 (USA & Canada)  
+86-755-23603740 (Global)

