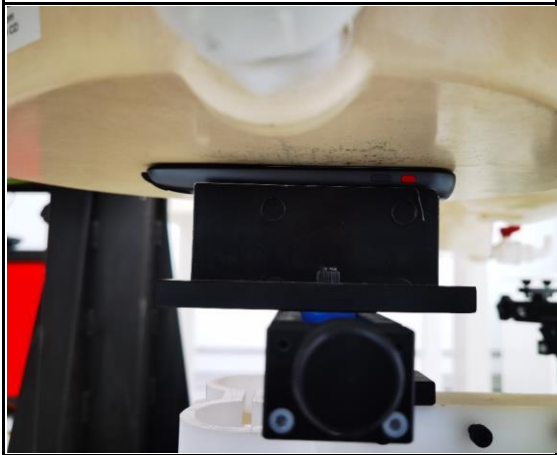
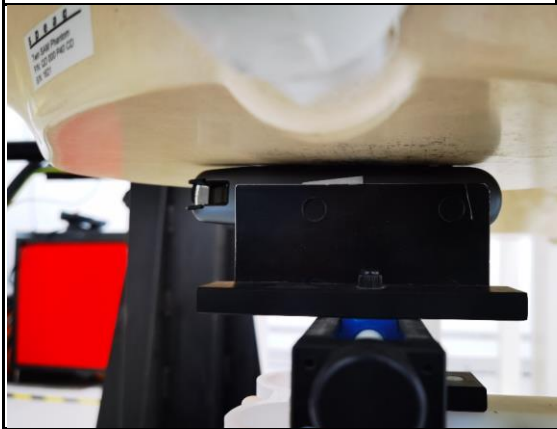
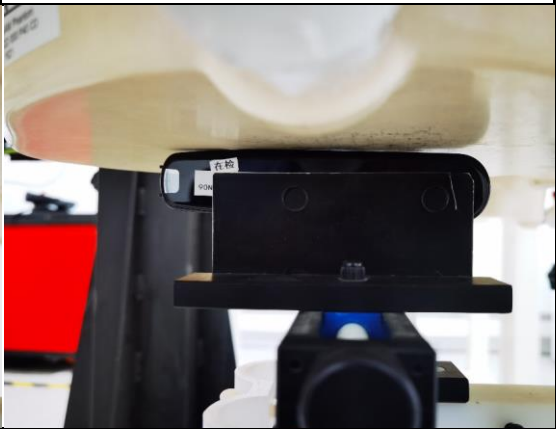



**Test positions for body:**

According to the antenna position, the Body SAR is tested at the following 5 test positions all with the distance =0mm between the EUT and the phantom bottom :

Front in body position	Back in body position
	
EUT Setup Configuration 1	EUT Setup Configuration 2
Left Side in body position	Right Side in body position
	
EUT Setup Configuration 3	EUT Setup Configuration 4
Top Side in body position	
	
EUT Setup Configuration 5	