



Battery

EN

- *A rechargeable Li-ion battery is installed in the tablet. *DO NOT attempt to replace the tablet battery by yourself because you may damage
- the battery, which might cause overheating, fire or injury. *DO NOT dispose of tablet in a fire.
- *DO NOT expose the tablet battery to any heat source, direct sunlight or high temperature.
- *Only use the ORIGINAL power adapter provided by us to charge the tablet battery. *We suggest you drain the battery completely once a month if only use your tablet occasionally.
- *The Li-ion battery in your tablet should be serviced or recycled by an authorized service provider, and must be recycled or disposed of separately from household
- waste. *Dispose of battery according to your local environmental laws and regulations.
- Sleep Mode
- Simply press the power button once to switch the tablet to the Sleep Mode when the tablet is ON; press again to wake it up.
- -🍎- Tip: Go to Settings > Display > Sleep to set the time of entering the Sleep Mode.

Screenshot

- * Press the Volume- button and the Power On/Off button for 2 seconds to capture a
- picture. * Press and hold the power button for 2s, then release it. It will show Power off, Restart
- and Screenshot on the screen. Tap Screenshot to capture a screenshot.
- HOME SCREEN Icons on the Bottom Menu 🛟 🛛 🔘 1.Back 2.Home Screen Image: 3.Recent Activities 3 Home Settings, Widgets and Wallpapers Home settings ₿ Widgets Wallpapers
- Tap and hold the empty section of a Home Screen, Home Settings, Widgets and Wallpapers will be displayed.

* Press and hold the power button for 2~3s to turn on your tablet. Select your language and set up your tablet following the start guide. * Press and hold the power button for 2s, then release it. It will show Power off, Restart and Screenshot on the screen. Tap Power off to turn off the tablet. * Press and hold the power button for 10s to do a forced reboot when it's frozen.

02

EN

01

EN

05

EN

 Show Google App: Show Google Apps when you swipe leftward on the main Home Screen.

03

EN

EN

- Add icon to Home Screen:
- Allow the new Apps installed from **Play Store** to be displayed on the Home Screen. Notificaton dots:
- Show/hide the small circular dots that sit on the upper right corner of your App icons. Home Screen loop:
- Enable it to allow continuous Home Screens swiping/sliding. • Pull down action:
- Select the action when you swipe downward on the Home Screen.
- Dynamic icon: Enable to dynamically change the date of Calendar and the time of the Clock.
- Home screen style: Select the option from Single layer and Dual layer. You can access all the apps by sliding leftward/rightward if you select Single layer; while access all the apps
- by swiping upward/downward if you select **Dual layer.** Desktop grid:
- Set the number of $\operatorname{\textbf{Rows}}$ and $\operatorname{\textbf{Columes}}$ for displaying Apps on the Home Screens.
- 2 Tap Widgets, touch and hold any application (e.g. Clock), then slide and add it to a Home Screen. Remove it by sliding it to X Remove.
- 3 Tap Wallpapers to change the current wallpaper of the tablet from the default wallpapers or your photos.

SETTING BASICS

Quick Settings

Swipe down from the top of the screen to access Quick Settings.

Thu, Sep 12 * 12 🔺 ? * ⊖ 💎 : Wifi. Tap to connect/disconnect to a wireless network. * Θ 9 Bluetooth. Enable/disable the Bluetooth of the tablet. 😑 : Do not disturb. Mute sound and stop vibration 0 Ŧ \odot after enabling this function. 😙 : Turn on/off the Auto-rotate of the screen. : Tap to choose the power setting you prefer to • \odot o save the battery time.

★ : Airplane mode. Turn on/off all the network 1 0 connectivity. • : Eye comfort. The blue light will be filtered out and the screen will take on a tint

of yellow after enabling this option. () : Read mode: The screen will be black and white after enabling this option.

Tap the 🖉 icon to change the options in the Quick Settings. Long press each icon to enter the interface of its detailed settings.

More Settings

Power On/Off

Go to Quick Settings, then tap the \clubsuit icon to enter the detailed setting interface. Or, tap Settings App on the Home screen to enter.

٩	Search settings
0	Network & internet Will, data usago
0	Connected devices Bluetooth
•	Apps & notifications Permissions, default apps
0	Battery 28%- Should last until about 6:30 PM
0	Display Wallpaper, sleep, font size
0	Scheduled power on/off Power on, power off
0	Navigation bar
0	Audio profiles Volumes, silent
θ	Storage 17% used - 26.68 GB free
6	Security & location Screen lock
8	Accounts No accounts added
0	Accessibility Screen readers, display, interaction controls
8	Digital Wellbeing & parental controls Screen time, app timers, bedtime schedules
©	Google Service & Preferences
0	System Language, time, backup, updates

Network & internet * Connect to any working Wifi * Monitor the data usage * Enable/disable the Airplane Mode * Add VPN connections

Connected devices * Pair with Bluetooth devices and check the paired devices * Turn on/off Bluetooth * Add and check printers * Check the received files from other devices via bluetooth connection and more

Apps & notifications * Check the Apps recently opened

* Check all the Apps on the tablet * Check the screen time for Apps

06

* Adjust App notification settings * Set the App permissions * Uninstall the third-party Apps * Clear the cache of the Apps and more Battery * Display the remaining battery power as a percentage * Enable/disable Battery percentage and Battery Manager * Set Power saving optimization * Manage the battery optimization for apps * Check the detailed battery settings for Apps

Display

* Adjust the screen brightness * Adjust the font size and display size * Set a screen saver * Change the wallpaper * Adjust the time of entering the Sleep Mode and more

Scheduled power on/off * Set the time and days of the week for the tablet to automatically turn on/off

Navigation bar * Show or hide the navigation bar * Select a combination of navigation buttons from the four options provided

Audio profiles * Select audio profiles from General, Silent and Outdoor * Set the volumes for ring, notification, media and alarm

Storage * View and manage your storage space

Security & location * Set screen lock pattern, e.g. Password, PIN, Swipe etc.

EN

EN

EN

04

* Set the Lock screen preferences * Turn on/off the location services for specific Apps.

* Set to show/hide the password when input a password. and more

Accounts * Add and manage the user accounts on your tablet

Accessibility

 * For vision and hearing impaired users, manage settings for Screen readers, Display, and more

Digital Wellbeing & parental controls

* Check your app usage based on Screen time, Notifications received, or Times opened from Dashboard * Set a schedule for Wind Down and switch on the setting you prefer * Manage the related notification settings to reduce interruptions * Set up Parental controls to help your kids balance their screen time

Google * Set the preferences for Google related services

System

08

EN

G

* Check the detailed information about the tablet * Set Language Tap Languages & input > Languages > +Add a language to add your language. After adding, hold and slide the \equiv to the top to change the language. * Turn on/off the quick access to the camera. * Set the date and time * Turn on/off the Back up to Google Drive ' Restore factory sei

NETWORK CONNECTION

Launch the App Settings or long press the Wifi/Bluetooth icon in Quick Settings.

Wifi Connection

1 Tap Network & internet and turn on the Wifi. All the Wifi connections available will be listed.



EN

(1) Go to Connected devices > Connection prefernces > Bluetooth to turn on the pluetooth on your tablet. 2 Tap +Pair new device to enter the scanning interface. Devices available will be

isplayed after a few seconds.

3 Tap the desired device to get a paring code and click PAIR on both devices. The automatic connection is applied to some devices.

APP MANAGEMENT

App Download and Installation

1 Tap and open **Play Store** on the Home Screen. 2 Log into your Google Account, then search and download the App you need.

App Management

Move the App Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen Touch and hold the App, then slide to X Remove to remove it from your Home Screen.

Uninstall the App Touch and hold the App, then slide to the 🔟 Uninstall to uninstall the App.

Clear the Cache of the App Go to Settings > Apps & notifications. 2 Select an App > Storage > CLEAR CACHE to clear the cache.

INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wifi network before navigating the Internet. You may use the pre-installed Chrome browser or use another browser downloaded on the Play Store.

MULTIMEDIA 🗖

Connecting to a Computer

1. Connect your tablet to the computer with a Type-C cable. 2. Media device(MTP) is the default setting. Go to your computer and find your tablet Vankyo_S10 to transfer files between your tablet and computer.

🍎 Tips: Go to Quick Settings, tap Android System · USB file transfer turned on > Tap for more options > USB computer connection to select the option preferred. 1 Select Charge Only to charge your tablet. 2 Select Camera(PTP) to transfer photos between the devices. 3 Select MIDI to play MIDI instruments on the tablet.



2 Select your Wifi and input the correct password.

Tap Advanced > Reset options > Erase all data (factory reset) to restore the factory setting

Android System *

← USB computer connection

Connect as

Charge only

Media device (MTP) File transfer

Connecting to an External Device

1 Install a memory card with the capacity up to 128G and go to Quick Settings.

memory card storage to move files between the card and tablet.

3 Set the memory card as a portable storage by selecting **Portable storage**. Enter

Camera (PTP)

MIDI MIDI

2 Tap SET UP.

ap for more options.

3 file transfer turned on

Ĵ

۹

0

 $oldsymbol{O}$

0

0

Wifi preferences Bluetooth Pairing Please turn on the Bluetooth on your bluetooth device firstly.

VANKYO1

VANKY02

Settings •

Tap to set up

SET UP EJECT

CLEAR AL

How will you use this SD card?

Use for extra tablet storage

Use for portable storage

torage

Tablet storage

For apps, files, and media on this tablet only

SD card


+6


Set up later



Ô

10

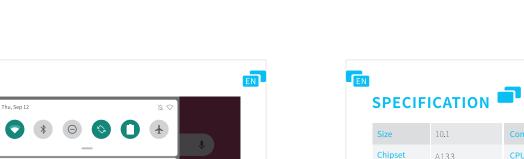

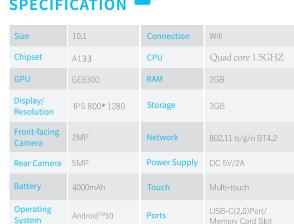

TROUBLESHOOTING

Q1. The tablet doesn't power on. * Reboot your tablet after charging for more than 30 minutes. * Press the power button to check if the tablet is in the Sleep Mode. * Press and hold the power button for 10s to reboot it. * Press the Reset button with a pin to reboot the tablet.

Q2. The tablet doesn't charge. * Make sure the USB cable is properly plugged into the charging port. * Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation. * Uninstall the App with the error message, then download and install again.

14

* Press the **Reset** button with a pin to power off the tablet.

Q4. The tablet cannot be detected by the computer. * Make sure the tablet is powered on. * Try another USB cable. * Try another USB port on the computer. * Instead of Charge only, choose Media device(MTP) or Camera(PTP) when connecting the tablet to the computer.

Q5. The tablet cannot connect to the Wifi. * Make sure the Wifi in your tablet is ON. * Make sure you input the correct password when connecting the Wifi. * Restart the router. * Make sure there is no filter setting or device connection limitation in the setting of the router. * Forget the current Wifi, reset the router and connect the Wifi again.

Q6. The storage space of the tablet is not enough. * Delete the Apps you don't use. * Clear the cache of the Apps regularly. * Install a memory card to expand the storage.

Q7. The screen is unresponsive. * Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth to clean it.

O8. The font size is too small to read. * Please go to Settings > Display > Advanced > Font Size to adjust the text size.

Q9. Can the tablet support OTG function? * Yes, but an extra OTG cable is required. You can connect the mouse or a USB drive through the cable then.

EN

12

CAUTION

 
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

--- The symbol indicates DC voltage

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

This product can be used across EU member states.



FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device the part of the formation of perturbation of perturbation of the formation of t

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.