

tineco

PURE ONE STATION FURFREE SERIES Smart Vacuum Cleaner

Instruction Manual

Manual De Uso

Mode D'emploi



*Actual product may differ from illustration.

TINECO IS HERE TO HELP.
We'll get back to you within 1 business day.



 www.tineco.com

 1-855-292-8864

CONTENTS

Important Safety Instructions.....	2
Specifications	6
Overview.....	7
Accessories.....	9
Assembly	10
Operation.....	12
Maintenance	19
Troubleshooting.....	22
Warranty	23

TINECO IS HERE TO HELP.

We'll get back to you within 1 business day.

 www.tineco.com

 1-855-292-8864

Important Safety Instructions

SAVE THESE INSTRUCTIONS Household use only.

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE). Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.


WARNING – To reduce the risk of fire, electric shock, or injury:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance shall not be performed by children without supervision.
2. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
3. For INDOOR use ONLY. Do not use the appliance outdoors, nor in commercial or industrial environments. Do not use the appliance on wet surfaces or surfaces with standing water.
4. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
5. Use only as described in this manual. Use only manufacturer's recommended attachments.
6. Do not use with a damaged cord or plug. If appliance has been dropped, damaged, left outdoors, dropped into water, or is not working as it should, return it to a service center.
7. Do not handle charger, including charger plug, and charger terminals with wet hands.
8. Do not block openings. Stop use if openings become blocked. Clean and remove any blocked objects according to the manual instructions.
9. Keep hair, loose clothing, fingers, and all parts of your body away from openings and moving parts.
10. Use extra care when cleaning on stairs.
11. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
12. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
13. Do not use without a filter.
14. Prevent unintentional activation. Ensure the switch is in the off position before connecting to the battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or powering on the appliance with the switch on may cause accidents.

15. Disconnect the battery pack from the appliance before making any adjustments, changing accessories, storing the appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
16. For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
17. Use appliances only with specifically designated Tineco battery packs. Use of any other battery packs may create a risk of injury and fire.
18. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
19. Under improper usage, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid comes into eye contact, seek medical help. Liquid ejected from the battery may cause irritation or burns.
20. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
21. Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 266°F (130°C) may cause an explosion.
22. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
23. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
24. This appliance contains battery cells that are non-replaceable. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
25. Always turn off this appliance before connecting or disconnecting the motorized nozzle.
26. Do not charge or store the appliance outdoors or inside a car. Only charge, store or use the battery in a dry indoor area where the temperature is higher than 39.2°F (4°C) but lower than 104°F (40°C). The charger is for indoor use only.
27. The appliance is only to be used with the unit provided. The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
28. Use only with <AA2237/AA2311> supply unit. This appliance contains batteries that are non-replaceable.
29. **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
30. **GROUNDING INSTRUCTIONS**
 - 1) This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

2) This appliance is for use on a nominal 120-V circuit and has a grounding attachment plug that looks like the plug illustrated below. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adapter should be used with this appliance.

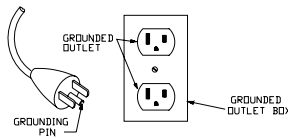

FCC Supplier's Declaration of Conformity

Tineco / PURE ONE STATION FURFREE SERIES

This appliance complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This appliance may not cause harmful interference, and (2) this appliance must accept any interference received, including interference that may cause undesired operation.

Tineco INTELLIGENT, INC.

1700 WESTLAKE AVENUE N., SUITE 200, SEATTLE, WA, 98109, USA

WWW.TINECO.COM

1-855-292-8864

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital appliance, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- (1) Reorient or relocate the receiving antenna.
- (2) Increase the separation between the equipment and receiver.
- (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- (4) Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 5cm between the radiator and any part of your body.

Note

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment, such modifications could void the user's authority to operate this equipment.

IC Note

This appliance contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) this appliance may not cause interference.
 - (2) this appliance must accept any interference, including interference that may cause undesired operation of the appliance.
- This Class B digital apparatus complies with Canadian ICES-003.
 - This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 5cm between the radiator and any part of your body.


Specifications

Product (Appliance)	PURE ONE STATION FURFREE
Voltage	14.4V \equiv
Rated Power	270W
Dustbin Capacity	0.3L
Charging Time	4-5 hrs

CLEAN STATION


Input (Self-Cleaning Mode)	120V 60Hz 4.2A
Input (Charging)	120V 60Hz 0.5A
Output	18V \equiv 1A

Disposal

- The battery contains materials that are harmful to the environment and must be removed from the appliance before it is discarded.
- Batteries, chargers, accessories and packaging should be sorted for environmental friendly recycling. Do not put them into fire, water or soil. Do not dispose of chargers into household waste! 
- If battery leakage contacts skin or clothing, immediately flush with water to avoid irritation and seek medical help.

Overview

EN

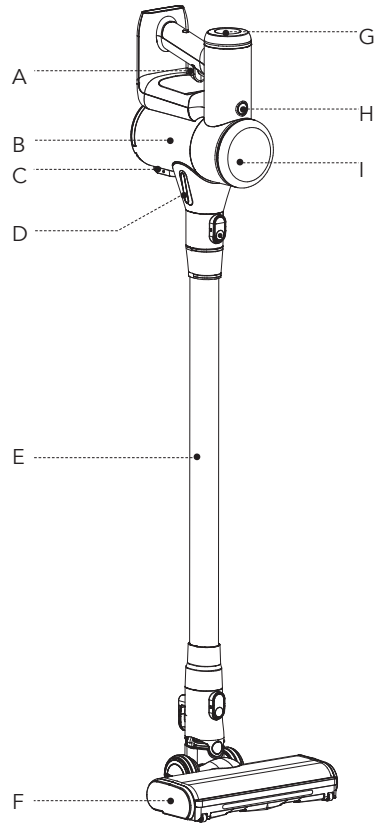

A. Power Button

B. Dustbin

C. Dust Empty Release Button

D. Dust Sensor

E. Tube


F. ZeroTangle Power Brush

G. Digital Display

H. Auto/Max Mode

I. HEPA Filter

Digital Display

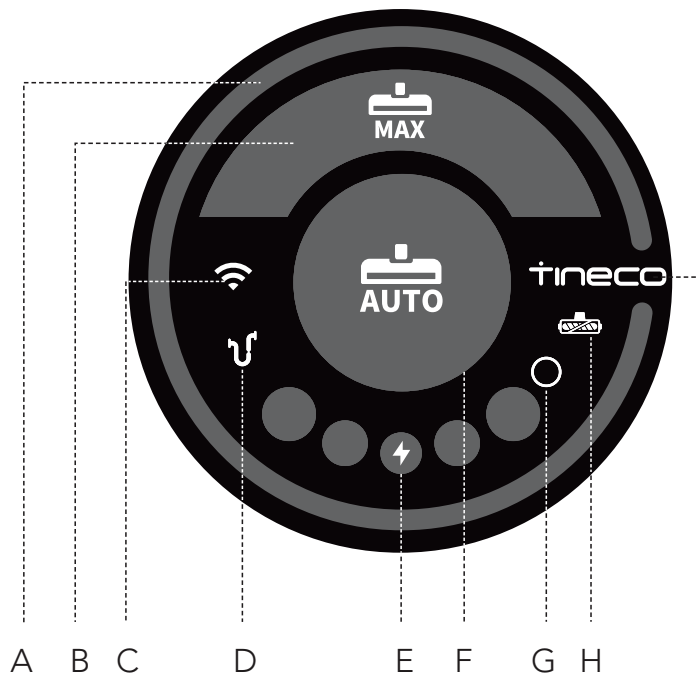


- A. Dust Monitoring Loop
(Blue to red according to the dust amount)
- B. Max Mode
- C. WiFi Indicator
- D. Air Channel Blocked

- E. Battery Level
- F. Auto Mode
- G. Dust Sensor Malfunction
- H. Brush Roller Tangled
- I. Tineco Logo

Accessories


Note:

- Test an accessory on a small, inconspicuous area before use on sensitive surfaces.
- To identify what should be included with your purchase, please refer to the packaging box.
- As shown below, there are many components compatible with this model. If you require more accessories, please visit www.tineco.com or store.tineco.com.

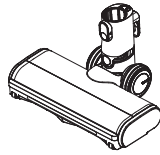

ZeroTangle power brush

With improved performance on both hard floors and carpets. Its hair-tangle-free feature makes it an excellent option for pet owners.

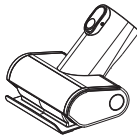

Mini power brush

For vacuuming upholstered furniture, mattresses etc. Vacuums pet hair and removes stubborn stains.



2-in-1 Crevice dusting brush

The slimline crevice tool is ideal for tight spots, corners and crevices.



Cleaning tool

For maintenance of the Clean Station.



Hair cleaning tool

Use the end with the small blade to remove hair and debris wrapped around the roller.
Use the end with the brush to clean the brush window, and the dustbin, as required.


EN

Assembly

Vacuum Installation




Insert the power brush, tube and main unit.

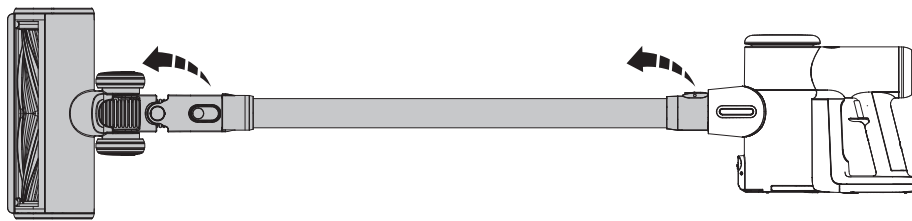


Press the release button to disconnect the power brush and tube.

Clean Station Installation


Note: Please make sure the Clean Station is placed on a hard flat surface.

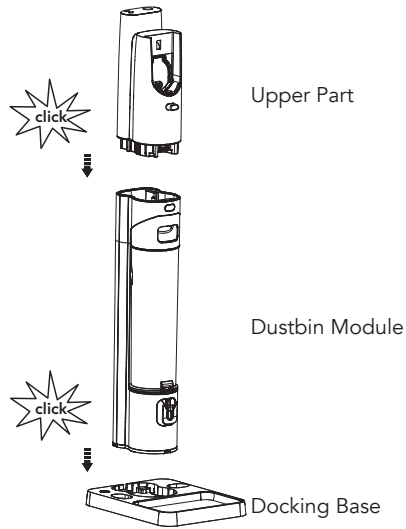


Insert dustbin module into docking base first, then insert upper part into the dustbin module.

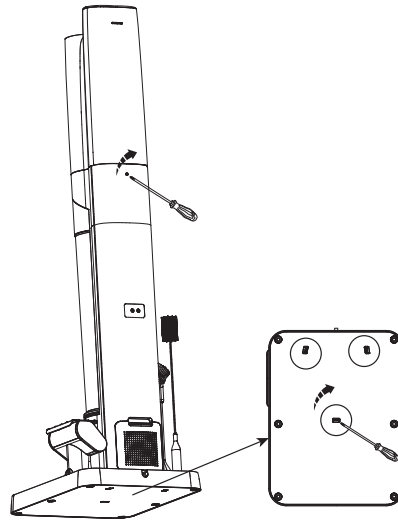

In the event that the Clean Station needs to be disassembled, press the latch with tool to remove the three parts.

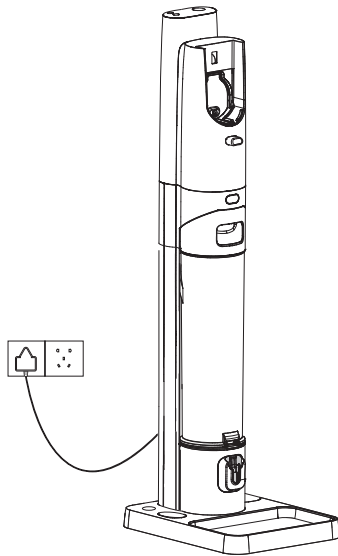

Plug in the Clean Station.

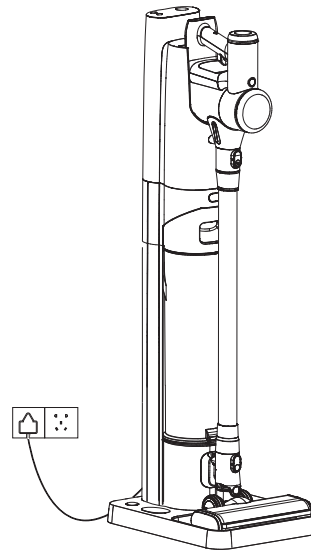


Place the vacuum and accessories on the Clean Station for convenient storage after use.

Operation


Preparing for Use


Note:


- Before the first use, please charge the appliance (see "Charging the Battery") for 4-5 hours in an area where the ambient temperature is between 39.2°F (4°C) and 104°F (40°C).
- Select an accessory and attach it to the appliance before use (see "Accessories").

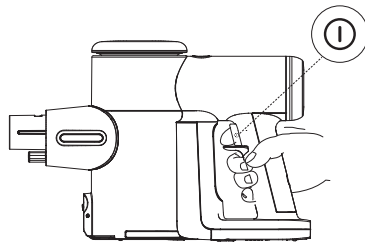

Press the ① button to activate suction.
Press it again to turn off the appliance.

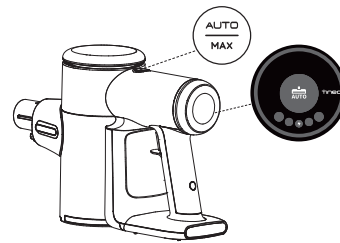

The appliance will start in AUTO mode by default. Press the  button to switch between AUTO and MAX mode.

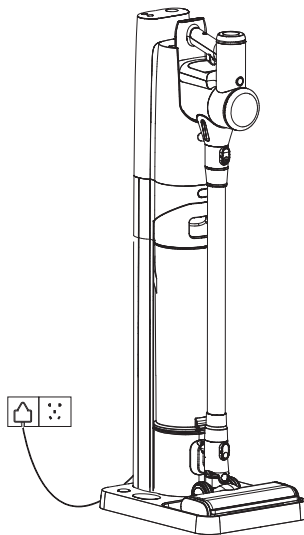


Place the vacuum and accessories on the Clean Station for convenient storage and charging after use.

Cleaning Mode Selection


AUTO Mode


- In AUTO mode, the color of dust monitoring loop changes according to the amount of dust detected.
- Automatically, the monitoring loop in red indicates a higher amount of dust detected, while the loop in blue indicates a lower amount detected. This feature provides the optimal cleaning solution.

To activate AUTO mode:

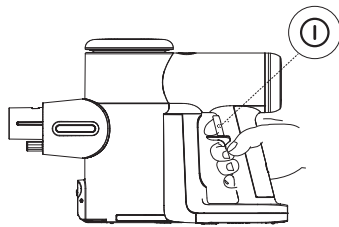



Press the power button to activate suction. The default setting upon startup is AUTO mode.

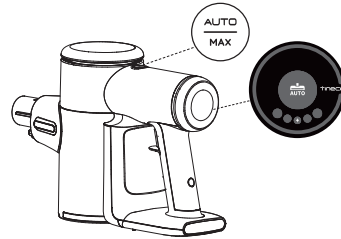

When in MAX mode, press the  button to switch to AUTO mode.

MAX Mode

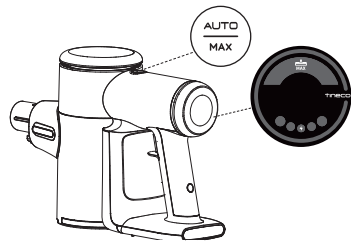


In AUTO mode, press the  button to switch to MAX mode.

Note:


Keep sharp objects away from the digital display screen to avoid scratches and scrapes.

APP

- All the functions can be performed using the Tineco app. Download the Tineco app from the App Store, Google Play and Tineco Official Site.

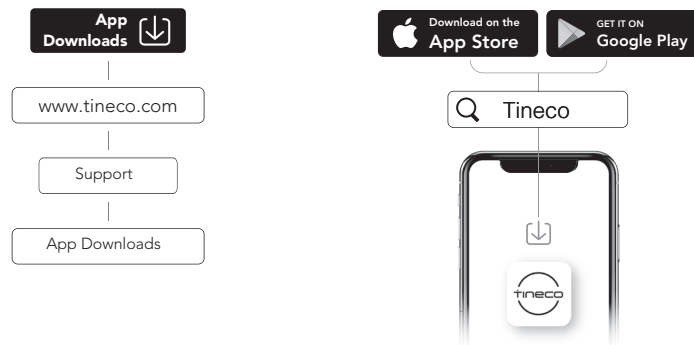

Turn On/Off WiFi

- Turn on WiFi: During work, hold the  button for 3 seconds to enter Help Center and go to Connect to network.




- Turn off WiFi: Hold the  button for 20 seconds to turn off.




Vacuum's Dustbin Emptying & Vacuum Charging

Note:

- To make sure that the vacuum cleaner is successfully charged, please place it near the charging port. Also, place the dustbin close enough to the suction port of the Clean Station to ensure that the Clean Station is fully operational.
- The vacuum cleaner cannot be charged when connected to accessories other than the brush roller.
- The vacuum cleaner is not allowed to be removed when the self-cleaning or pet grooming feature is activated.

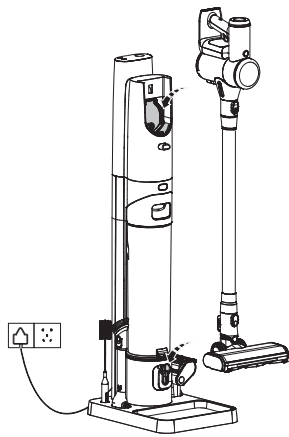


Place the vacuum onto the Clean Station. The Clean Station will then start charging, meanwhile self-cleaning will also be activated.

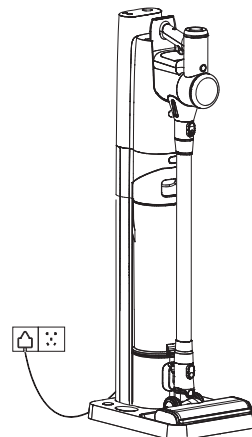


When self-cleaning is complete, the Dust Monitoring Loop turns solid blue, and the voice announces "Self-cleaning completed."


Clean Station Dustbin's Emptying

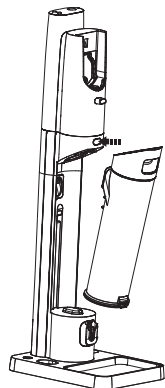

Press the release button and pull outward to remove the dustbin.

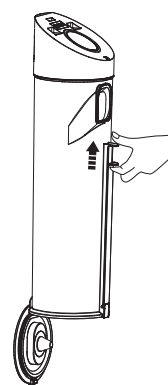

Squeeze the latch to open the cover and empty the dustbin.

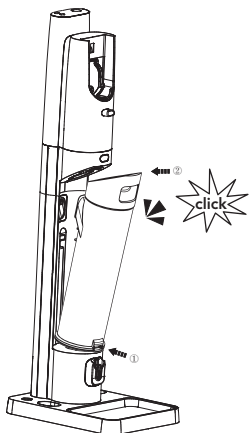

Close the dustbin cover and put the dustbin back into place.

 **Warning:**

- Only use the Tineco-provided adapter to charge the appliance.
- To avoid trip hazards, please place the appliance securely on the charging dock, near a wall during charging.
- During long periods of not being used, store the appliance in a cool, dry place. Ensure the battery is fully charged every 3 months.
- Do not expose appliance to sunlight or freezing temperature. Recommended temperature range: 39.2°F (4°C)~104°F (40°C).

Runtime

- When in AUTO mode, the runtime is approximately 60 minutes. When MAX power is used, the runtime is approximately 15 minutes.
- Estimated runtime data was obtained by Tineco Laboratory using one battery and non-motorized accessories.

Charging Time

- A full charge takes approximately 4-5 hours.
- Estimated data was obtained by Tineco Laboratory using ambient temperatures between 39.2°F (4°C) to 104°F (40°C).

Indicators (Appliance)

When in Use



Max indicator on: Max mode.



AUTO indicator on: Auto mode.



Five solid green lights: full power.



Three solid green lights: medium power.



One solid green light: low power.



Blinking green light: battery level < 5%.



LED loop blinking with a beep: charging failure, check the troubleshooting.



Blinking: brush roller has a blockage.



Blinking: appliance has a blockage, either in the filter or in the dustbin.



Blinking: sensor inside the dustbin is obstructed.



Lit: WiFi is connected.



Blinking: WiFi is connecting.



Off: WiFi is not connected, please connect.

During Charging



Continuous blinking: charging.

Fully Charged



Battery level: 100%.



Maintenance

Note:

- Wash and dry the HEPA filter every 5 months, replacing it every 18 months.


EN

Dustbin and Mesh Filter (Appliance)

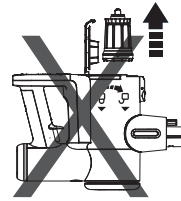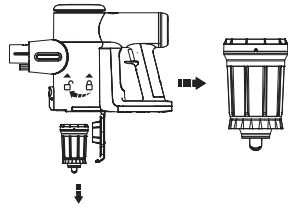


Turn counter-clockwise to remove the mesh filter.

Do not turn the appliance upside down when removing or installing the mesh filter to prevent dust from entering the motor.

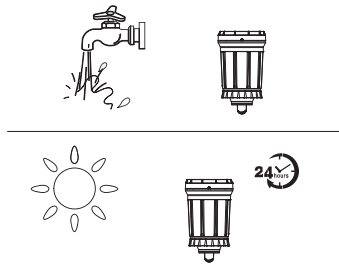


The mesh filter can be washed under cold running water and must be completely dry before reinstalling.

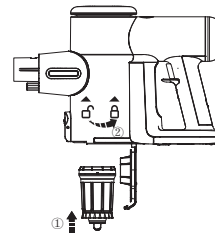


After cleaning, install the clean filter back into the main unit, then close the dustbin flap.

HEPA Filter

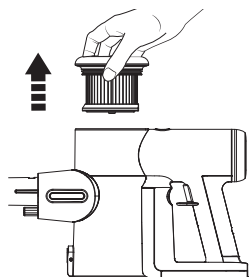


Pull out the HEPA filter (magnetically designed) for cleaning. Do not use the appliance without first installing the HEPA filter.

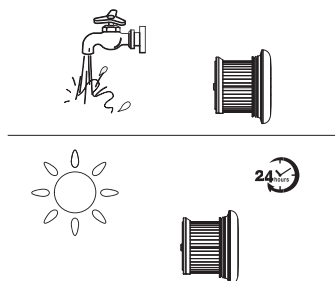


The HEPA filter can be washed under running water and must be completely dry before reinstalling.

Dust Sensor

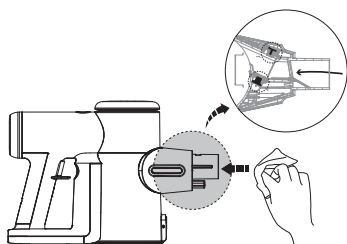


Wipe the suction mouth with a damp cloth to prevent the accumulation of dust, which may impact the cleaning performance.


Mini Power Brush

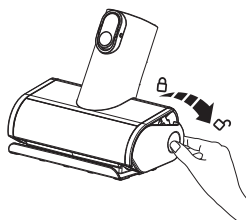


Press against the roller end cover downward.

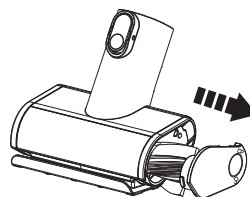

Pull out the brush roller.

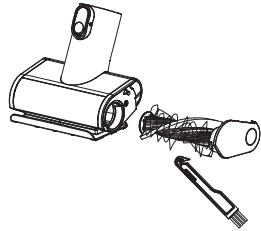


Remove the debris wrapped around the roller with the Tineco Hair Cleaning Tool.

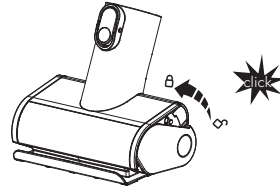


Fully reinsert the brush roller at an angle and push upward until it clicks securely back into place.


Brush Roller

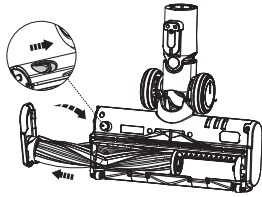

With the power off, slide the switch to open the brush roller end cover, and rotate it counter-clockwise to pull out the brush roller.

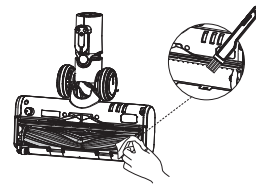

After removing the brush roller, gently clean the brush window, suction mouth and the row of plastic teeth.

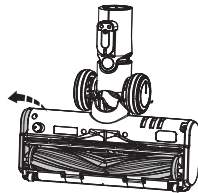

Fully reinsert the brush roller into the brush window and the end cover can be rotated counter-clockwise until it clicks securely back into place.

Warning:

- The power brush contains electrical components which must not be soaked or washed with water.
- To reduce the injury, do not touch the brush roller while the appliance is in working condition.

SCAN THE QR CODE BELOW TO GET PRODUCT CARE VIDEOS.



Troubleshooting

Problem	Possible cause	Solution
The appliance does not turn on	No power	Charge the battery
	Auto protection for overheating	Restart after cooling down
	The appliance is blocked (i.e. the tube, suction mouth or some other parts)	Check and remove blockages
Weak suction power	Dustbin and filters are full	Clean the dustbin and filters
	The appliance is blocked (i.e. the tube, suction mouth or some other parts)	Remove blockages
	The brush roller is tangled with hair or fibers	Clean the brush roller
Battery won't charge	Vacuum is not properly placed on the docking base.	Pull the vacuum up and place it back on the docking base again.
Brush roller tangled indicator is blinking	The brush roller is blocked	Remove blockages
The indicator for blocked air channel is blinking (accompanied by a beep).	The appliance is blocked, or full of dust in filter and dustbin	Remove blockages
Indicator for dust sensor malfunction is blinking	The sensor inside the dustbin is blocked	Clean the dust on the inner sensor
WiFi indicator is off	WiFi is not connected	Follow the in-app guide to connect to WiFi
LED loop blinking with a beep	Auto protection for overheating	Restart after cooling down
Abnormal motor sounds	The appliance is blocked (i.e. the tube, suction mouth or some other parts)	Remove blockages

Note:

If the above troubleshooting guide fails to provide a solution, please visit our website www.tineco.com for further support.

Warranty

2-YEAR LIMITED WARRANTY

- Only applies to purchases made from authorized retailers of Tineco.
- Is subject to the adherence of the requirements outlined in this instruction manual, and is subject to further conditions outlined below.
- This warranty is governed by and construed under the laws of the country in which the purchase took place. We provide 2-year warranty or a warranty period as stipulated by applicable local law, whichever is longer.

WHAT IS COVERED?

- Your Tineco appliance has a 2-year warranty against original defects in material and workmanship, when used for private household purposes in accordance with the Tineco Instruction Manual. Motorized accessories and battery bought separately come with a 1-year warranty.
- This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your appliance is in proper operating condition during the warranty period.
- This warranty will only be valid if the appliance is used in the country in which it was sold.

WHAT IS NOT COVERED?

Tineco shall not be liable for costs, damages or repairs incurred as a result of:

- Appliances purchased from an unauthorized dealer.
- Careless operation or handling, misuse, abuse and/or lack of maintenance or use not in accordance with the Tineco Instruction Manual.
- Use of the appliance other than for normal domestic purposes, e.g. for commercial or rental purposes.
- Use of parts not in accordance with the Tineco Instruction Manual.
- Use of parts and accessories other than those produced or recommended by Tineco.
- External factors unrelated to product quality and use, such as weather, modifications, accidents, electrical outages, power surges or acts of God.
- Repairs or alterations carried out by unauthorized parties or agents.
- Failing to clear blockage and other hazardous material from the appliance.
- Normal wear and tear, including normal wearing parts, such as clear bin, belt, filter, HEPA, brush bar, and power cord (or where external damage or abuse is diagnosed), carpet or floor damage due to use not in accordance with manufacturer's instructions or failure to turn the brush bar off when necessary.
- Reduction in battery discharge time due to battery age or use.

WARRANTY LIMITATIONS

- Any implied warranties relating to your appliance including but not limited to warranty of merchantability or warranty of fitness for a particular purpose, are limited to the duration of this warranty.
- Warranty coverage applies to the original owner and to the original battery only and is not transferable.
- This limited warranty gives you specific legal rights. You may also have other rights which vary by region.
- Manufacturer's warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions.

WARRANTY SERVICE

Register: We highly recommend that upon purchase, you register your appliance by logging into our official website (www.tineco.com) or scanning the QR code (see right) to enjoy more exclusive benefits. To register, please enter the whole serial number (on the back of the appliance). Failure to register your product won't diminish your warranty rights.



How to Claim: Please retain your proof of purchase. To make a claim under our Limited Warranty, you need to provide your serial number and the original purchase receipt with the purchase date and order number on it.

All work will be carried out by Tineco or an authorized agent.

Any replaced defective parts will become the property of Tineco.

Service under this warranty will not extend the period of this warranty.

Contact our Customer Service
Hotline: **1-855-292-8864**
or Visit Tineco website
www.tineco.com
for expert customer service.

CONTENIDO

Medidas importantes de seguridad	26
Especificaciones.....	30
Descripción general	31
Accesorios.....	33
Montaje	34
Funcionamiento.....	36
Mantenimiento	43
Resolución de problemas	46
Garantía	47

TINECO ESTÁ AQUÍ PARA AYUDAR.  www.tineco.com

Nos pondremos en contacto con usted dentro de 1 día laboral.  1-855-292-8864

Medidas importantes de seguridad

CONSERVE ESTAS INSTRUCCIONES

Solo para uso doméstico.

Al usar aparatos eléctricos, se debe seguir siempre una serie de medidas básicas de seguridad, entre ellas las que se indican a continuación.

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR ESTE APARATO. De no seguir todas las advertencias e instrucciones, se podrían producir descargas eléctricas, incendios o lesiones personales graves.

ADVERTENCIA – Para disminuir el riesgo de incendios, descargas eléctricas o lesiones:

1. Este aparato puede ser utilizado por niños a partir de 8 años y personas con discapacidades físicas, sensoriales o mentales, o con falta de experiencia y conocimientos, si están supervisados o han recibido instrucciones sobre el uso del aparato de modo seguro y comprenden los peligros que dicho uso acarrea. Los niños no deben jugar con el aparato. La limpieza y mantenimiento a cargo del usuario no deben ser realizados por niños sin supervisión.
2. El aparato no debe ser utilizado por personas (niños incluidos) con discapacidades físicas, sensoriales o mentales, o con falta de experiencia y conocimientos, a menos que lo hagan bajo supervisión o se les haya dado instrucciones.
3. SOLO para uso en INTERIORES. No use el aparato en el exterior, ni en entornos comerciales o industriales. No use el aparato sobre superficies húmedas o que tengan agua.
4. No permita que se utilice el aparato como un juguete. Es necesario vigilar atentamente el aparato cuando lo usen niños o se utilice cerca de niños, mascotas o plantas.
5. Use el aparato solo como se indica en este manual. Use solo accesorios recomendados por el fabricante.
6. No use el aparato si el cable o el enchufe están dañados. Si el aparato se ha caído o dañado, se ha dejado a la intemperie, ha caído al agua o no funciona como debiera, llévelo a un centro de servicio.
7. No manipule el cargador, incluido el enchufe del cargador, ni los terminales del cargador con las manos mojadas.
8. No obstruya las aberturas. Deje de utilizarlo si estas quedaran obstruidas. Limpie y retire los objetos obstruidos siguiendo las instrucciones del manual.
9. Mantenga el pelo, la ropa holgada, los dedos y todas las partes del cuerpo alejados de las aberturas y partes móviles.
10. Tenga mucho cuidado al limpiar escaleras.
11. No aspire líquidos inflamables o combustibles, tales como gasolina, ni lo use en lugares donde pudieran estar presentes.
12. No aspire nada que se esté quemando o humeando como, por ejemplo, cigarrillos, cerillas o cenizas.
13. No use el aparato sin el filtro.


14. Evite puestas en marcha accidentales. Verifique que el interruptor está en posición de apagado antes de conectar la batería, tomar el aparato o desplazarlo. Llevar el aparato con el dedo en el interruptor o activar el aparato con el interruptor en posición de encendido puede originar accidentes.
15. Desconecte la batería del aparato antes de realizar ajustes, cambiar accesorios o almacenarlo. Tales medidas preventivas disminuyen el riesgo de poner el aparato en funcionamiento por accidente.
16. Para cargar la batería, use únicamente la unidad de suministro extraíble incluida con este aparato. Un cargador apto para un tipo de batería podría presentar un riesgo de incendio si se usa con otra batería.
17. Use los aparatos solo con las baterías Tineco especialmente indicadas para ellos. El uso de cualquier otro tipo de batería puede presentar riesgos de incendio y lesiones personales.
18. Cuando no esté usando la batería, manténgala alejada de objetos metálicos, tales como clips, monedas, llaves, clavos, tornillos y otros objetos metálicos pequeños que pudieran conectar un terminal con el otro. Cortocircuitar los terminales de la batería puede causar quemaduras o un incendio.
19. Si se hace un uso inadecuado de la batería, el líquido de su interior podría salirse. Evite el contacto con ese líquido. Si hubiera un contacto accidental, lávese con agua abundante. Si el líquido entra en contacto con los ojos, solicite ayuda médica. El líquido que sale de la batería puede causar irritación o quemaduras.
20. No use la batería ni el aparato si estuvieran dañados o modificados. Las baterías dañadas o modificadas pueden presentar comportamientos impredecibles y causar un incendio, explosión o riesgo de lesiones personales.
21. No exponga la batería ni el aparato al fuego o al calor excesivo. Su exposición al fuego o a temperaturas superiores a 130 °C puede causar una explosión.
22. Siga todas las instrucciones de carga y no cargue la batería ni el aparato a temperaturas fuera del rango especificado en las instrucciones. Una carga incorrecta o a una temperatura fuera del rango especificado puede dañar la batería y aumentar el riesgo de que se produzca un incendio.
23. Las reparaciones deben ser realizadas por personal cualificado que utilice únicamente piezas de repuesto idénticas a las originales. Esto garantizará que la seguridad del producto se mantenga.
24. Este aparato contiene células de batería no reemplazables. No modifique ni trate de reparar el aparato ni la batería, a excepción de lo indicado en las instrucciones para su uso y cuidados.
25. Apague siempre el aparato antes de conectar o desconectar la boquilla motorizada.
26. No cargue ni guarde el aparato a la intemperie ni dentro de un vehículo. Cargue, guarde o use la batería únicamente en interiores secos donde la temperatura sea superior a 4 °C, pero inferior a 40 °C. El cargador solo es apto para usarse en interiores.
27. El aparato solo debe utilizarse con la unidad proporcionada. Se debe desconectar el enchufe de la toma antes de limpiar o realizar el mantenimiento del aparato.
28. Utilícelo solo con la unidad de alimentación <AA2237/AA2311>. Este aparato contiene baterías no reemplazables.
29. **ADVERTENCIA:** Para cargar la batería, use únicamente la unidad de suministro extraíble incluida con este aparato.

30. INSTRUCCIONES DE CONEXIÓN A TIERRA

1) El aparato debe tener conexión a tierra. En caso de mal funcionamiento o avería, la conexión a tierra proporciona una línea de menor resistencia para la corriente eléctrica a fin de reducir el riesgo de descarga eléctrica. Este aparato está equipado con un cable que incorpora un equipo conductor de tierra y un enchufe con conexión a tierra. Se debe insertar el enchufe en una toma adecuada con una instalación correcta y conexión a tierra conforme a los códigos y ordenanzas locales.

ADVERTENCIA – Una conexión inadecuada del equipo conductor de conexión a tierra puede resultar en un riesgo de descarga eléctrica. Consulte con un electricista o una persona de servicio cualificados si tiene dudas sobre si la toma tiene una conexión a tierra adecuada. No modifique el enchufe que viene con el aparato; si no encaja en la toma, solicite a un electricista cualificado que instale una toma adecuada.

2) Este aparato debe utilizarse en circuitos con una tensión nominal de 120 V y tiene un enchufe con conexión a tierra como el que aparece ilustrado a continuación. Compruebe que el aparato está conectado a una toma con la misma configuración que el enchufe. No debe utilizarse ningún adaptador con este aparato.

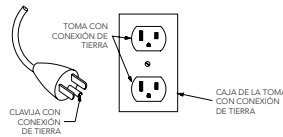

Declaración de conformidad de la FCC del proveedor

Tineco / SERIE PURE ONE STATION FURFREE

Este dispositivo cumple las disposiciones de la sección 15 de la normativa de la FCC. Su funcionamiento está sujeto a las dos condiciones siguientes:

(1) el dispositivo no puede causar interferencias perjudiciales; y (2) el dispositivo debe aceptar cualquier interferencia recibida, incluidas las que puedan dar lugar a un funcionamiento no deseado.

Tineco INTELLIGENT, INC.

1700 WESTLAKE AVENUE N., SUITE 200, SEATTLE, WA, 98109, EE. UU.

WWW.TINECO.COM

1-855-292-8864

Los cambios o modificaciones no aprobados expresamente por la parte responsable del cumplimiento pueden anular la autoridad del usuario para utilizar el equipo.

Nota: Este equipo se ha sometido a pruebas y se ha determinado que cumple los límites establecidos para los dispositivos digitales de clase B de acuerdo con las disposiciones de la sección 15 de la normativa de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias perjudiciales en una instalación residencial.

Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia, por lo que si no se instala y se usa como se indica en estas instrucciones, podría producir interferencias perjudiciales en las comunicaciones por radio. Sin embargo, no se puede garantizar que no se produzcan interferencias en una instalación en particular. Si este equipo causa interferencias perjudiciales en la recepción de señales de radio o televisión (que se pueden detectar apagando y encendiendo el dispositivo), recomendamos al usuario que intente corregir dichas interferencias siguiendo una o varias de las siguientes soluciones:

- (1) Cambie la orientación o la ubicación de la antena receptora.
- (2) Aumente la distancia entre el equipo y el receptor.
- (3) Conecte el equipo a una toma de corriente de un circuito diferente al que esté conectado el receptor.
- (4) Consulte al vendedor o a un técnico experto en radio y televisión para obtener ayuda.

Declaración de exposición a la radiación de la FCC

Este equipo cumple con los límites de exposición a la radiación establecidos por la FCC para un entorno no controlado. Este equipo debe instalarse y utilizarse a una distancia mínima de 5 cm entre el radiador y las partes del cuerpo.

Nota

El fabricante no se hace responsable de las interferencias de radio o televisión provocadas por modificaciones no autorizadas en este equipo. Dichas modificaciones podrían anular la autoridad del usuario para utilizar este equipo.

Nota de IC

Este aparato contiene transmisor(es)/receptor(es) sin licencia conformes a las normas RSS sin licencia de Innovation, Science and Economic Development Canada. Su funcionamiento está sujeto a las dos condiciones siguientes:

- (1) el aparato no puede causar interferencias; y
 - (2) el dispositivo debe aceptar cualquier interferencia, incluidas las que puedan dar lugar a un funcionamiento no deseado del aparato.
- Este aparato digital de clase B cumple con la normativa canadiense ICES-003.
 - Este equipo cumple con los límites de exposición a la radiación establecidos por la ISED RSS-102 para un entorno no controlado. Este equipo debe instalarse y utilizarse a una distancia mínima de 5 cm entre el radiador y las partes del cuerpo.


Especificaciones

Producto (aparato)	PURE ONE STATION FURFREE
Tensión	14,4 V \equiv
Potencia nominal	270 W
Capacidad del depósito de polvo	0,3 l
Tiempo de carga	4-5 h


ESTACIÓN DE LIMPIEZA

Entrada (modo de autolimpieza)	120 V 60 Hz 4,2 A
Entrada (carga)	120 V 60 Hz 0.5 A
Salida	18 V \equiv 1 A

Eliminación

- La batería contiene materiales dañinos para el medio ambiente y deben retirarse del aparato antes de desecharlo.
- Las baterías, los cargadores, los accesorios y el embalaje deben clasificarse para reciclarlos de un modo respetuoso con el medio ambiente. No los arroje al fuego, al agua ni los entierre. No deseche los cargadores junto con la basura doméstica. 
- Si la batería presenta fugas y el líquido entra en contacto con la piel o la ropa, enjuáguelos inmediatamente con agua para evitar irritaciones y consulte con un médico.


Descripción general

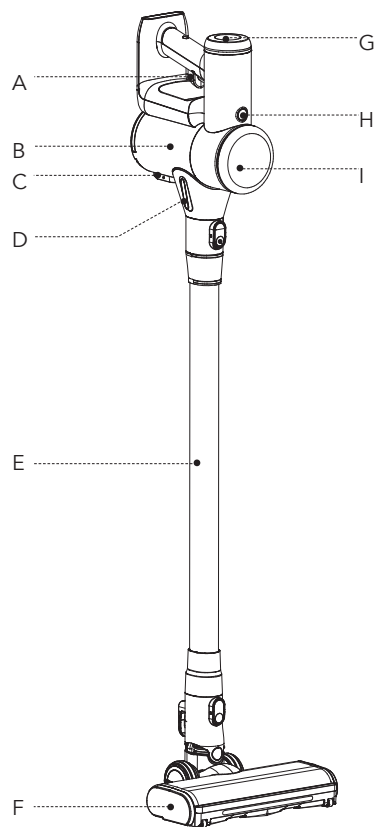

ES

- | | |
|---|---------------------------------|
| A. Botón de encendido | E. Tubo |
| B. Depósito de polvo | F. Cepillo eléctrico ZeroTangle |
| C. Botón de liberación de vaciado del polvo | G. Pantalla digital |
| D. Sensor del polvo | H. Modo Auto/Max |
| | I. Filtro HEPA |

Pantalla digital

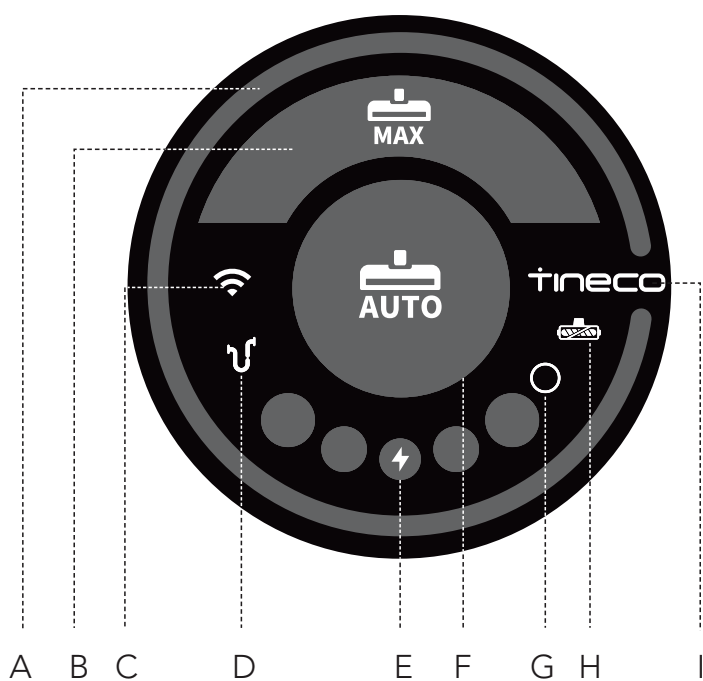

A. Bucle de la monitorización de polvo (azul o rojo según la cantidad de polvo)

B. Modo Max

C. Indicador de Wi-Fi

D. Canal de aire obstruido

E. Nivel de batería

F. Modo Auto

G. Sensor de polvo defectuoso

H. Cepillo de rodillo enredado


I. Logotipo de Tineco

Accesorios

Nota:


- Pruebe los accesorios en un área pequeña y poco visible antes de usarlos sobre superficies sensibles.
- Consulte el embalaje para identificar el contenido de su compra.
- Como se ilustra abajo, hay muchos componentes compatibles con este modelo. Si necesita más accesorios, visite www.tineco.com o store.tineco.com.

ES

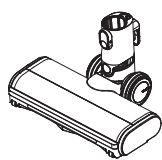

Cepillo eléctrico ZeroTangle

Con un rendimiento mejorado en suelos duros y alfombras. Su función antienredos lo convierte en una opción excelente para quienes tengan mascotas.

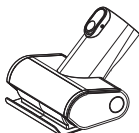

Minicepillo eléctrico

Para aspirar muebles tapizados, colchones, etc. Aspira pelo de mascotas y elimina las manchas persistentes.



Cepillo 2 en 1 para el polvo en rendijas

La herramienta fina para ranuras es ideal para lugares estrechos, esquinas y rendijas.



Herramienta de limpieza

Para mantenimiento de la estación de limpieza.



Accesorio para limpiar pelo

Use el extremo con la pala pequeña para eliminar pelo y residuos enganchados alrededor del rodillo. Utilice el extremo con el cepillo para limpiar la ventana del cepillo y el depósito de polvo, según sea necesario.

Montaje

Instalación de la aspiradora




Inserte el cepillo eléctrico, el tubo y la unidad principal.



Presione el botón de liberación para desconectar el cepillo eléctrico y el tubo.


Instalación de la estación de limpieza

Nota: Asegúrese de colocar la estación de limpieza sobre una superficie plana y dura.

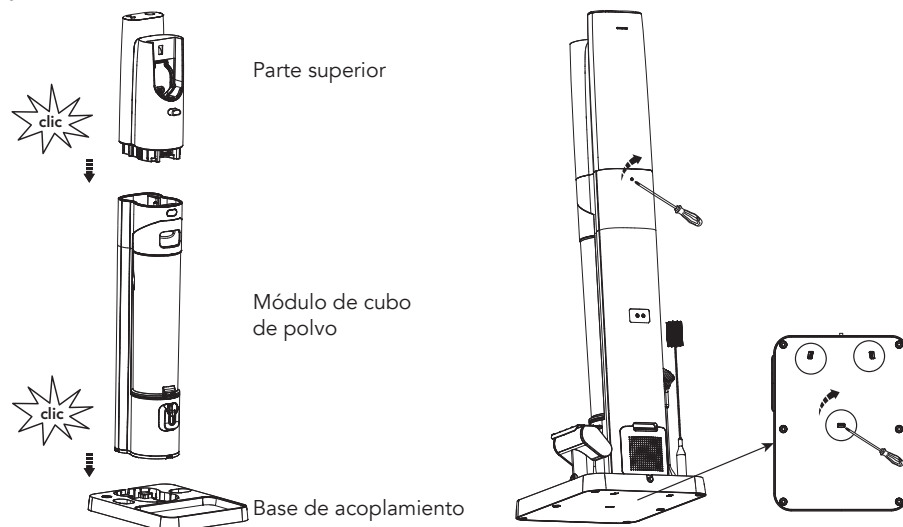


Inserte primero el módulo del cubo de polvo en la base de acoplamiento y, a continuación, inserte la parte superior en el módulo del cubo de polvo.

En caso de que sea necesario desmontar la estación de limpieza, presione el pestillo con la herramienta para extraer las tres piezas.

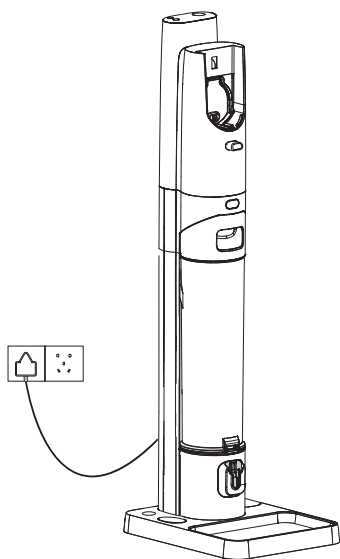

Conecte la estación de limpieza.

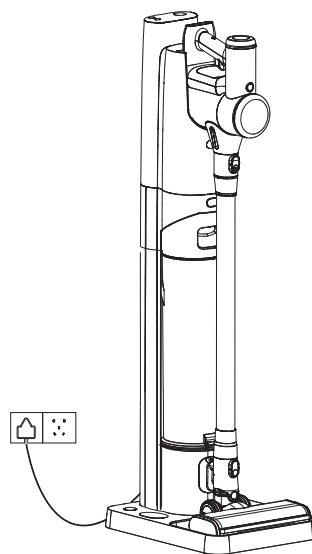


Coloque la aspiradora y los accesorios en la estación de limpieza para almacenarlo de forma cómoda después de usarlo.

Funcionamiento


Preparación para el uso


Nota:


- Antes del primer uso, cargue el aparato (consulte "Carga de la batería") durante 4-5 horas en un área donde la temperatura ambiente sea de entre 4 °C y 40 °C.
- Seleccione un accesorio y acóplelo al aparato antes de usarlo (consulte "Accesorios").

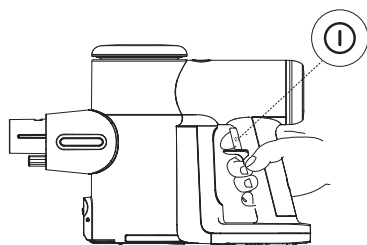

Presione el botón ① para activar la succión. Púlselo de nuevo para apagar el aparato.

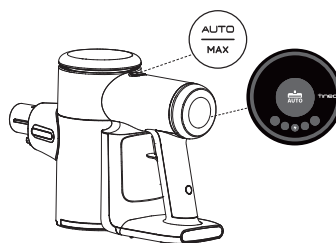

Este aparato se inicia en modo AUTO de forma predeterminada. Presione el botón  para cambiar entre el modo AUTO y MAX.

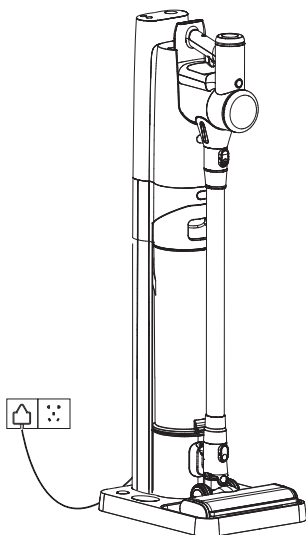


Coloque la aspiradora y los accesorios en la estación de limpieza para almacenarla de forma cómoda y recargarla después de usarla.

Selección del modo de limpieza


Modo AUTO

- En modo AUTO, el color del bucle de monitorización de polvo cambia según la cantidad de polvo detectada.
- El bucle de vigilancia en rojo indicará automáticamente una mayor cantidad de polvo detectado, mientras que el bucle en azul indica una menor cantidad detectada. Este modo ofrece la mejor solución de limpieza.

Para activar el modo AUTO:

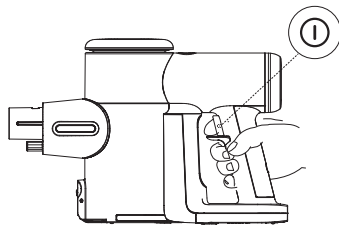



Presione el botón de encendido para activar la succión. El ajuste predeterminado de inicio es el modo AUTO.

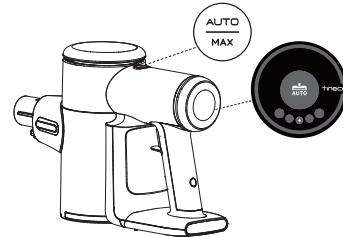

En modo MAX, pulse el botón  para cambiar al modo AUTO.

Modo MAX

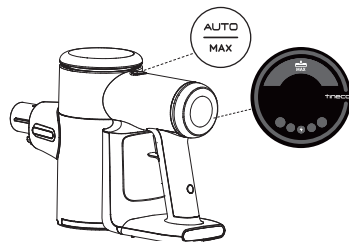


En modo AUTO, pulse el botón  para cambiar al modo MAX.

Nota:

Mantenga los objetos afilados alejados de la pantalla digital para evitar arañazos y rasguños.

Aplicación

- Todas las funciones se pueden realizar con la aplicación Tineco. Descargue la aplicación Tineco de la App Store, Google Play o el sitio web oficial de Tineco.

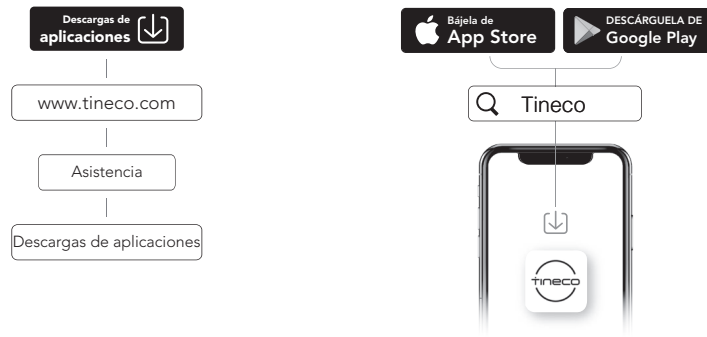

Activar/Desactivar Wi-Fi

- Activar Wi-Fi: Durante el funcionamiento, mantenga pulsado el botón  durante 3 segundos para acceder al Centro de ayuda y vaya a Conectar a la red.



- Desactivar Wi-Fi: Mantenga pulsado el botón  durante 20 segundos para desactivarlo.

