

裁切线 压痕线 半切割线		版	V01	记	增加一个下载二维码, 电池步骤	执 行 人	陈俊芬	时 间	2021-06-29
		本	V02	录	增加FCC警告语				陈俊芬

正面
145 mm

760 mm

RV Door Lock User Manual

LOCK HOLE OPENING MUST MEASURE:

2.75" Wide x 3.75" Tall x 1.50" Thick

INSTALLING THE BATTERIES

- Remove the 2 screws of the battery cover on the back of the product. Open the battery cover. Put in 4 AA alkaline batteries (see Figure 1). Turn the switch to "ON" at the back of the Kohree Handle. A beep will confirm that the handle has power.
- Note:** When replacing the batteries, install High quality and fully charged alkaline batteries. When you hear fast beeps before the lock actuates, it means the batteries are low. It's better to take the batteries out when you are not in travel season to save battery life.

USB Charger

You can also use the provided USB cable to charge your lock(see fig 2). The lock is working when the LED indicator turns green.

INSTALLING THE NEW HANDLE

- Remove your new lock from the package, and put it on a table.
- Slide the Front Handle of your new RV Lock into the opening on the front of the door, while carefully pulling the wires ahead of the lock and through the opening. Then, hold the front handle in place and attach the new strike plate (the edge plate) included in the package with the 2 shorter screws on the door side.(see fig3)
- Remove the 2 screws holding the battery cover and install the 4 AA alkaline batteries.
- While holding the RV Lock's Back Handle, connect the battery wires to the Front Handle that is already in the door(see fig 4).A confirmation beep signifies that the connection is made.
- Carefully align and attach the back handle while gently tucking excess wires into the void area. Hold the paddle of the Back Handle closed while inserting the paddle tooth into the Front Handle housing.
- NOTE: Make sure not to pinch or cut wires during installation.**
- Use a #2 Phillips screwdriver to install the 4 longer screws. For the moment, only tighten the screws tight enough to keep the lock securely against the door. (see fig 5)
- Adjust and straighten the Front Handle in the opening. Once straight, hold it in place while fully tighten the 4 longer

背面
145 mm

PROGRAMING THE KEYPAD

- Write down your desired "new" code. The access code should be 4 characters
- Press the "8" key for two seconds and then while still keeping the "8" key pressed, also press the "LOCK" key, then release both.
- NOTE: DO NOT** press both "8" and "LOCK" keys in the same time from the start.
- Type in default code"1234" and then press the "LOCK" button.
- Now type in the new code, then press the "LOCK" button.
- Confirm the new code again and press "LOCK". A confirmation beep confirms your new programming.
- Double check if your new code is working. Type in your new code and press lock button, and the keypad should confirm the accepted code by actuating the deadbolt.

Reset the keypad

- When you have below situations, you can reset the keypad:
 - Forget your desired code.
 - The keypad does not function correctly
- Just press the "code reset" button (see fig 6) on the Back Handle until you hear a long beep (5 seconds). It will reset your keypad code to "1234". And then you can start again at step 1 to 6 to programming your new code.
- Kindly noted that the keypad will time-out after 7 seconds of being idle. If you make a mistake simply press " code reset" and start over at step 1.

DOWNLOAD KOHREE APP

Download the Kohree RV lock App from the App Store (iOS devices running version 10.0 and later versions) or Google play (Android devices running version 5.0 and later versions).If you can't find the app in Google Play Store, please scan another QR code to download.

SET UP YOUR APP

- Pair your phone with the Smart Lock via BT. Your phone will search for the Smart Lock's BT and then connect.
- To set an access code. Follow the on-screen instructions to complete the process. The access code should be 4 characters.

NOTE: If you already set your keypad new code, then just use the same code to set your app. Remember that always keep the same code for the keypad and the app.

Once reset the keypad, all the settings for the app will be erased and need to be reset. Type in default code"1234" to reset.

BASIC OPERATIONS

- To Unlock the Door**
You can unlock the door using keypad code, Kohree app, or the key.

Option 1: Use the access code

- Press any key to wake up the keypad. The keypad will light on.
- Enter your access code. If the access code is correct, press the unlock button. The door will unlock.
- A double short beep will be heard.

If you fail to unlock the door for 5 consecutive times using the access code, you can also use your app or the mechanical key to unlock the door.

Option 2: Use the app

- Open Kohree app. The app will search for Smart Lock Bluetooth and connect.
- Follow the on-screen instructions on the app to unlock the door. Pts remember to enter your keypad code for the first time of using it.

Option 3: Use the key

If you fail to unlock the door after 5 consecutive times using the access code, use the provided key to unlock the door.

- Lock the Door**

Option 1: Use keypad lock button

- Press any key to wake up the keypad. The keypad will light on.
- Press and hold the Lock button 2 seconds to lock the door.

Option 2: Use the access code

- Press any key or tap the touchscreen to wake up the keypad. The keypad will light on.

2. Enter your access code. If the access code is correct, press the lock button. The door will be locked.

Option 3: Use the app

- Open the app. The app will search for Smart Lock Bluetooth and connect.
- Follow the onscreen instructions on lock the door.

Option 4: Use the key

OTHER SETTINGS

- ON/ OFF Switch :Turn on/off the keypad.
- CODE RESET: Reset the keypad.
- VOLUME: Adjust sound volume.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause unintended operation.

The equipment complies with FCC radiation exposure limits suitable for an uncontrolled environment. This equipment should be installed and Operated with minimum distance 20cm between the radiator & your body.

制作要求:

- 尺寸: 760 X 145mm
- 材质: 128克铜版纸 风琴折

说明: 图示为制造尺寸 未标注尺寸居中 环保要求: ROHS	类型: 为注公差: +/-1mm 比例: 1:1	名称: 品牌: 公司:	Hy1234房车锁 DONNER
--------------------------------------	--------------------------------	-------------------	-------------------------

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.