 


*D*ONNER

DDP-300

Digital Piano Owner's Manual

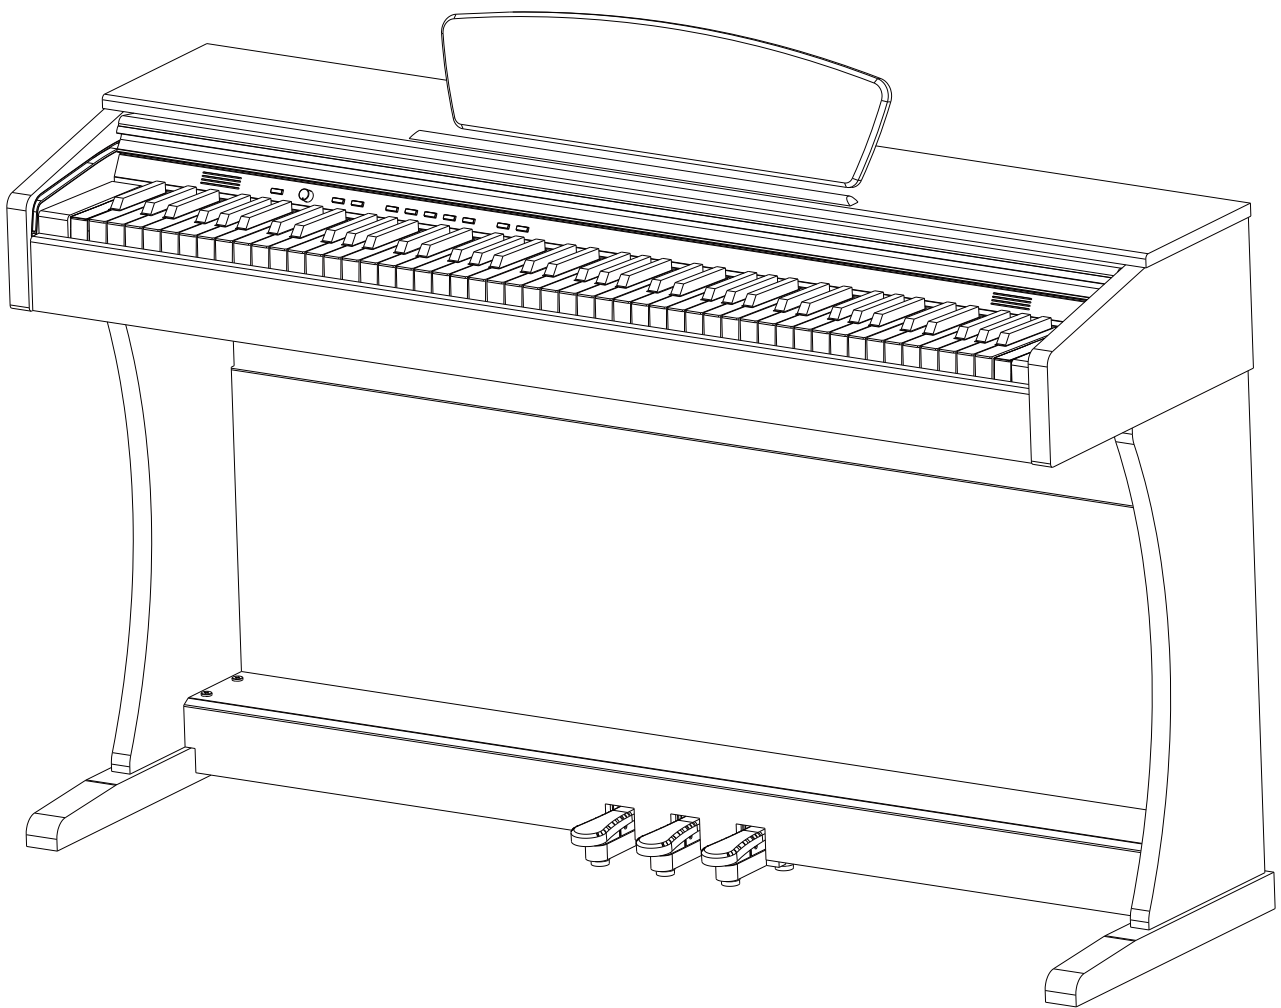

CONTENTS


Piano Assembly	01~03
Electrical Piano Overall Assembly	01~02
Key Cover Open-and-Close	03
Elevating Music Stand	03
Panel Instruction	04
Control Panel	04
Back Panel	04
Base Plate	04
External Connection	05
Power Cord Connecting	05
Pedal Connecting	05
Headphone Connecting	05
Audio Device Connecting	05
Computer Connecting	05
Function Introduction	06~11
Operation Guide	06
Turn On the Power	07
Master Volume Setting	07
Auto Power Off	07
Key Sound Setting	07
Double Keyboard Setting	07
Select & Play the Timbre	08
Timbre Demo	08
Split Timbre	08
Piano Demo	09
Reverb Effect/Reverb Depth	09
Tone Setting	09
Transposition Setting	10
Metronome Switch/Metronome Type/Metronome Speed	10
Touch Curve	10
MIDI Record Setting	11
Bluetooth MIDI	11
Product Specifications	12~13
Product Parameters	12
Product List	13
Appendix-Timbre Sheet	13
Appendix-Piano Demo	13
Piano Maintenance	14
Security Consideration	15~18
Troubleshooting	19
After-Sale Service	20~22

Piano Assembly


Electrical Piano Overall Assembly

Before you are ready to assemble the piano, please check if all parts are included in the package box.


NO.	PARTS
1	Piano Body
2	Left stand board
3	Right stand board
4	Back plate
5	Pedal box
6	Screws M6 x 24(12PCS)
7	Thumb screw M6 x24(4PCS)

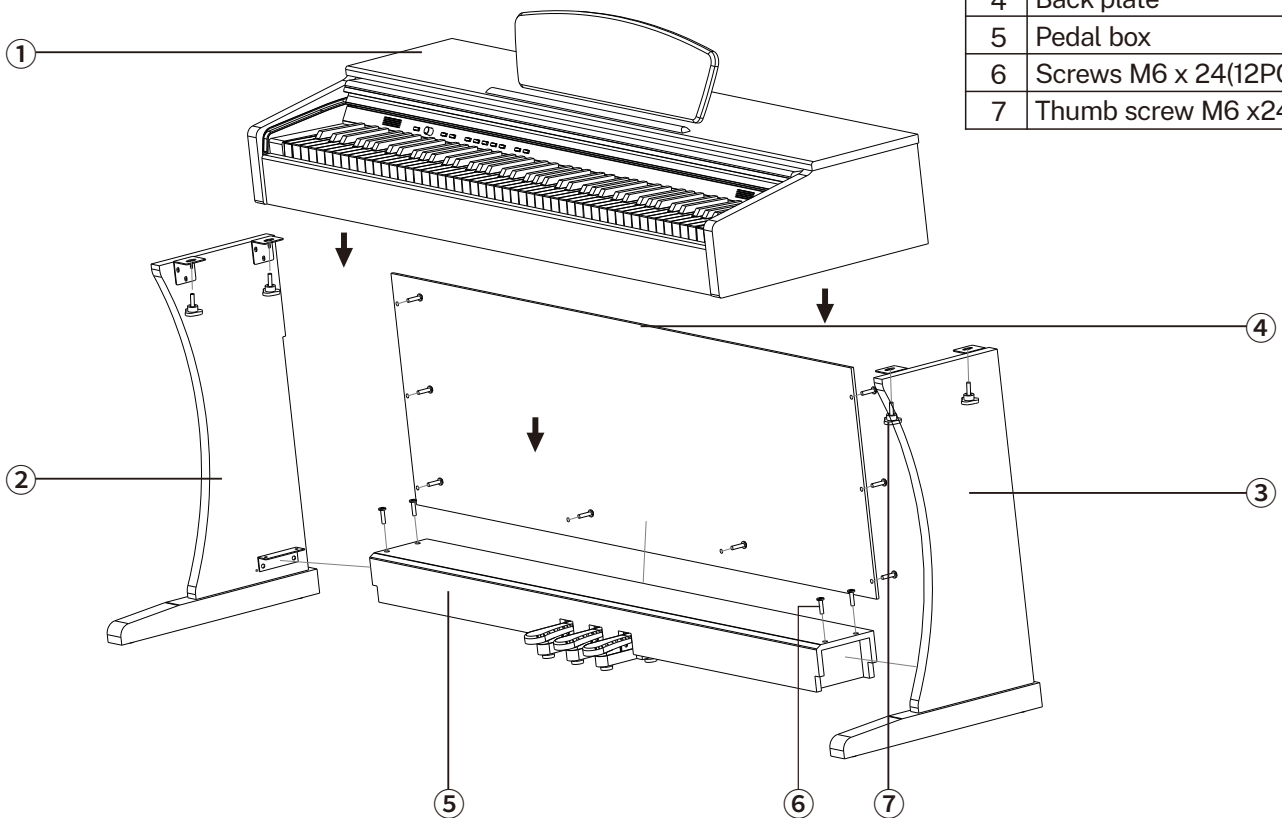 

 
A. Use screws to fix the pedal box onto the left and right stand boards.
(Make sure the direction is correct before installation.)

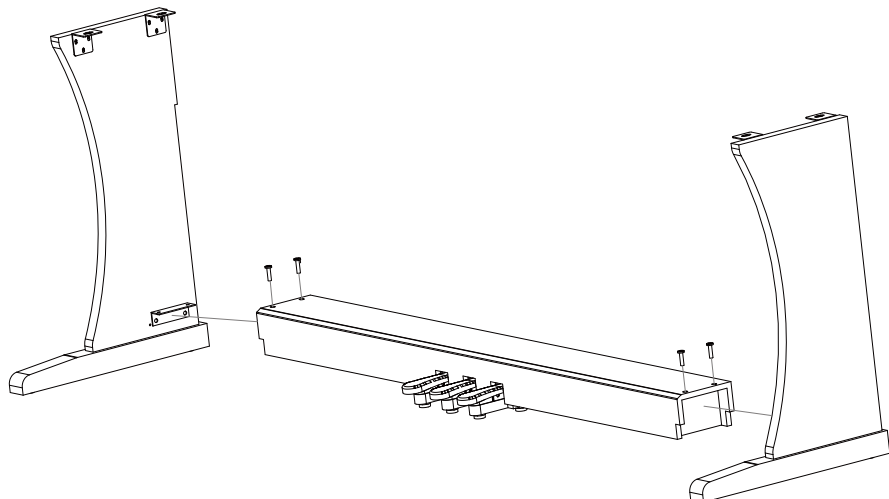


 
B. Use screws to fix back plate onto the body leg which is finished in Step A.

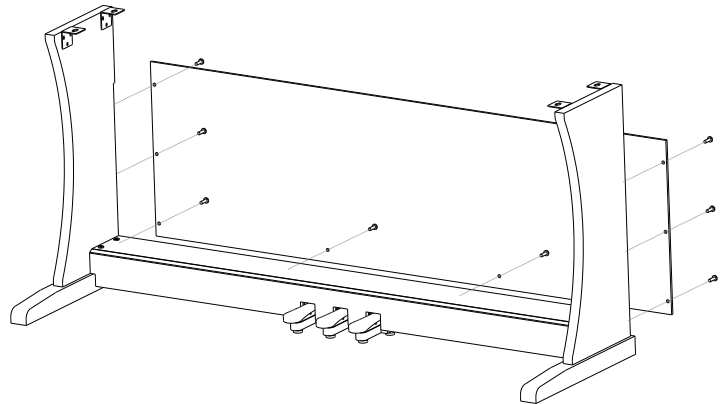

 C. Place the body on the installation step (B), and use the screws to lock the body from the bottom of the body to the holes.

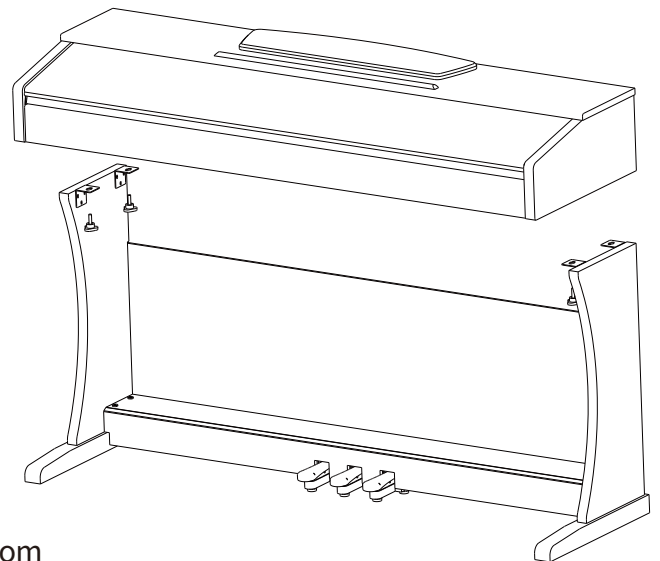

  D. After basic assembly, insert pedal cord into the bottom socket of the body and power cord to the back corresponding holes and power it on, then you can switch on the piano.

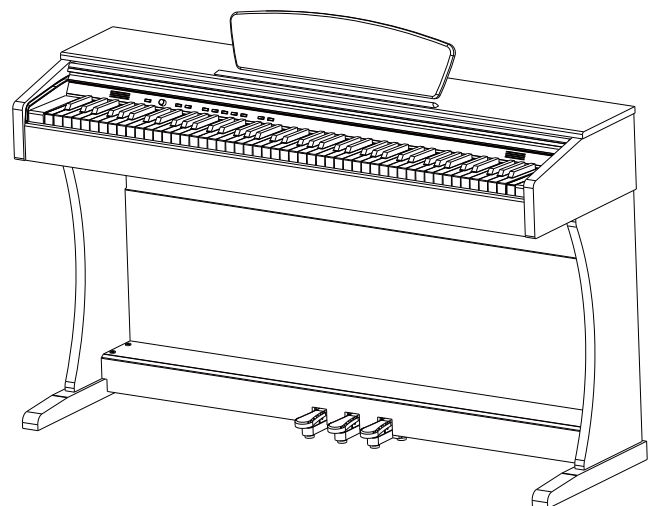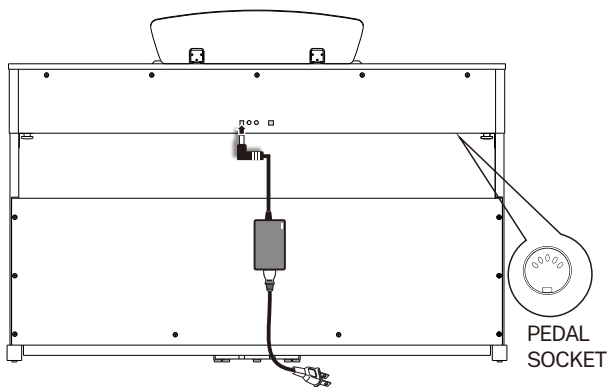


Key Cover

1. Open the Key Cover:

Lift the key cover lightly, and push forward to make it slide to the end.

2. Close the Key Cover:

 Pull the cover back in your direction, and put it down lightly above the keys.

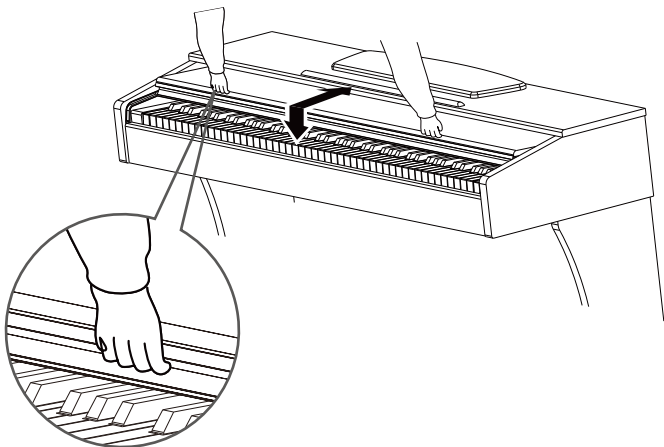


! CAUTION:

- When opening or closing the key cover, be careful to move the gap between the part and the panel to avoid your fingers getting caught.
- Please do not put metal plate or paper on the key cover because small items may slip into the piano when the cover is opening. It may be difficult to get it out and lead to electric shock, short circuit, fire or terrible damage to the instrument.
- If you need to remove the piano, please be sure the key cover is closed.
- Please do not stress the music stand when using.

Music Stand


Erect the Music Stand:

 1. Pull out the stand completely towards the front of the piano.
2. Turn down two metal supports on each side of the rear of the stand.
3. Lean the music stand against the metal supports.

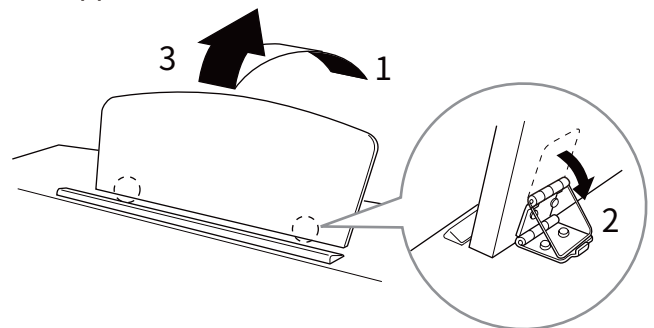

Put Down the Music Stand:

 1. Pull out the stand completely towards the front of the piano.
2. Flick the metal supports (on the back of the music stand).
3. Put the stand down lightly.

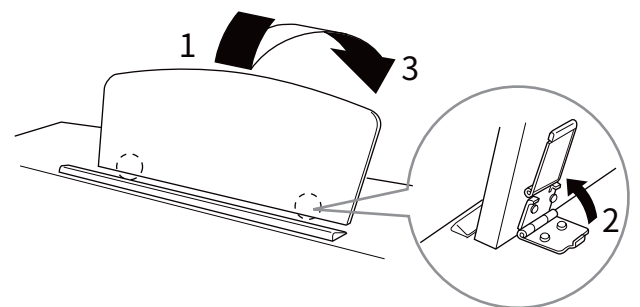


! CAUTION:

Do not erect the stand vertically without certain incline degree. When put down the stand, please do not let go of your hands before the stand is set flat.

Panel Instruction

 Control Panel

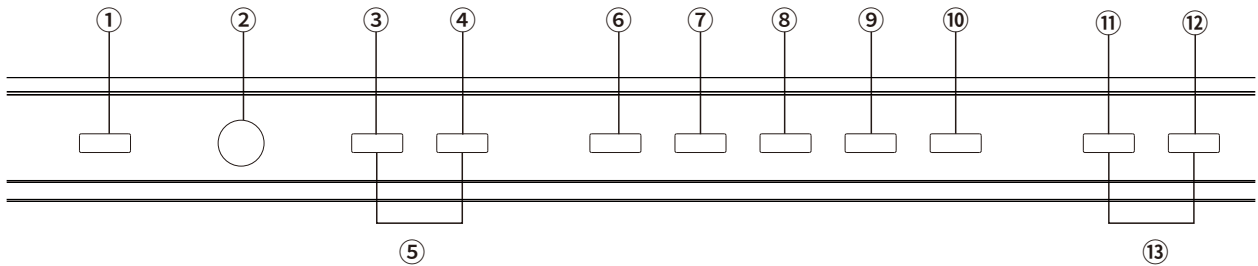

1.POWER

2.VOLUME

3.FUNCTION

4.METRONOME

5.SPLIT

6.PIANO

7.E.PIANO

8.ROCK ORGAN

9.STRINGS

 
10.BASS

11.DEMO PLAY / STOP

12.DEMO NEXT SONG

13.REC

Back Panel

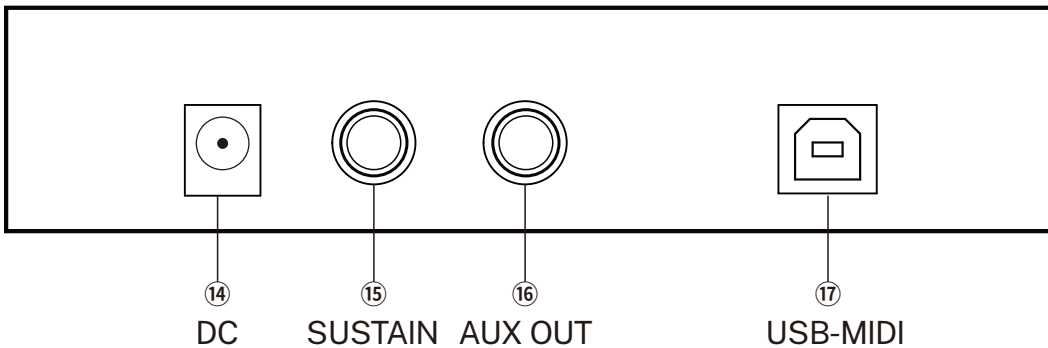

14

DC

15

SUSTAIN

 
16

AUX OUT

17

USB-MIDI

Base Plate

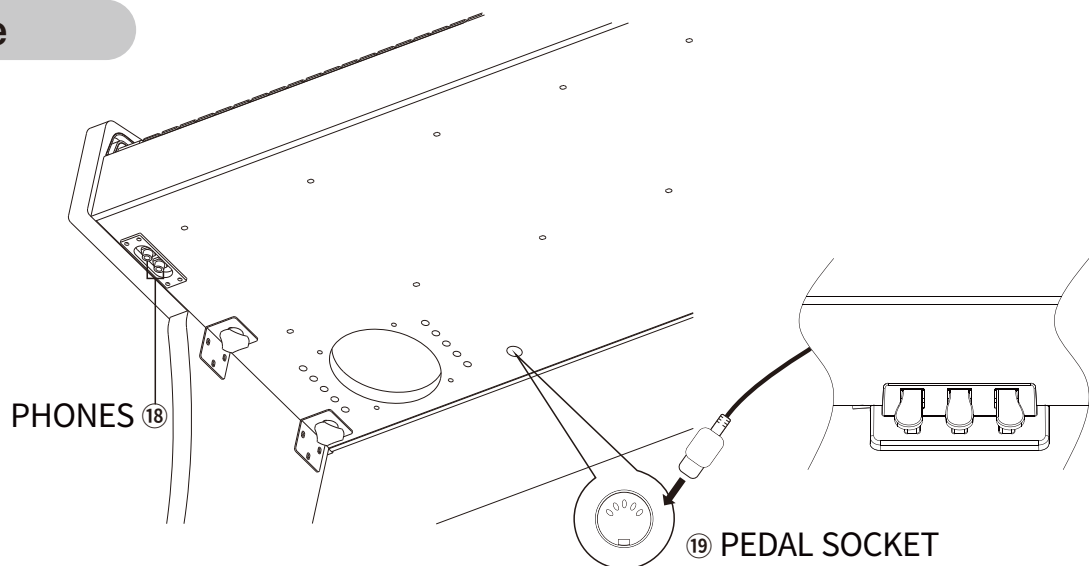


PHONES 18

19 PEDAL SOCKET

External Connection

Power Cord Connecting

 1. Connect the power cord when using. Insert one end of the cord into the power socket behind the piano, and plug the other end of power adapter into the 100V-220V domestic power socket.
2. Please unplug the power cord and save it in an appropriate way when it is not used for a long time.

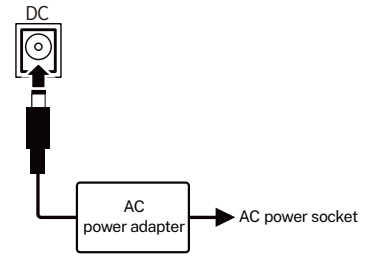


Pedal Connecting

Single Sustain Pedal:

Use specified pedal plug & insert the sustain pedal socket to turn on or off sustain effect.

Three Pedals:

 - Soft Pedal: Depressing this pedal softens the sound so that it can reduce its volume.
- Sostenuto Pedal: Depressing this pedal sustains the sound that have been played.
- Sustain Pedal: Depressing this pedal sustains the sound after one's hands have been lifted from the keyboard.

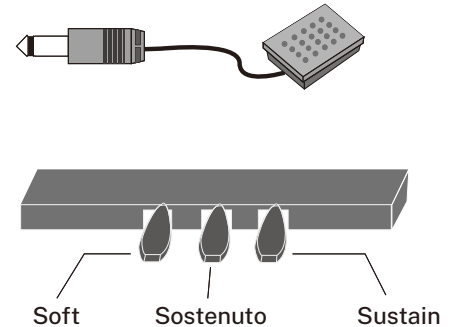


Headphones Connecting

When you need to practice alone or play at the midnight, you can insert the stereo headphones into the headphones output socket on the bottom of the piano.

Note:

 Please avoid to wear headphones for a longtime in high volume, preventing hearing damage.

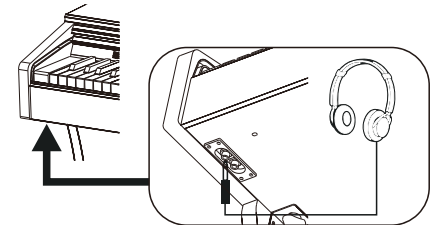


Audio Devices Connecting

The input / output socket on the back panel can be used in connecting to stereo audio system, mixer, recorder or other audio devices.

Note:

 Please be sure the power supply of all the equipment have been turned off before connecting or disconnecting other devices. Meanwhile, turn down the volume of all devices to a minimum before turn on the power of devices.

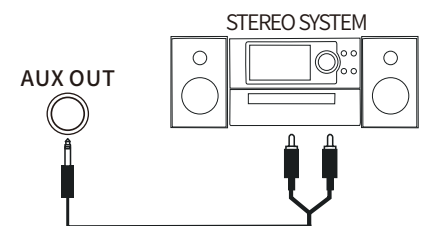


Computer Connecting

The USB socket of this piano is MIDI Jack that can be connected directly to the computer.

Insert one end of the connecting line of USB to this piano, and insert the other end to the USB socket of the computer to achieve two-way transmission of signals so that you can play the MIDI of the computer on this piano.

Note:

 - When setting the software of the computer, do not set the USB audio device to Input & Output at the same time, or else the sound would overlap when you play.
- When using connecting line of USB, do not use USB hub.

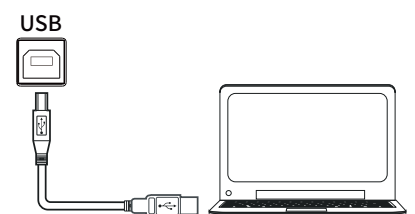

Function Introduction

Operation Guide

At the same time as the [FUNCTION] button above, click the corresponding key to set the function of this piano.



A ₂	#A ₂	Auto Power Off	Key Sound Setting	
B ₂	#B ₂	Double Keyboard		
C ₁	#C ₁	Brite Piano	Harpsichord	Timbre
D ₁	#D ₁	Church Organ	Guitar	
E ₁	#E ₁	Pad		
F ₁	#F ₁	Change the previous demo	Change the next demo	Timbre Demo
G ₁	#G ₁	Play/Stop the timbre demo	DEMO 1	
A ₁	#A ₁	DEMO 2	DEMO 3	DEMO
B ₁	#B ₁	DEMO 4		
C ₂	#C ₂	DEMO 5	OFF/ON	
D ₂	#D ₂	HALL 1	HALL 2	Reverb Effect
E ₂	#E ₂	STAGE 1		
F ₂	#F ₂	STAGE 2	-1	Reverb Depth
G ₂	#G ₂	Recovery Standard	+1	
A ₂	#A ₂	-0.2Hz	Recovery Standard	Tone
B ₂	#B ₂	+0.2Hz		
C ₃	#C ₃	Transposition -	Recovery Standard	Transposition
D ₃	#D ₃	Transposition +	-1	
E ₃	#E ₃	Recovery Standard	-1	Metronome Type
F ₃	#F ₃	+1		
G ₃	#G ₃	Recovery Standard	+1	Metronome Speed
A ₃	#A ₃	Fixed	Medium	
B ₃	#B ₃	Soft		Touch Curve
C ₄	#C ₄	Hard		
D ₄	#D ₄			
E ₄	#E ₄			
F ₄	#F ₄			
G ₄	#G ₄			
A ₄	#A ₄			
B ₄	#B ₄			
C ₅	#C ₅			

Function Introduction

Turn On the Power

1. First, check if the power switch of the piano is turning off . If not, please turn off the power.
2. Connect the power, insert the plug into the power socket behind the piano first, and then plug the opposite end of power adapter into the power socket.
3. Before turning on the power, turn down the volume controller to the minimum first. Press the switch button and when the power button lights up, it indicates this piano is started.
4. Before turning off the power of digital piano, turn down the volume controller to the minimum first, and press the button to turn it off.

 
Note:

Be sure the supply voltage is 12V, too high or too low will damage the piano.

Do not unplug the power cord from the power socket under the state of electrification.

NOTE

When not using the piano or thunder Please unplug the power plug.

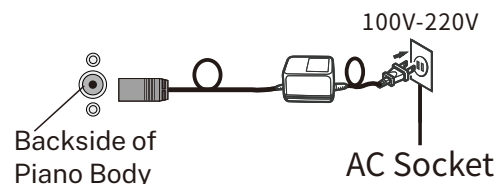

Master Volume Setting

 
Adjust the volume knob on the control panel to turn up & down the volume.

1. Turn the knob right to increase the overall volume.
2. Turn the knob left to decrease the overall volume.




Auto Power Off

- In standby mode, this piano will shut down automatically with no operation for 30 minutes. This capability can be enabled or disabled as needed.
- Press the [FUNCTION] and [A₂], switch on/off the Auto Power Off function.

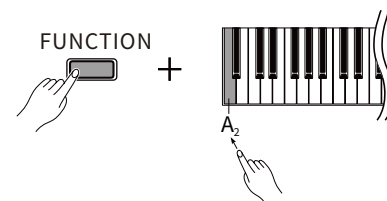



Key Sound Setting

 - The default of the key sound is on.
- Press the [FUNCTION] and [#A₂] simultaneously to turn on or off the key sound.

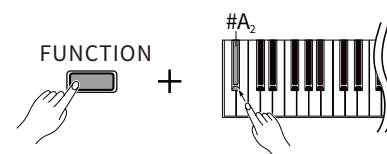

Double Keyboard Setting

  
- When double keyboard is turned on, the system automatically takes e¹ key as separation point & separates the keyboard into two same sections in pitch & tone.
- By this state, you can achieve one-to-one teaching & practicing.
- Press the [FUNCTION] and [B₂] simultaneously to turn on or off the piano duet mode.

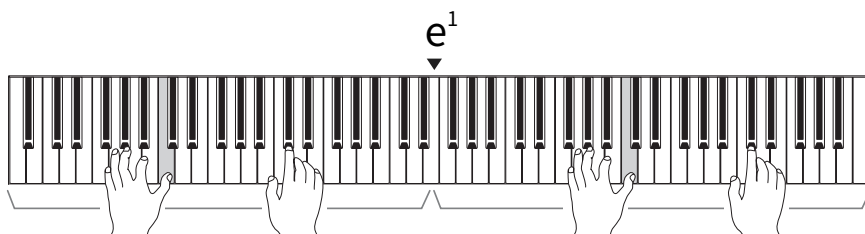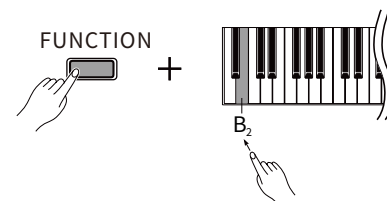

Selecting & Playing Timbre

- This piano has 10 pre-set authentic tones. (See Appendix for details-Timbre Sheet)
- In standby mode, press [FUNCTION] and [C₁-E₁] simultaneously to select the timbre.
- Press the direct selection buttons [PIANO], [E.PIANO], [ROCK ORGAN], [STRINGS], [BASS] on control panel.
- Press the desired timbre button, play & enjoy the pleasant music.

 Key to Choose Timbre

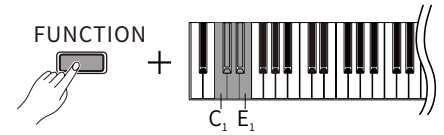


NO.	Timbre	Key to Choose Timbre	NO.	Timbre	Key
1	Grand Piano	PIANO	6	Brite Piano	C ₁
2	Electric Piano	E.PIANO	7	Harpsichord	#C ₁
3	Rock Organ	ROCK ORGAN	8	Church Organ	D ₁
4	Strings	STRINGS	9	Guitar	#D ₁
5	Bass	BASS	10	Pad	E ₁

Timbre Demo



- When the timbre is enabled, conduct related operation on Timbre Demo.
- Press the [FUNCTION] and [F₁] simultaneously to play the previous timbre demo.
- Press the [FUNCTION] and [#F₁] simultaneously to play the next timbre demo.
- Press the [FUNCTION] and [G₁] simultaneously to play/stop the timbre demo.

Key	Description
F ₁	Change the previous demo
#F ₁	Change the next demo
G ₁	Play/Stop the Timbre demo

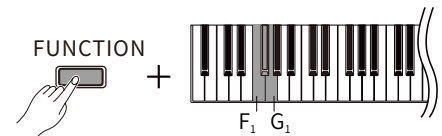 

Split Timbre

  
- When this function is turned on, the keyboard can be separated into two individual playing segments that have different tones.
- In standby mode, press the [FUNCTION] and [METRONOME] simultaneously to turn on or off the split timbre.
- Press the desired timbre with direct selection buttons.
- Taking #f as split point, you can hear different effects of timbre on the left & right section.
- When it is turned on, press the [FUNCTION] and [METRONOME] simultaneously to turn off the split timbre.
- The main timbre is turned on by default and cannot be turned off. Split timbre can be turned on and off at will.

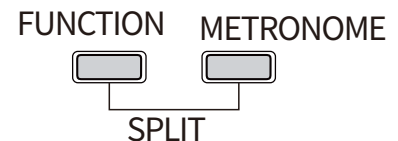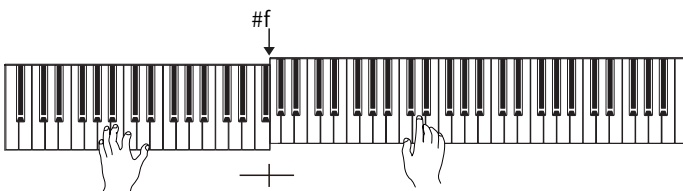

- Split Point: The position that separates the Keyboard to left & right hand segment called split point. The default split point is #f (34).
- When split timbre is turned on, press the [METRONOME] and any key simultaneously to change the split point.
- When it is enabled, the left keyboard is 8 key higher than usual.

Piano Demo


- The piano is built-in 5 beautiful piano demos. (See Appendix for details-Piano Demo.)
- Press DEMO [▶||] button firstly. Play/Pause the piano demo. At this time, it will loop all the demos.
- Press [▶] to cyclically switch demos.
- Press [FUNCTION] while press [#G₁-C] key to enter/exit the state of playing the corresponding demos. At this time, it will loop the current demo.

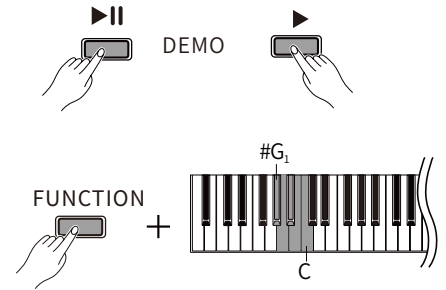 

Reverb Effect


- The piano has 4 reverb Effect. Through adjusting reverb effects, it can achieve the effect of playing in different occasions.
- The default setting of reverb Effect is Hall 1.
- Press [FUNCTION] and [#C], to turn OFF/ON Reverb Effect.
- Press [FUNCTION] and [D-F], to choose Reverb Effect.

Key	Reverb Effect
#C	OFF/ON
D	HALL 1
#D	HALL 2
E	STAGE 1
F	STAGE 2

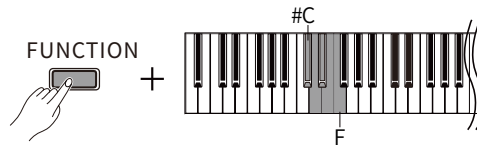 


Reverb Depth

 - Adjust reverb depth, range: 0~127.
- Press [FUNCTION] and [#F], reverb depth value -1.
- Press [FUNCTION] and [#G], reverb depth value +1.
- Press [FUNCTION] and [G], return to reverb depth default value (depend on reverb types).

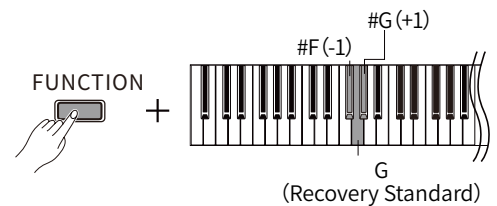


Tone Setting

 - Slightly adjust the standard tone of the whole keyboard to match other music equipment.
- Adjustable range: 415.3Hz~466.2Hz. Default value: 440Hz.
- Press [FUNCTION] and [A], tone -, decrease the overall pitch in 0.2Hz.
- Press [FUNCTION] and [B], tone +, increase the overall pitch in 0.2Hz.
- Press [FUNCTION] and [#A], return to tone default value.

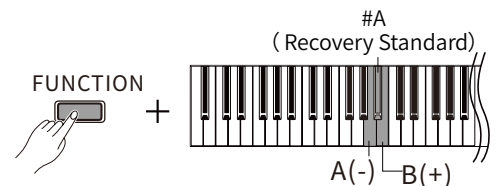

Transposition Setting

 - The function of transposition is to adjust the overall pitch upward or downward in semitone.
- Maximum range: ± 12 semitones . Transposition default value: 00.
- Press [FUNCTION] and [c], transposition -, decrease the overall pitch in semitone.
- Press [FUNCTION] and [d], transposition +, increase the overall pitch in semitone.
- Press [FUNCTION] and [#c], return to transposition default value.

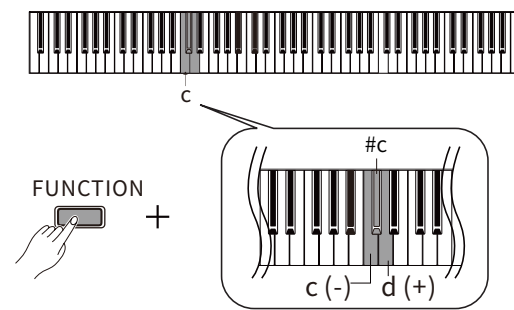

Metronome Switch

- If you are not sure about the beat, use this metronome and get tips about specific beat.
- Press the [METRONOME] key to turn on the metronome, and the beat sounds;
- Press the [METRONOME] key again to turn off the metronome, and the beat will stop.
- **Notes:**

 
During MIDI recording, you can turn on the metronome, but it will not be recorded as recording data.

METRONOME




Metronome Type

- Press [METRONOME] and switch on metronome switch.
- Adjustment range: 1~9, the default value: 4.
- Press [FUNCTION] and [#d], the metronome type -1.
- Press [FUNCTION] and [f], the metronome type +1.
- Press [FUNCTION] and [e], return to the default value.

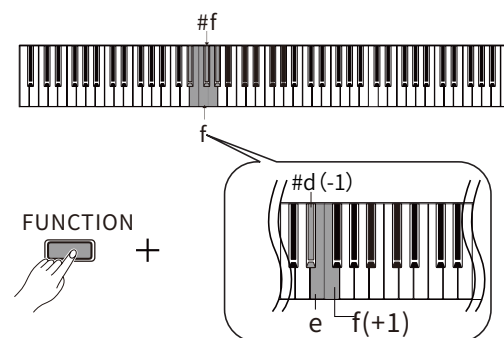


Metronome Speed

 - Adjust the beat speed according to needs.
- Adjustment range: 30~280, the default value: 120.
- Press [FUNCTION] and [#f], the metronome speed -1.
- Press [FUNCTION] and [#g], the metronome speed +1.
- Press [FUNCTION] and [g], return to the default value.

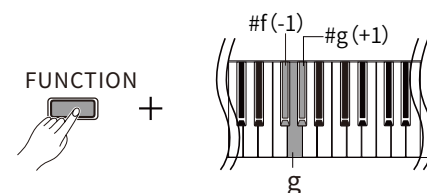

Touch Curve

 
- The selection of the degree curve type can change the performance of the keyboard. The default is: Medium.
- Press [FUNCTION] and a~c¹ to adjust the touch curve.

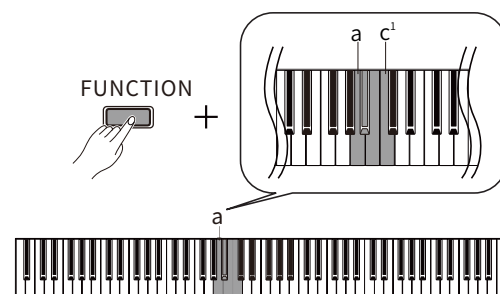

KEY	Touch Curve Type	KEY	Touch Curve Type
a	Fixed	b	Soft
#a	Medium	c ¹	Hard

MIDI Record Setting

 - The recorder function allows performances to be recorded and stored in the piano's internal memory.
- Only one song can be stored in this piano.

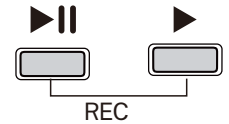

Before Recording

- Before recording, specifications e.g. tone and transposition need to be set.
- Press **【 ▶|| 】** + **【 ▶ 】** and begin to record. At this time, these two indicator lights are on.

Record Start

- Play and start to record.

Record Stop

- During recording, press **【 ▶|| 】** + **【 ▶ 】** to stop the recording which can be stored automatically. These two indicator lights are off.
- During recording, if the memory is full, the recording will stop and be stored automatically. Two indicator lights are off.

Record Playback

- When the recording is stopped, press **【 ▶ 】** to play the recorded song.

Bluetooth MIDI

- The default state of Bluetooth MIDI function is on.
- You can select the Bluetooth name of this piano in the MIDI setting interface of the external device or software compatible with this piano to complete the connection.
- The Bluetooth name of this piano: **BTMIDI**.

Instructions to use Bluetooth MIDI:

- Instructions for use of blue MIDI: Any app that can connect to Bluetooth MIDI and use the MIDI standard protocol for playback can be used.
- It is both compatible with IOS and Android devices.

NO.	NAME	IOS	Android	Description
1	Garageband	Yes	No	Connect Bluetooth
2	Piano Diary	Yes	No	Connect Bluetooth
3	Cubasis LE 2	Yes	No	Connect Bluetooth
4	Flowkey	Yes	Yes	No need to connect Bluetooth
5	Simply Piano	Yes	No	No need to connect Bluetooth
6	Piano Maestro	Yes	No	No need to connect Bluetooth
7	Dust Buster 2	Yes	No	No need to connect Bluetooth
8	Music School	Yes	No	No need to connect Bluetooth

Product Specifications

Product Parameters

Product Name		DDP-300		
Size/Weight	Product Size		136x42x81.5 cm	
	Product Size		39 KG	
	Package Size		143x53.5x35 cm	
	Package Weight		43.8 KG	
Performance Control	Keyboard	Keys	88 key full-weighted keyboard	
		Touch Response	Hard/Medium/Soft/Fixed	
	Pedal	Quantity	3	
		Function	Sustain/Sostenuto/Soft	
Body	Key Cover Type		Sliding Cover Type	
	Music Stand		YES	
Function	Polyphony	Polyphonies (Max)	128	
	Sound Resource		Donner D1-DSP DAC-3817B	
	Pre-setting	Timbre		10
		Timbre Demo Song		10
		Piano Demo Song		5
	Metronome	Type		9
		Beat Speed		30 ~ 280
	Double Keyboard		Support	
	Transposition		-12 ~ 0 ~ +12	
	Tone		415.3Hz ~ 466.2Hz	
	Split Timbre		Support	
	Effects		Reverb(4 types, switchable & adjustable)	
	Automatic Shutdown		30 minutes	
Record Function		Non-tracking function		
Wireless	Bluetooth		Built-in Bluetooth MIDI	
Connecting Sockets	Power Socket		DC 12V 3A	
	Headphone Socket		2 x headphone sockets	
	AUX OUT Socket		YES	
	USB-MIDI Socket		YES	
	Pedal Socket		Single sustain pedal sockets	
Sound System	Amplifier		20W x 2	
	Low-pitch Speaker		20W x 2	
	High-pitch Speaker		10W x 2	

Product List

Name	Quantity
Power Adapter	1 PC
Piano Body	1 PC
Pedal Box	1 PC
Left Stand Board	1 PC
Right Stand Board	1 PC
Big Back Plate	1 PC
Screw M6x20	12 PCS
Thumb screw M6x20	4 PCS
Manual	1 PC

Appendix

Appendix-Timbre Sheet

NO.	Timbre	NO.	Timbre
1	Grand Piano	6	Church Organ
2	Brite Piano	7	Strings
3	Electric Piano	8	Guitar
4	Harpsichord	9	Bass
5	Rock Organ	10	Pad

Appendix-Piano Demo

NO.	Name
1	Chopin op.25 no.1
2	Hungarian Dance No.5
3	Rondo Espressivo
4	Minute Op64 No1
5	BWV 848

Piano Maintenance

Conscientiously do a good job in the maintenance and protection of this product. It plays an important role in prolonging the service life and reducing faults.

1.Avoid heat, dampness, or direct sunlight.

The product should not be exposed excessively to the direct sunlight, placed near the air conditioner or extremely hot places.

2.No use near Tv or radio.

This product may cause video or audio interference to the reception of TV and radio. If this happens, it should be removed from the radio or TV products.

3.Don't use paint, diluent or similar chemicals to clean it.

Wet a soft towel with weak solution and detergent and wring it out until it dries. Clean the product with this towel.

 
4.No shaking and collision.

The product should be moved carefully. Violent shake and collision are prohibited to avoid damaging the shell or internal electronic components.

Security Consideration

Power Adapter

This product can be supplied by standard indoor wall socket. Please use only the power cord specified by this product. When you do not use, please be sure to turn off the power supply. If you do not use it for a long time, please pull out the power cord and keep it properly.

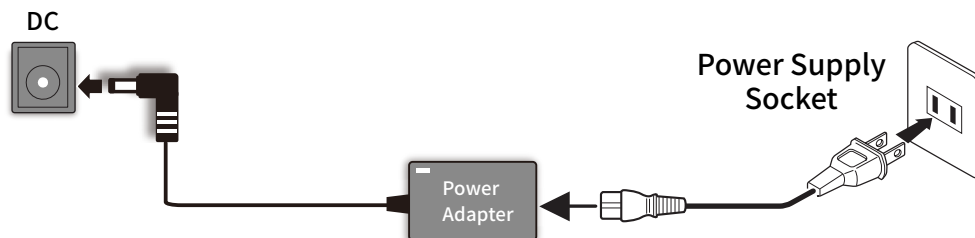

Sign

In order to ensure that you use this product safely and correctly, prevent damage to the user and other people and the financial issue. The specification and the product are marked with a series of safety signs. All kinds of signs and their meaning are as follows:

Warning

This sign indicates that, if you ignore the flag and error operation of this product, there is a fire hazard or serious injury to personnel.

Attention

This sign indicates that, if you ignore the flag and the wrong operation of this product, there is a potential risk of injury or other financial damage caused by personnel.

Logo example



This triangle mark indicates that the user should pay attention to the matters. (Left case shows “Be careful electric shock.”)



The circular sign painting a slash said prohibited matters. The logo shows the specific content of the ban. (Left case shows “No Disassemble”.)



Black dots indicate matters must be complied with. Icon in this sign indicates the specific content that must be followed. (Left case shows “The power plug must be pulled out of the socket.”)

Warning

Smoke, odor, overheating

When the product is smoking, emitting odors or overheating, continue use may lead to the danger of fire and electric shock. In the event of such a situation, the following operations shall be carried out immediately.

- Turn off the power supply.
- Pull the plug from the power outlet.
- Contact your agency.

Power line

Improper use of power supply leads to danger of fire and electric shock must observe the following precautions.

- Special power lines specified for this product must be used.
- An AC power source with output voltage within the household rated voltage must be used.
- It is not allowed to overload the power socket and the power extension line.

Improper handling of power lines may result in damage or rupture, which may cause the danger of fire and electric shock. The following precautions must be observed:

- Do not place heavy objects on the power line or make them heated.
- Do not attempt to transform the power cord or bend it too much.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, replace the power cord of the same type.

Do not use wet hands to touch the power cord and plug, otherwise there is a risk of electric shock.



- Please use the power lines in the place where the water will not be spilled. Water has the risk of fire and electric shock.
- Never put a vase or any other container with water on this product. Water has the risk of fire and electric shock.
- Do not let the minors contact plug and power line or a connecting plate. The minors have less knowledge of electricity safety which may cause danger of electric shock.



Warning

Improper use of power lines has the risk of fire and electric shock hazard. The following precautions must be observed.

- Do not place the power cord near the furnace or other heat sources.
- Unplug the power cord from the power outlet. The plug body must be grasped.
- Plug the power cord into the power socket.
- Before connecting or cutting off the power cord, make sure that the power is off.
- The power cord should be removed from the electrical outlet of the wall before a thunderstorm occurs or traveling or before other long leave.
- At least once a year, unplug the power cord from the wall outlet and clean the dust around the plug.



Don't burn this product

Do not put this product into the fire otherwise it will cause the burning of wood products and the explosion of the internal electronic components. There is a danger of fire and personnel injury.



Water and foreign matter

Water and other liquids and (metal) into this product has the risk of causing fire and electric shock. The following operation should be performed immediately when the above situation occurs.

1. Turn off the power supply.
2. If the power cord is used for power supply, it will be pulled off from the wall of the power outlet.
3. Contact your dealer.



Dismantling and rebuilding

Do not disassemble this product or transform it in any way. Otherwise it will be hazardous to electrical shock, burns or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your dealer.



Drop or impact

This product is subject to the risk of fire and electric shock after falling or being subjected to a strong impact. The operation should be performed immediately following the above mentioned situation.

1. Turn off the power supply.
2. If the power cord is used for power supply, it should be pulled off.
3. contact your dealer.



Plastic bag

Do not let any person put the plastic bag on the head or put in the mouth. Otherwise there is the risk of suffocation families with children should pay special attention to that.



Keep the distance with the product and support.

Climb the body or its support is in danger of tipping or damage. The children's families should pay special attention to.



Display

You should avoid placing this product on an uneven surface or any other unstable place. Otherwise, it will cause it falling and a risk of injury to the person.



Product movement

Before moving this product, you must first pull off the wall of the power outlet, the power cord plug and pull off all other cables and connecting wires. Otherwise there will be damage to the line, resulting in fire and electric shock hazard.



Clean

Before you clean this product, you must first remove the power cord from the wall outlet, otherwise there is a risk of fire and electric shock.



Interface

The interface of this product can only be connected to the specified equipment and devices. The connection of non designated equipment or devices have the risk of fire and electric shock.



Location selection

This product shouldn't be put in the following places. Otherwise there will be a risk of fire or electric shock.

- High temperature or dusty places.
- Kitchen or other places with oil fumes.
- A place where direct sunlight is irradiated. Do not expose to excessive heat or moisture environment .



Volume

Do not play music at high volume for long periods of time. Special attention should be paid when using the headphones. Too high volume may damage your hearing.



Heavy objects

Do not place heavy objects on this product otherwise the top will be overloaded causing the product or the object falling and the risk of injuring persons.



Correct assembly of the support

The incorrect assembly of support will make it overturned, causing the product dropping and the risk of injuring personnel.

Therefore, it is necessary to carry out the instructions in accordance with the instructions to ensure that the product is properly installed.



Replace the fuse

If the fuse breaks, there may be short circuit or voltage instability in the product. Professionals are required to identify and replace them, otherwise there is a risk of fire or electric shock.



Troubleshooting

Issue	Reason	Solution
There was no sound on the keyboard.	1.Volume Controller Set at Minimum Position. 2.Headphones or Plug Converters insert headphone jack. 3.The power supply is not connected or the piano is off.	1.Turn the volume to the right maximum volume. 2.Remove the original connector form the headphone jack. 3.Turn on the power supply and press the boot button.
The pedals don't work.	1.Connecting line jack of pedal is not plugged into piano. 2.Pedal plug loose.	1.Plug the pedal cord into the piano jack. 2.Check to confirm whether the plug at one end of the pedal connection is loose or not, and then tighten it.
When the piano power is turned on or off there is a murmur.	Normal phenomenon	This is a normal phenomenon, indicating that the current enters the machine at this time.
The piano is noisy when using a mobile phone.	Radio interference	The use of mobile phones in the vicinity of the piano produces radiation. To avoid this situation, you can turn off the mobile phone or use it away from the piano.
Abnormal tone or rhythm.	Power shortage	Power shortage. Check power stability.
It seems that all tones are pronounced or that the pronunciation seems to be cut off.	Normal phenomenon	The maximum number of simultaneous sounds on this instrument is 128 notes. If the dual tone mode is in use and the accompaniment or music is playing, some notes or sounds in the accompaniment or music will be default.
Under the same timbre, the quality of a note is different from that of a note.	Normal phenomenon	This is a normal phenomenon. This machine adopts AWM sound source mode. This kind of sound source is sampled and recorded in the whole keyboard area, so the quality of the two notes is slightly different.
Connecting Computer, Not recognized	USB plug loose	No need to install extra drives. If the piano isn't recognized by computer, please check if the USB cords are connected securely or try to connect other USB socket of the computer.

Warranty:

Dear User:

This qualified product passed quality verification under strict quality management.

Thank you very much for using our digital piano. In order to satisfy you with our services, please read carefully after purchase and fill out this 3-guarantee card and properly keep.

- ◆ During warranty period, we are responsible for giving free maintain if the product breaks down under normal usage circumstance. The warranty period of our product is referred to the period of state regulation.
- ◆ This card is considered as the proof of warranty.
- ◆ The work of guaranteed repair will be responsible and arranged by the seller. Please show this card and related proof when contacting.

Free maintain won't be given under the following circumstance:

1. The period of 3-guarantee has expired.
2. The breakdown caused by the manipulation that hasn't follow the requests of the user manual.
3. The damage caused by the dismantle movement of a non-our-company authorized maintainer .
4. No certificate & effective invoice three bags, but can prove that the digital piano in the three bags of goods, except for the life of.
5. Three Guarantees unauthorized alteration.
6. The damage caused by the Force Majeure.

Repair Card

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Federal Communications Commission Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Donner



Donner Technology Co., Ltd.
www.donnerdeal.com
www.idonner.com