



FIGURE5

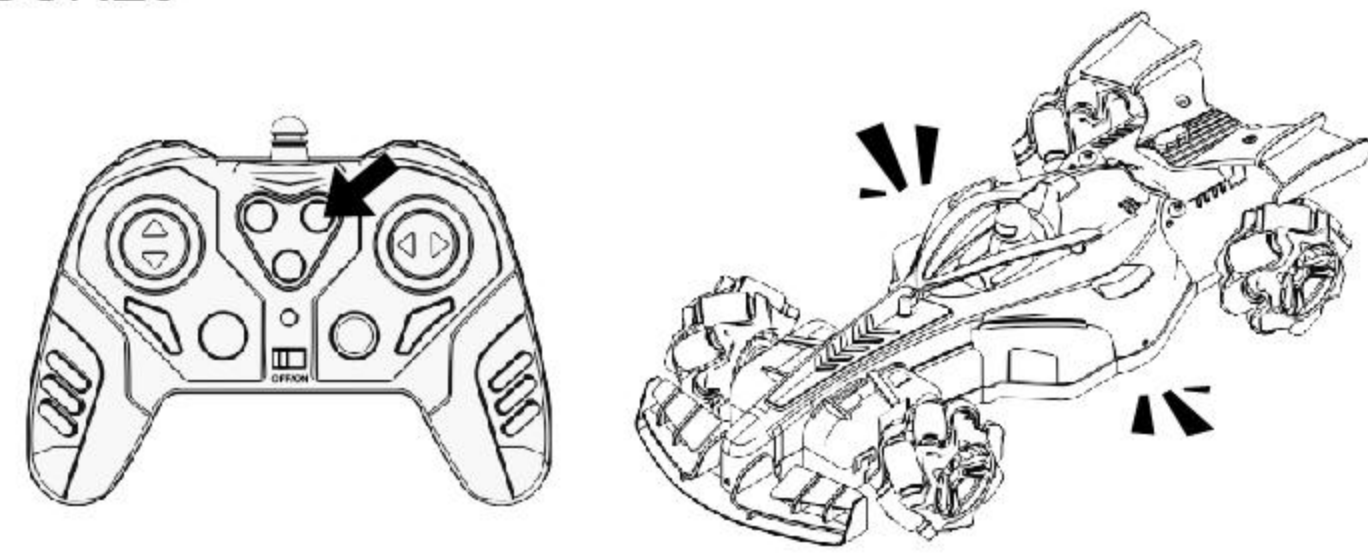


Press the sound button, the car will roar, press again, turn off the sound

FIGURE6

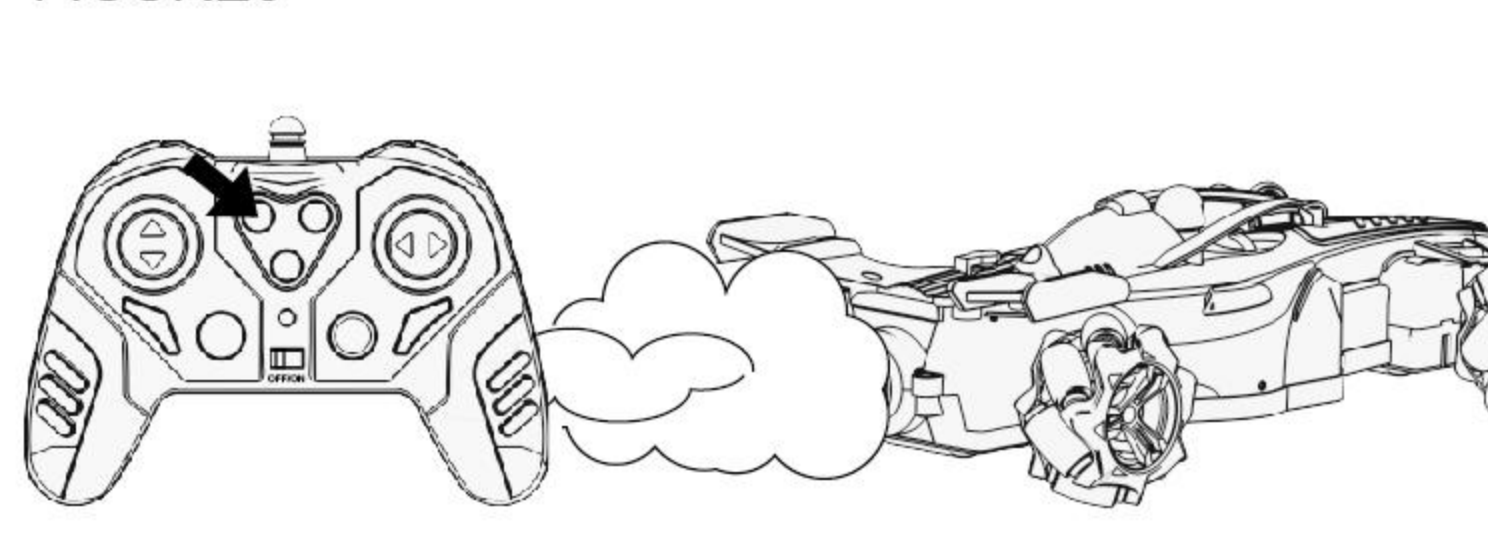

Press the spray button, the car emits smoke, press again, turn off the spray

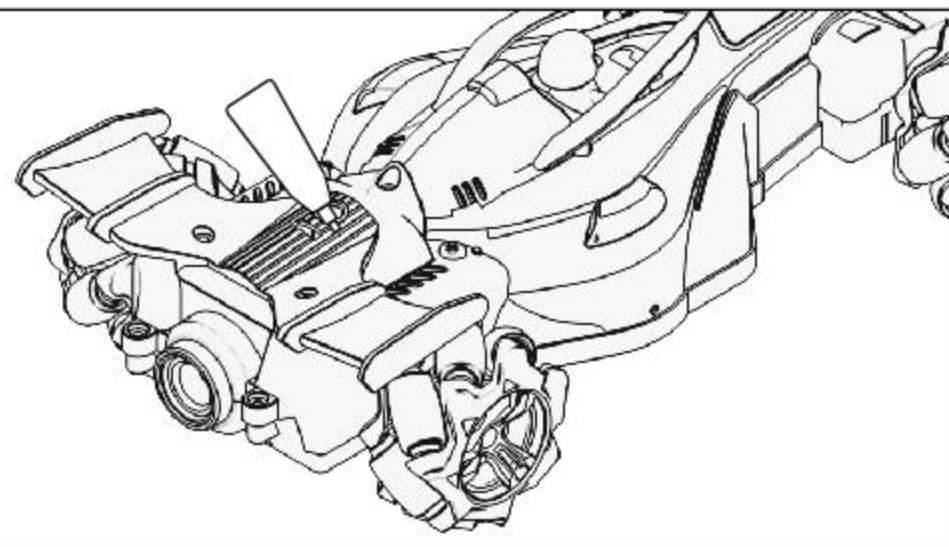


Spray watering

Watch function description

Function switch key


1. Press the spray switch once
2. Long press 2s function switch (left and right translation/left and right rotation)

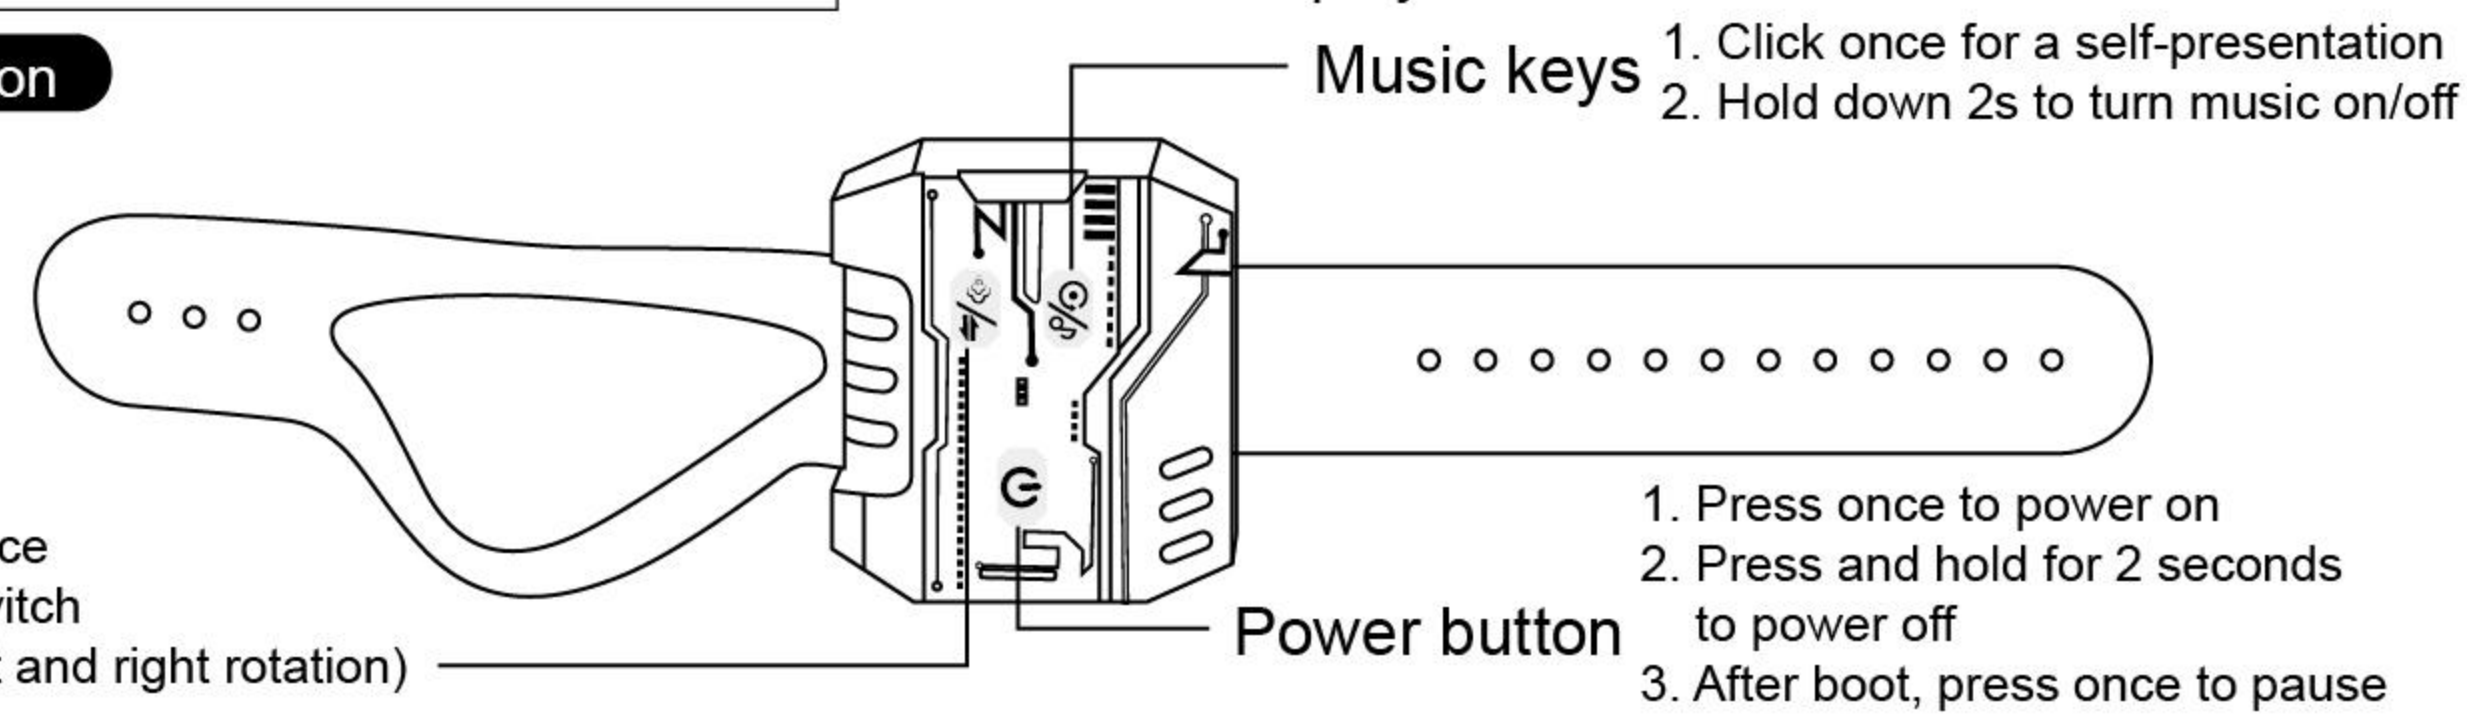

- Music keys
1. Click once for a self-presentation
  2. Hold down 2s to turn music on/off


- Power button
1. Press once to power on
  2. Press and hold for 2 seconds to power off
  3. After boot, press once to pause

FIGURE1

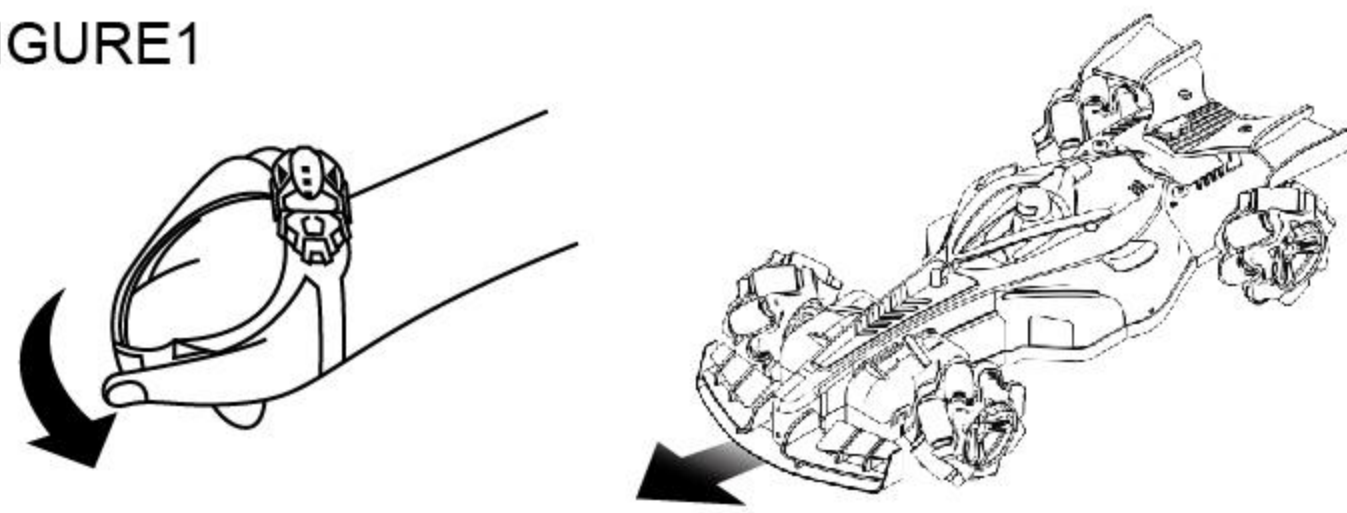


The hand moves down, the car moves forward

FIGURE2

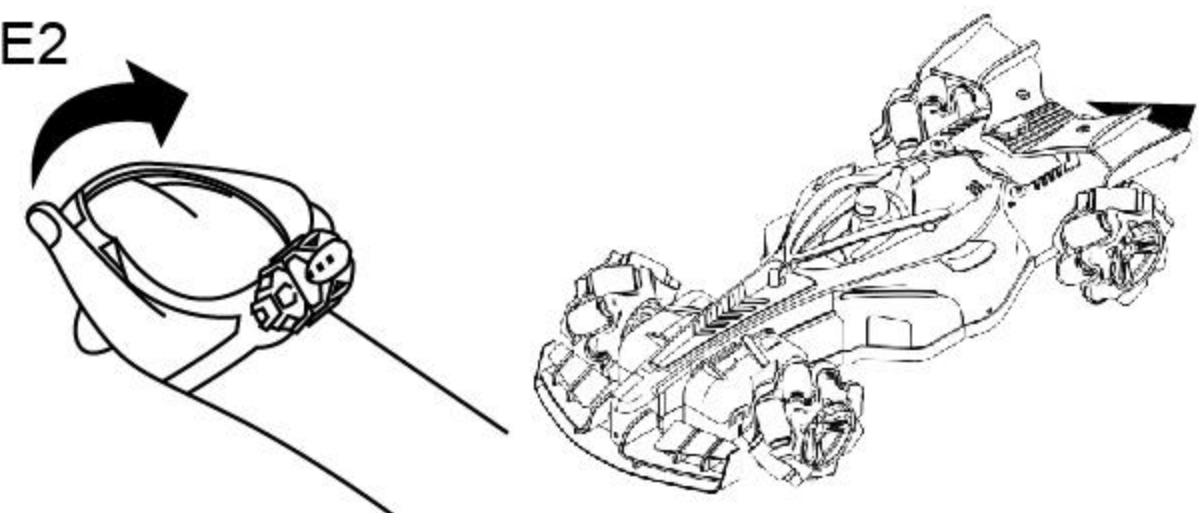


The hand moves up, the car moves backwards.

FIGURE3

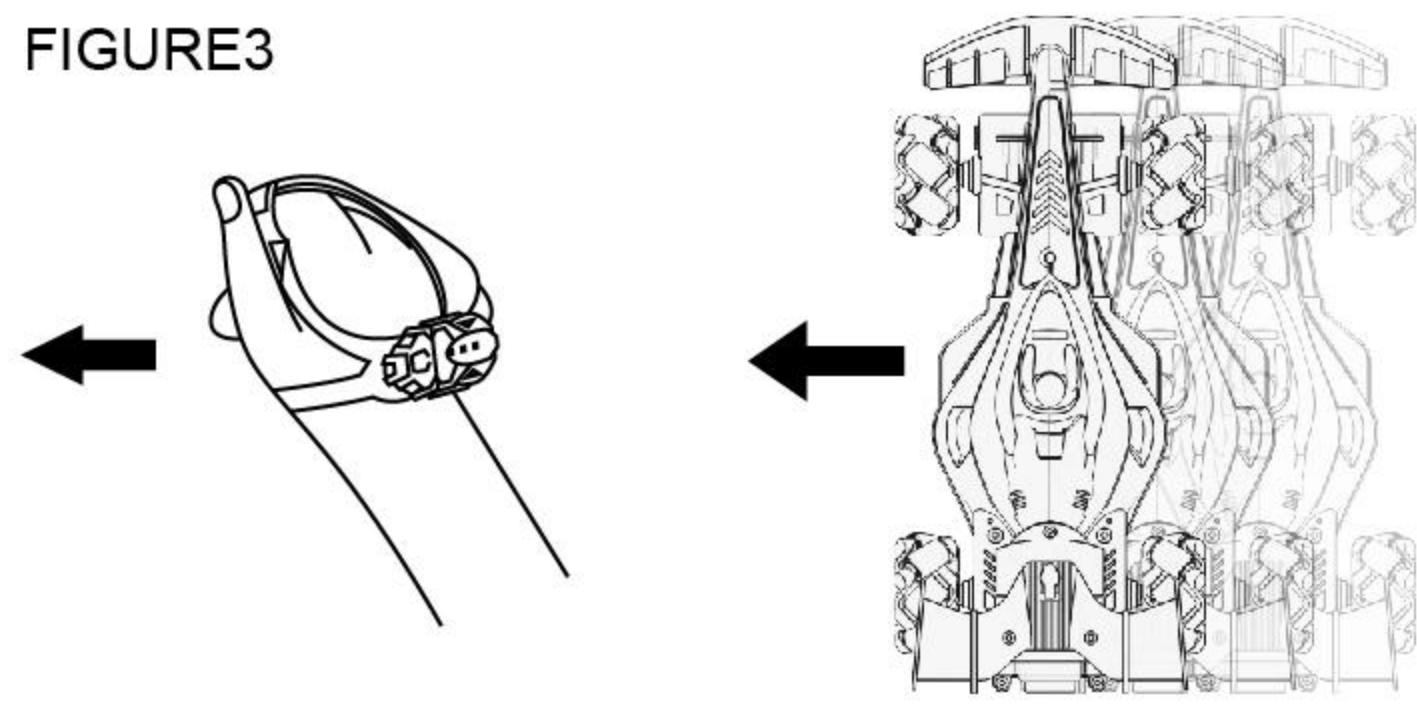

Sign to the left. Car to the left

FIGURE4

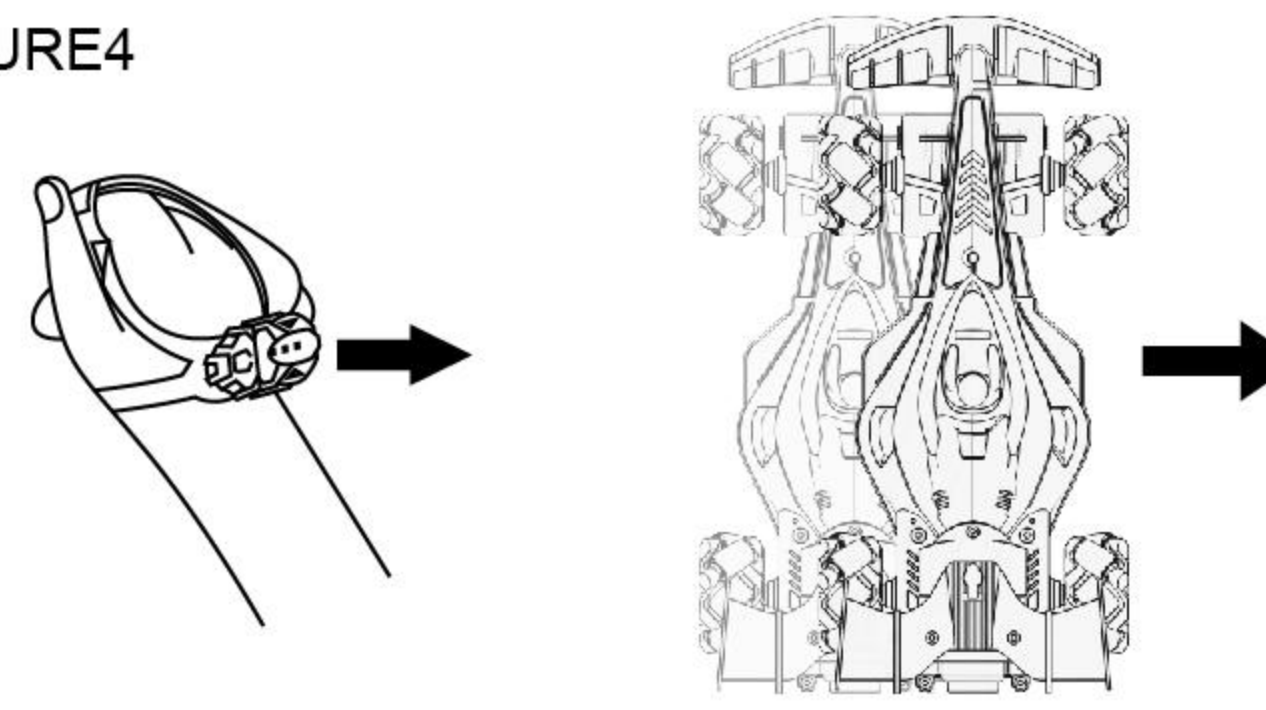

Gesture to the right. Car to the right

Precautions for battery use

1. The remote control car uses a 3.7V rechargeable lithium battery; The remote control uses 2 1.5V AA non-rechargeable batteries;
2. The battery should be taken out and loaded according to the polarity and voltage of the toy battery room;
3. Non-rechargeable batteries are not rechargeable;
4. Rechargeable batteries must be charged under adult supervision;
5. The rechargeable battery should be removed from the toy before charging;
6. Different types of batteries or old and new batteries can not be mixed;
7. Only batteries with the same or equivalent battery are recommended for use;
8. The battery should be taken out of the toy; If you do not use the toy for a long time, please remove the battery from the toy.
9. Do not short circuit the power terminal;
10. Use a screwdriver to unfasten the screw on the battery compartment cover, insert the battery according to the correct positive and negative polarity, and unfasten the screw on the battery compartment cover with a screwdriver to remove the battery.
11. Repair and maintenance: This product is composed of plastic, hardware and electronic components, shall not be placed or used in water or in a humid environment for a long time, regularly check whether the wires, plugs, shells and other parts are defective, and should be stopped in use until repaired.

# INSTRUCTION MANUAL

- Thank you for using the company's toy products, in order to make you have a better understanding of this product, please read before use. Read the following instructions, which will bring you a different sense of operating experience.
- This product is suitable for children 8 years old and above. It is assembled/charged by adults and then played by children

⚠ Warning: Please do not disassemble or modify the product without authorization, any change may cause the product can not be used normally.


**Spray car remote control to watch frequency: First, the remote control power off, the car power off; Then, turn the watch on, The watch light blinks slowly; Then turn on the power of the car, the car and the watch on the frequency, the watch light is on, the car has the start music.**

How to install batteries

1. Turn the switch on the remote control car and remote control Go to "OFF" position.
2. Open the battery cover using a Phillips screwdriver.
3. Insert the battery, as shown in the following figure.
4. Cover the battery.


How to play remote control car

1. Open the remote control car/remote control switch to complete the frequency matching.
2. Operate the remote control rocker and button to remote control the car forward or backward, left rotation or Rotate right, move left or move right and one-click presentation.
3. When the battery power is consumed, the left and right steering is not sensitive, and the forward and backward will be slow. Take off the battery and charge it.

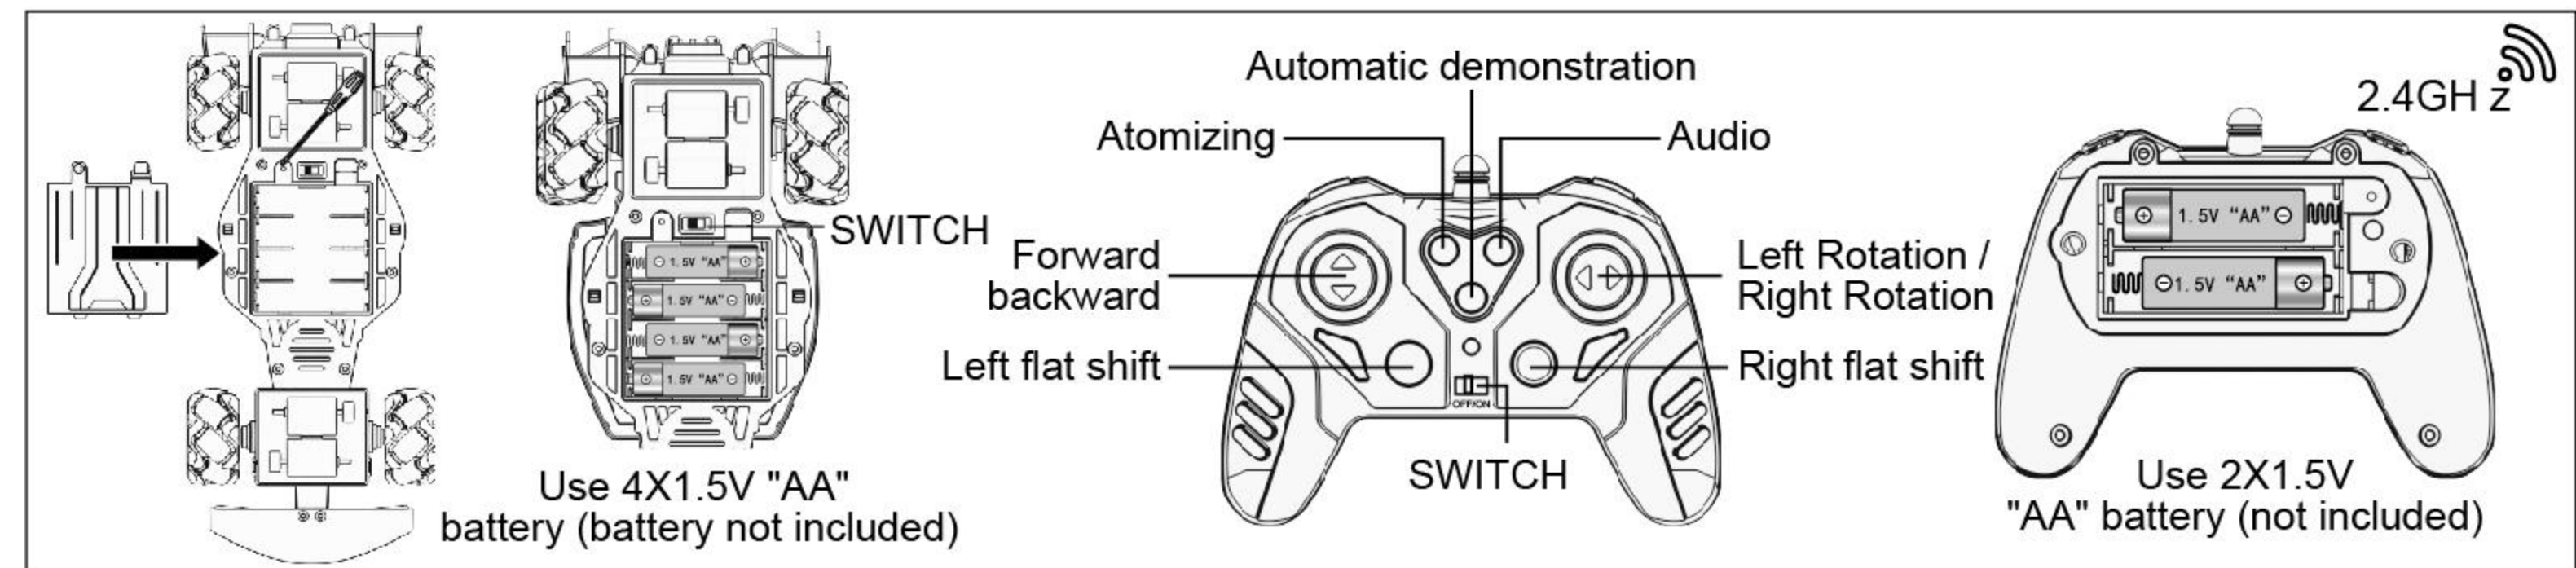


How to use the basic operation picture of this product

FIGURE1

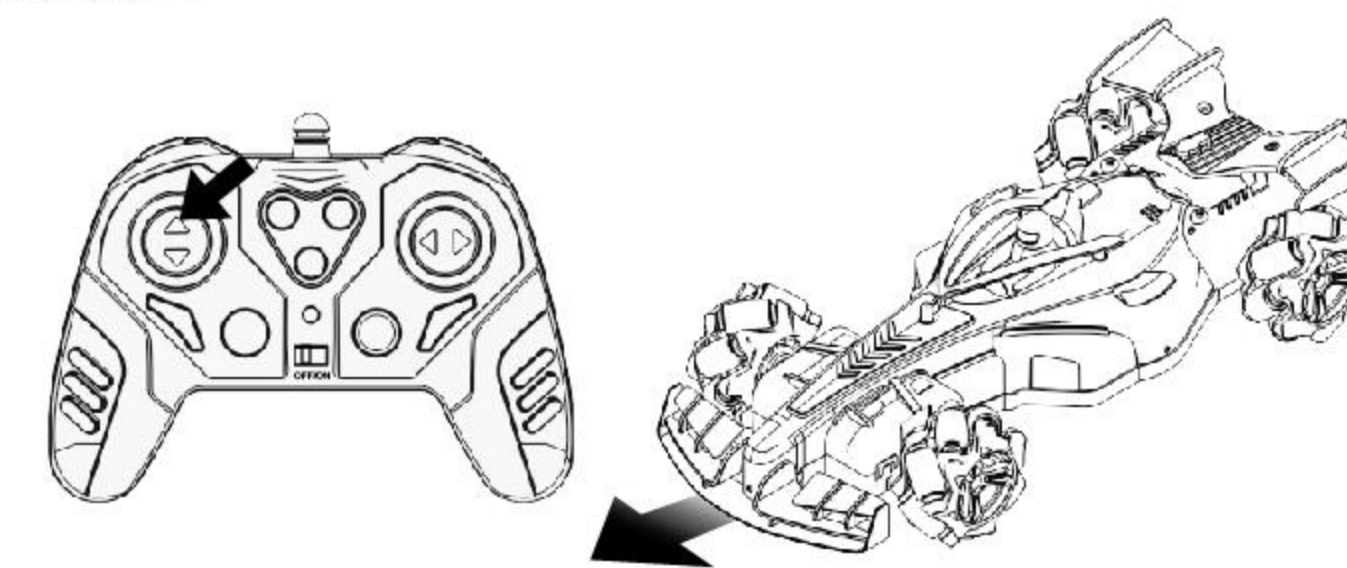


Press the forward button and the car moves forward

FIGURE2

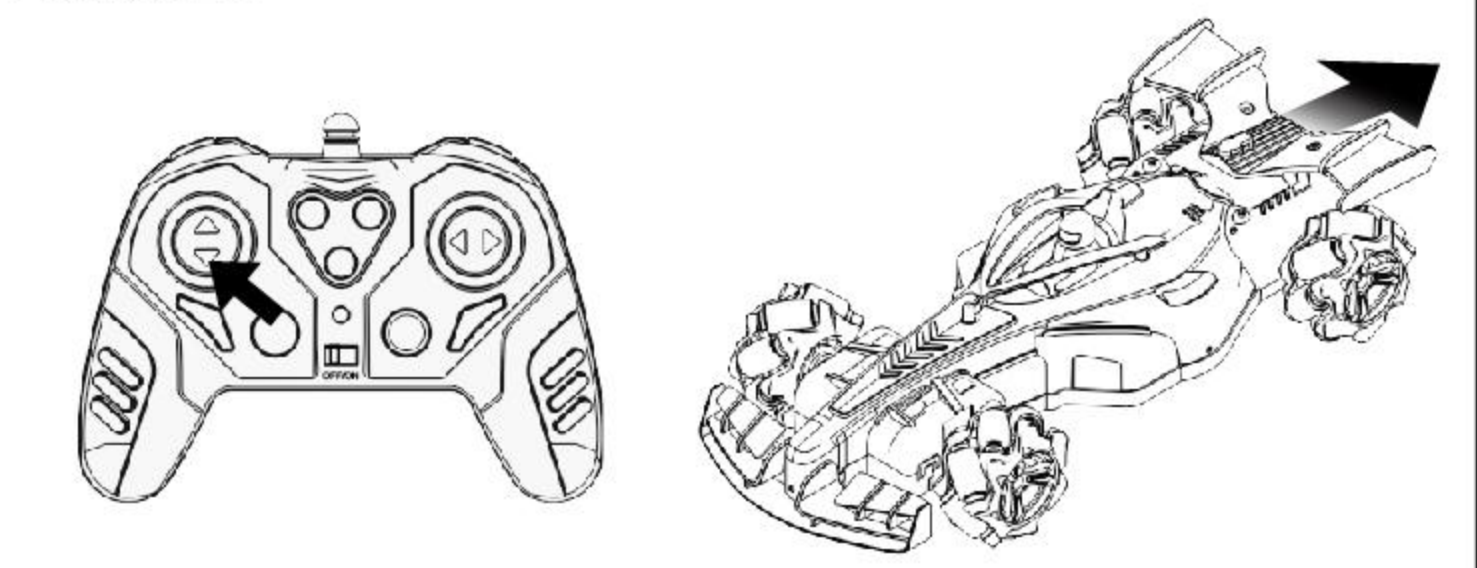


Press the back button and the car moves backwards

FIGURE3

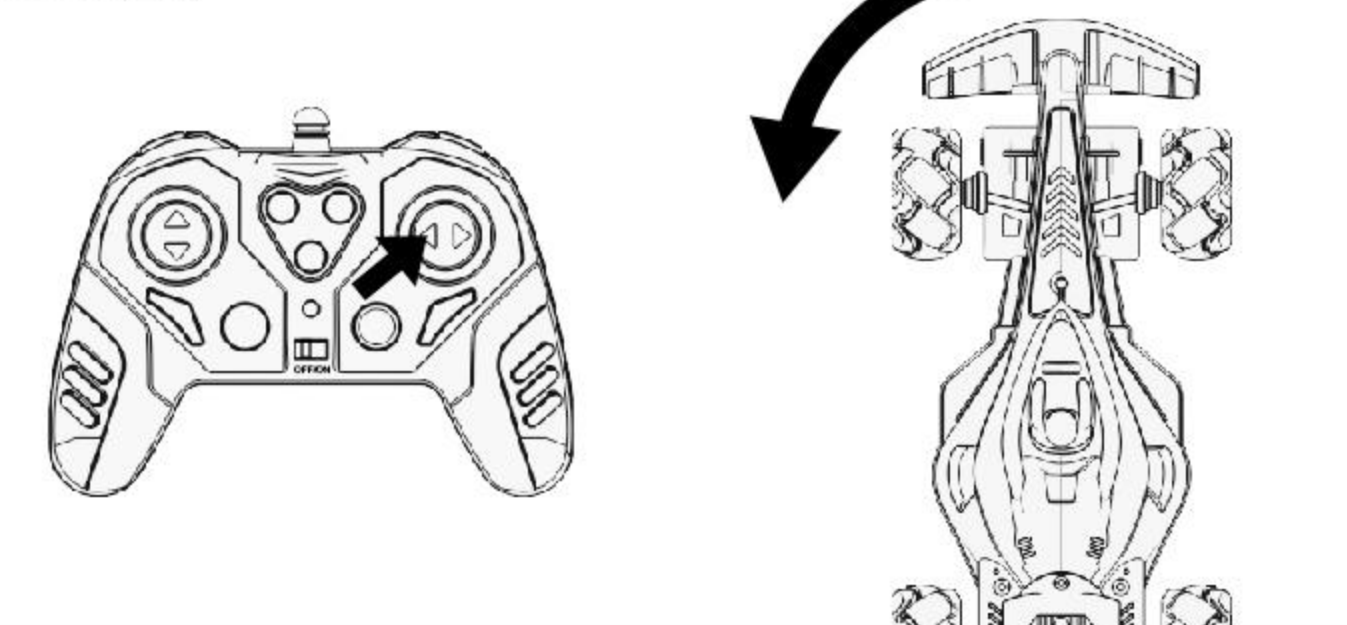


Press the left rotating key, the car rotates to the left

FIGURE4

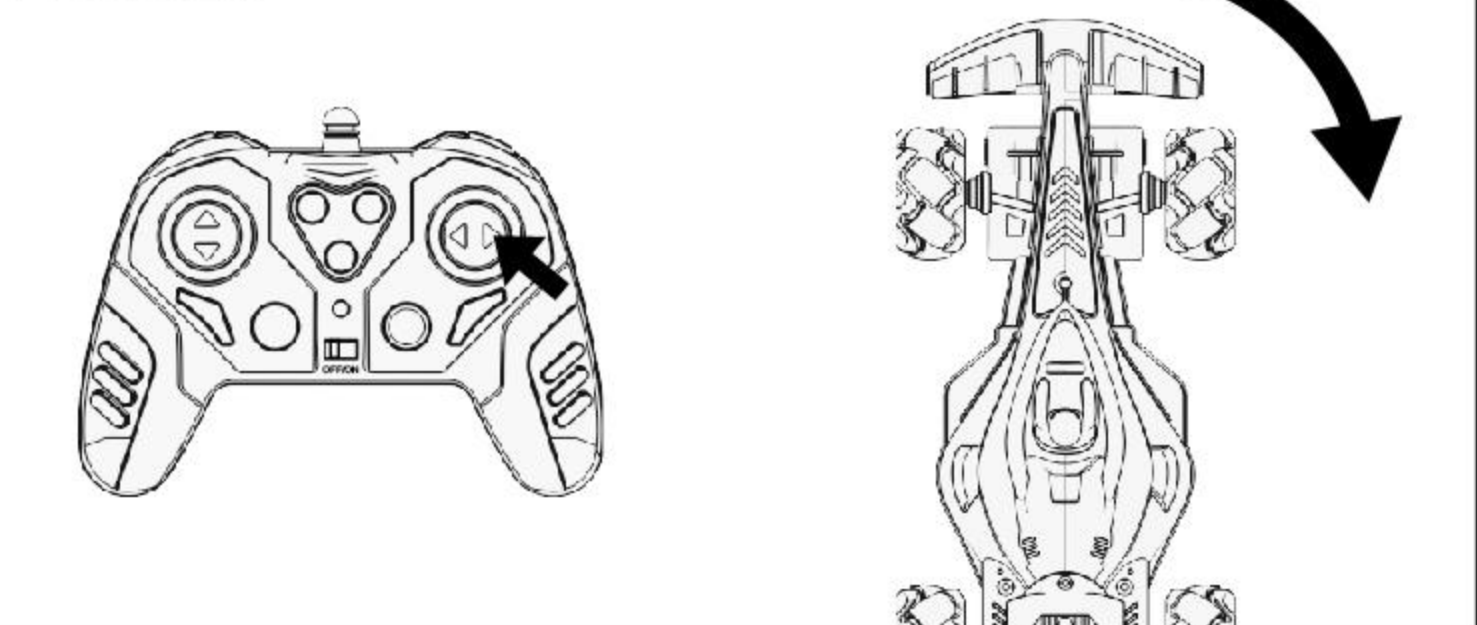


Press the right rotation button, the car rotates to the right

FIGURE5

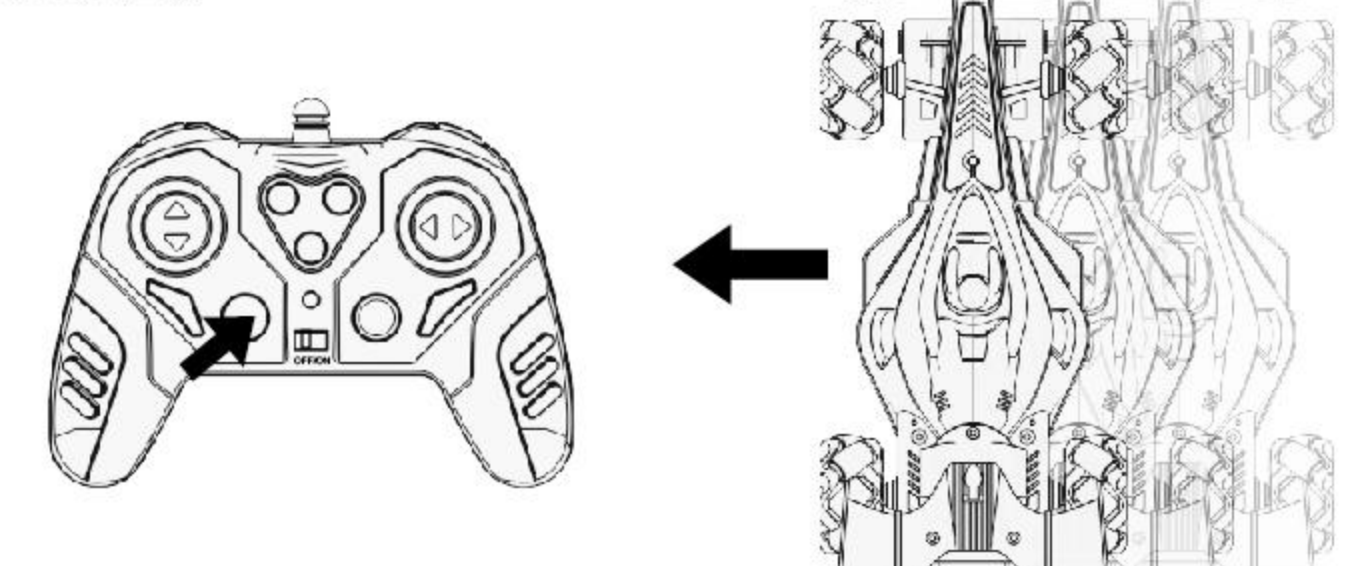

Keep on the left side. The car goes left

FIGURE6

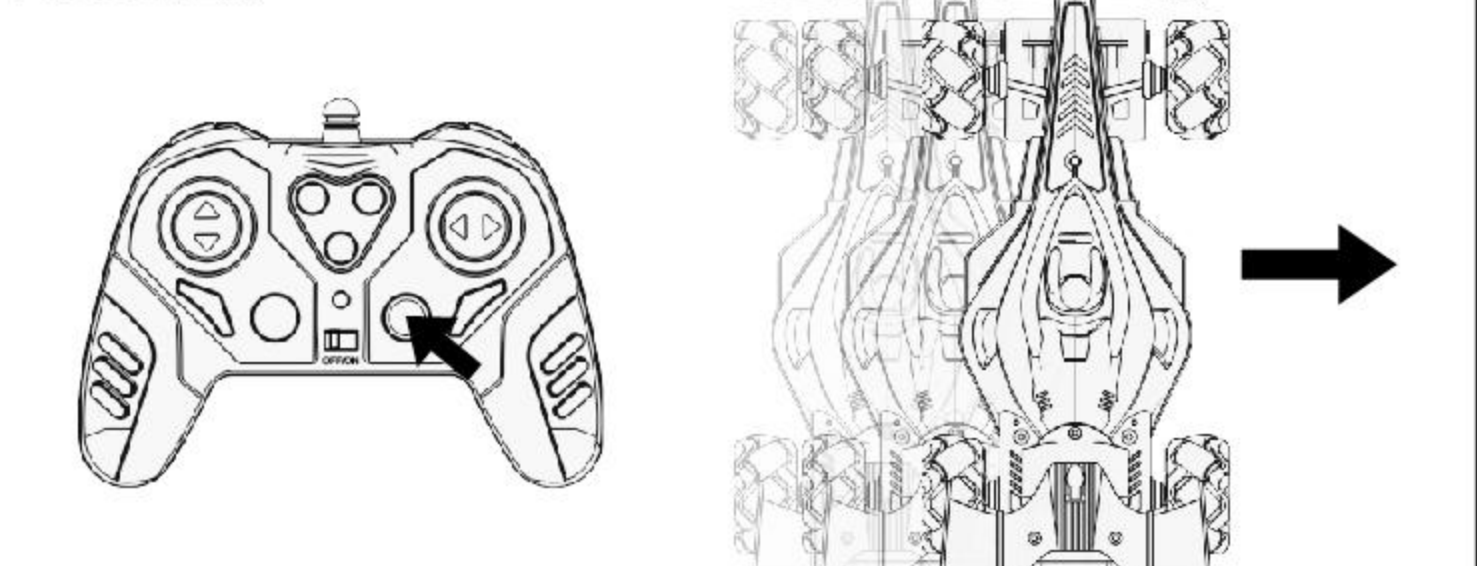

Keep on the right side. Go right side



## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.