



Contents

Note.....	2
Overview.....	3
Safety Precautions	3
Safe start	3
Traffic safety first.....	3
Switch off in restricted areas.....	4
Interference.....	4
Place the phone out of the reach of children	4
Accessories and batteries.....	4
Professional services	4
Installation	4
Accessories introduction	4
Installing SIM card and memory card.....	5
Charging the battery	6
Getting Started.....	7
Power on and off.....	7
Technical Reference.....	8
About the Mobile Phone.....	8
Locking or unlocking the screen.....	9
Using shortcut panel	9
Customizing mobile phone	10
Call.....	10
E-mail	11
Calculator	11
Calendar	12
Sound recorder	12
Settings.....	14
Network & Internet.....	12
Connected devices.....	13
Apps & notifications.....	13
Smart controls.....	13
Battery.....	13
Display.....	14
Schedule on/off.....	15
Navigation bar.....	15

ESTALUKY

Unlimited Talk Coverage

Audio profiles.....	15
Storage.....	15
Security & location.....	17
Accounts.....	15
Accessibility.....	16
System.....	17
About the phone.....	17
Languages & input.....	16
Gestures.....	16
Data & time.....	16
Backup.....	16
Reset options.....	16
Clock.....	18
Contacts.....	18
Gallery.....	19
File Manager.....	19
FM Radio.....	20
Note.....	18
Camera.....	20
Messaging.....	20
Wireless Update.....	19
Search.....	19
Files.....	19
SIM Applications.....	21
Troubleshooting.....	21

Note


Before using the product, please read the quick guide to fully benefit from it.
 Warranty period is 1 years from the date of purchase

ESTALKY

Unlimited Talk Coverage

This product involves constant upgrading and improvement, our company reserves the right to change the specification of software and or hardware mentioned in this operating guide without any prior notice. The product specifications and information mentioned in the operating guide are for reference only.

Overview

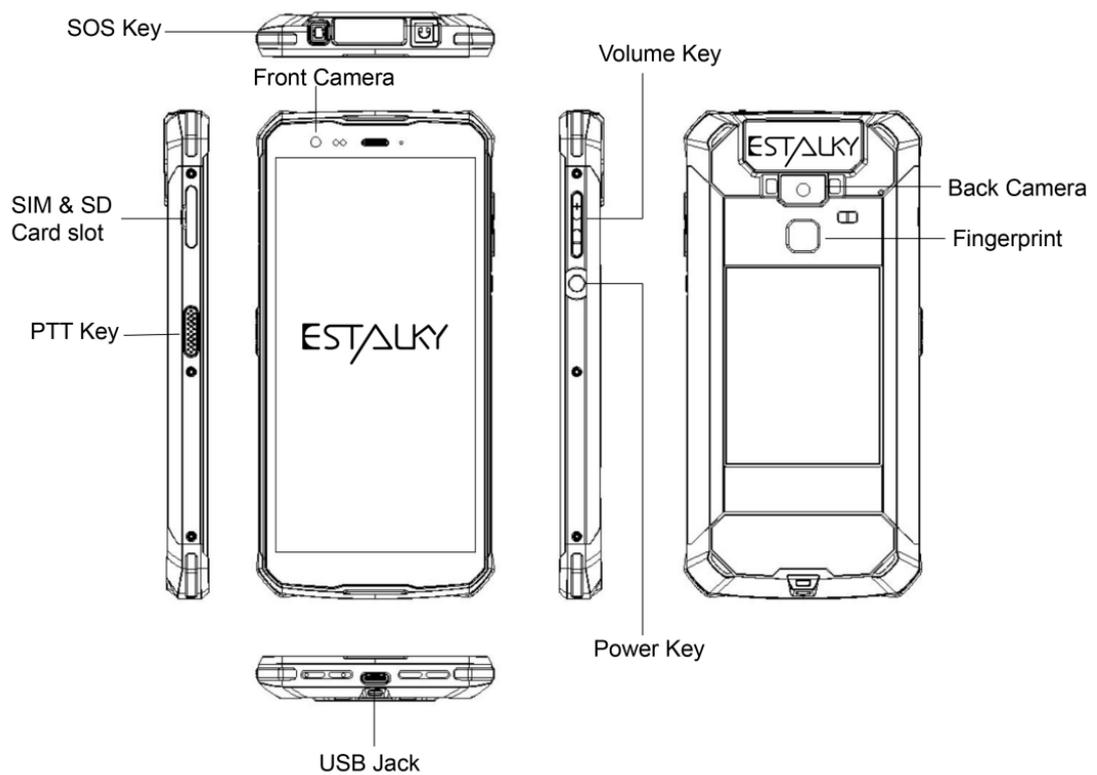

Safety Precautions

In order to use your mobile phone safely and effectively, please read the following information carefully before use.



Safe start

Switch off your mobile phone in places that prohibit mobile phone, or may cause interference or danger.

Traffic safety first

Do not use your phone while driving, as this may affect driving safely.

Switch off in restricted areas

Please comply with any relevant restrictions or regulations, and switch off the mobile phone on the airplane, or near flammable substances, chemicals or medical equipment.

Interference

Radio interference may affect the mobile communication, thus affecting the performance.

Place the phone out of the reach of children

Place the mobile phone and all accessories out of the reach of children.

Accessories and batteries

Only use the battery and charger specified by our company, or else it may cause explosion.

Professional services

Do not disassemble the phone or accessories without authorization. Only authorized service providers can repair the device.



Installation

Accessories introduction

Check if the following items are present in the product box:

- Mobile phone
- Travel charger (charger)
- User's Guide

Installing SIM card and memory card

When you subscribe to mobile phone service, you receive a Subscriber Identity Module (SIM) card that contains your subscription details such as your Personal Identification Number (PIN) and optional services.

To install the SIM card:

When you subscribe to mobile phone service, you receive a Subscriber Identity Module (SIM) card that contains your subscription details such as your Personal Identification Number (PIN) and optional services. To use UMTS or HSDPA services, purchase a Universal Subscriber Identity Module (USIM) card. Install the SIM card or USIM card as follows:

1. Pull out SIM slot on left side.
2. Please insert the SIM card along its SIM card slot direction (align the cut corner of the SIM card with the cut corner of the slot) and make sure that the SIM card has been inserted into its proper position.
3. The device supports hot swap

If you do not insert a SIM card or a USIM card, you can only use a non-web service and some phone menus.

To install a memory card (optional):

You can use a microSD™ or microSDHC™ memory card.

ESTALUKY

Unlimited Talk Coverage

- ✧ The phone supports only FAT file structure of memory card. If you insert a memory card with a different file structure, the phone will ask you to reformat the memory card.
- ✧ Frequent writing and erasing of data will shorten the service life of the memory card.
- ✧ When a memory card is inserted in the phone, the file directory in the memory card will appear in the /sdcard/sd folder under the internal memory (moviNAND™).

➤ **Installing the memory card**

1. Pull out SIM slot on left side.
2. Insert the memory card to ensure the gold contact is facing down.
3. Check whether the mobile phone displays memory card.

➤ **Removing the memory card**

Before removing the memory card, uninstall the memory card for safe removal.

1. In standby mode, select Settings → Storage → Uninstall SD card.

Remove the memory card from the slot until fully removed.

2. Pull out the memory card holder and remove the card


Do not remove the memory card while the phone is transferring or accessing information, as this may result in loss of data or damage to the phone and memory card.

➤ **Formatting the memory card**

1. Formatting the memory card on a computer may cause the memory card to be incompatible with the phone. Format the memory card only on your phone.
2. In standby mode, select Settings → Storage → Format SD card.

ESTALKY

Unlimited Talk Coverage

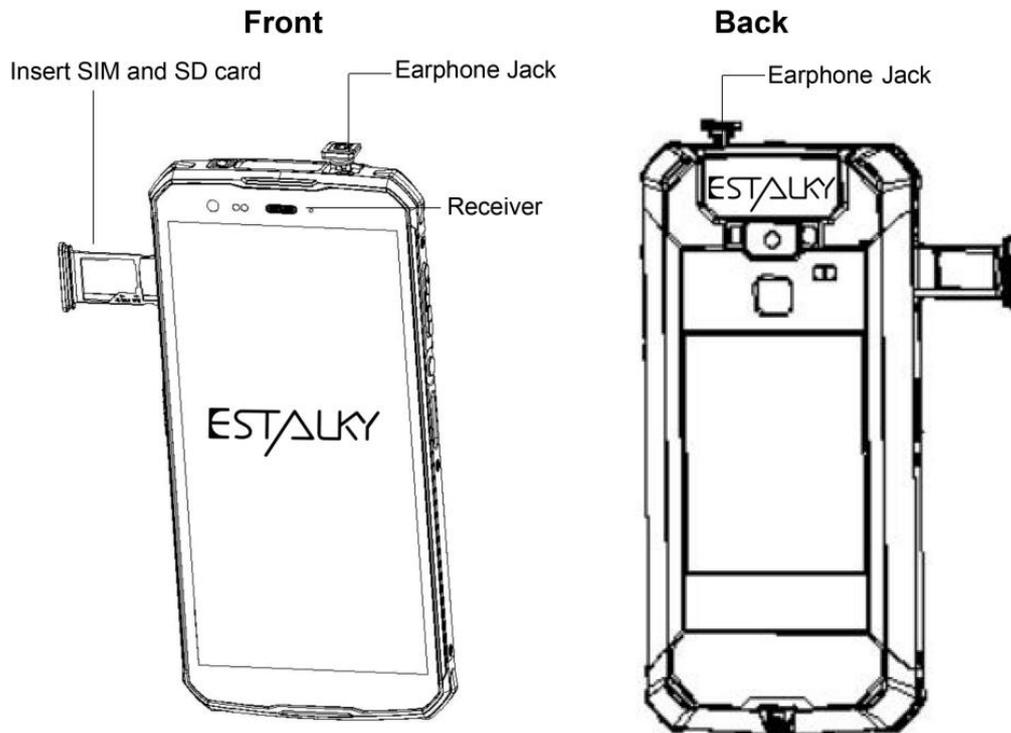

Before formatting a memory card, remember to back up the important data stored in your phone. The manufacturer's warranty does not include loss of data due to user action.

Charging the battery

- ✧ You must charge the battery before using it for the first time. You can use the supplied travel charger or connect your phone to a computer via a computer cable to charge the phone.
- ✧ Use only licensed chargers and data cables. Unauthorized chargers or data cables can cause the battery to explode or damage your phone.
- ✧ When the battery power is low, the phone will sound a warning tone and display the low battery. The battery icon also appears blank and turns red. If the battery power is too low, the phone will automatically shut down. You need to recharge the battery before you can continue to use the phone.



➤ **Charging with travel charger**

- ✧ Insert the small end plug of the travel charger into the multifunction jack. Improper connection of the travel charger may result in serious damage to the phone and will void the warranty for any damage caused by incorrect operation.
- 1. Plug the large end plug of the travel charger into an electrical outlet.
- ✧ You can use the phone during charging, but this will extend the time for the battery to fully charge;
- ✧ The phone becomes hot when charging. The phenomenon is normal, and does not affect the phone's life or performance;
- 2. When the battery is fully charged (the battery icon is no longer moving), disconnect the travel charger from the phone, and then unplug it from the power outlet.

➤ **Use computer data cable to charge**

Make sure your computer is turned on before charging.

1. Plug one end of the computer's data cable (mini-USB) into the multifunction jack.
2. Connect the other end of the data cable to the computer's USB port; it may take a moment to start charging.
3. When the battery is fully charged (the battery icon is no longer moving), disconnect the computer data cable from the phone, and then unplug it from the computer.

Getting Started

Power on and off

Turn on the Power and press Power

Turn off the Power, press the Power button, and then select close.

In areas where wireless devices are prohibited, such as airplanes and hospitals, observe all posted warnings and instructions from officials.

To use only non-network services on your phone, switch to Airplane mode.



Technical Reference

Technical Reference
Size: 160.84*77.78*14.7MM
Weight: 256g
Battery capacity: 4800mA
Standby time: 534hours

About the Mobile Phone

No.	Name	Description
1	Microphone	Also known as transmitter
2	Volume side buttons	Also known as side volume buttons
3	USB/ charging interface	Also known as I/O port; USB and charging interface combo
4	Headphone jack	3.5mm headphone jack
5	Power button	To turn on / off the mobile phone
6	Rear camera	Built-in camera, 13 megapixels
7	Speaker	Send sound from the bottom speaker
8	Dedicated Key	A key to start the camera within 0.6 seconds by phone standby mode
9	Flashlight switch	Turn on/off the flashlight
10	Digit Keyboard	When dialing, the corresponding number is displayed according to the

		corresponding key. In the input of English and numeric states, different characters are displayed according to the input state.
11	Navigation key	Adjust the menu and cursor position

Locking or unlocking the screen

You can lock the screen to prevent any accidental phone operation.

When the screen lights up, press the Power button to lock, and then press the Power button to unlock

Using shortcut panel

In the standby mode or while using the application, using the virtual mouse at the top of the screen to click on the area, you can turn on the shortcut panel. You can enable or disable other features, such as wireless connection, and access the list of notifications such as messages, calls, activities, or processing status. To hide the list, drag up the bottom border of the list.

- ✧ The following options are available in the shortcut panel display interface:
- ✧ Battery: Check the battery status.
- ✧ Settings: Access to the Settings menu interface.
- ✧ Brightness: Adjusts the brightness of the screen.
- ✧ WLAN: Enable or disable WLAN.
- ✧ Bluetooth: Turns Bluetooth on or off.
- ✧ Do not disturb: Turn on or off the do not disturb function.



- ✧ Data connection: Start or close the data connection.
- ✧ Airplane mode: Activates or deactivates Airplane mode.
- ✧ Auto rotate: Turns the screen rotation function on/off.
- ✧ Flashlight: Turns the flash on/off.
- ✧ Location info: Enable or disable location information.
- ✧ Profiles: Normal, mute, conference and outdoor are available.
- ✧ Projection: will screen projection on the device

Customizing mobile phone

Customize your phone for more features.

➤ **Set current time and date**

- ✧ In standby mode, select Settings → System → Date and time.
- ✧ Set the time and date and change other options.

➤ **Adjust the ringer volume**

Press the volume up or down button to adjust the ringer volume.

➤ **Switch to mute mode**

To mute or unmute your phone, do one of the following:

- ✧ Open the shortcut panel at the top of the screen and select Profiles → Do not disturb.

➤ **Change the ring tone**

- ✧ In standby mode, open the application list and select criteria - Settings - sound - mobile phone ringtone
- ✧ Select a ringtone from the list, and then select OK.

➤ **Adjust the brightness of the display**

Adjust the screen brightness in the Settings menu:

1. In standby mode, select Settings → Display → Brightness.



2. Adjust the brightness level by using a position key.

The brightness level of the display affects the speed at which the phone consumes battery power.

Call

➤ **Dialing**

Learn how to use call features, such as making and answering calls through available options during a call, or customizing and using call-related features.

➤ **Call log**

You can view the call log filtered by type.

1. In standby mode, tap Phone to switch to the All Calls screen to view the call log.
2. In the Call Log screen, you can view all the phone records.
3. Select a single call log to view details.

➤ **Make a phone call**

After the input number of the standby interface, press the dial key to make the phone call directly.

➤ **Answer the phone**

When incoming call, press the answer Key to answer the phone

E-mail

Learn how to send or view email messages through your personal or corporate email account.

➤ **Setting e-mail account**

1. In standby mode, open the application list and select E-mail.
2. Enter your e-mail address and password, select Next (for general e-mail accounts), or set manually (for other corporate e-mail accounts).
3. Follow the on-screen instructions to complete the e-mail account settings, and the e-mail message will be downloaded to your phone.

Calculator

Learn how to perform math calculations directly on your phone, just like a normal handheld or desktop calculator.

➤ **Performing calculation**

1. In standby mode, open the application list and select Calculator.
2. Use the buttons corresponding to the calculator display to perform the basic arithmetic operations.

Calendar

Calendar allows you to view your schedules and events at any time. You may view schedules one by one or several ones at the same time.

Select to show calendar by day, week or month. If “by week (or month)”, the calendar will be shown by week (or month). This application is convenient for you to view schedule or add events.

Sound recorder

Allow recording and playing voice, as well as settings sound quality and recording mode.

➤ **Recording voice memo**

1. In standby mode, open the application list and select Sound Recorder.
2. Click on the recording to start recording.
3. Speak to the microphone.
4. When finished, click pause to delete or finish.
5. Select [▶] to play the recorded audio file.

➤ **Playing voice memo**

1. In the playlist, select My recordings.
2. Select the voice file you want to play

Settings

Network and Internet

- **WLAN**
 1. Open or close the WLAN.
- **Mobile networks**
 1. Check the network type
- **Data usage**
 1. Mobile data
 - a. Turn the mobile data on or off.
- **Hotspot & tethering**
 1. Open or close the WIFI hotspot
- **Mobile plan**
- **Flight mode**

Open or close the flight mode.
- **VPN**

Connected devices

- **Pair new device**
 - Search for new device pairs
 - Connection preferences
- **Apps & notifications**

You can set up Apps & notifications



App & notifications

- You can set up Apps & notifications

Smart controls

- Smart wake
Pick up the device and double-click anywhere on the screen to wake it
- Lift to check phone
To check time , notification icons and other info , pick up your phone
- Pocket mode
Smart control when device in pocket

Battery

- Battery percentage
Open or close the battery percentage
- Battery Saver
You can set up Battery Saver

Display

- Brightness
You can change the brightness of the screen by using a position key.
- Night Light
Open or close the Night Light
- Colors & contrast
You can set up Colors & contras
- Adaptive brightness

ESTALUKY

Unlimited Talk Coverage

Open or close the Adaptive brightness

➤ Wallpaper

You can choose different pictures as mobile phone wallpaper.

➤ Sleep

If there is no operation in a certain period, the phone screen will go dark until it is off.

➤ Auto-rotate screen

Open or close the Auto-rotate screen

➤ Font size

Set the size of the font.

➤ Display size

Set the size of the display

➤ Screen saver

Set the Screen saver of the current

➤ Ambient display

Open or close the ambient display

➤ Device theme

Set the theme of the device

Schedule on/off

✧ Schedule off: Turn on at the set time.

✧ Schedule on: Turn off at the set time.

Navigation bar

➤ Navigation bar

Open or close the navigation bar

➤ Navigation buttons



Please select a combination of navigation buttons

Audio profiles

Set the audio profiles of the device

Storage

Check the storage information of the phone, format the memory and perform other operations.

Security & location

➤ Fingerprint

Set your fingerprint and password to ensure the security of your phone's files

➤ Location

Position information can be accurately positioned after opening position information.

Accounts

➤ Add account

Set up add account and synchronize data

Accessibility

Set the accessibility of the device

System

➤ About the phone

Access to information about the phone, such as status information, legal information, phone model and version number.

➤ Language and input method

ESTALUKY

Unlimited Talk Coverage

You can select the language, set the keyboard, and select the input method.

➤ Gestures

Set the gestures of the device

➤ Date and Time

Access and modify the following settings to control how your phone displays time and date:

✧ Auto date and time: Use the time provided by the network.

✧ Auto time zone: Use the time zone on the network.

✧ Set date: Set the current date manually.

✧ Set time: Set the current time manually.

✧ Select time zone: Set the local time zone.

✧ Use 24-hour format: Display the time in 24-hour format.

➤ Backup

You can go to backup

➤ Reset options

Please note that restoring the factory default will erase all data on your phone.

Clock

You can set the alarm, view world time, use the timer and stopwatch function.

Contacts

Learn how to create and manage the list of personal or corporate contacts stored in your phone's memory, SIM card or USIM card. You can save the contact's name, mobile number, home phone number, e-mail address, and more.

Gallery

Learn how to play back videos stored in your phone's memory and memory card.

If the memory on your device is full when you access the album, use My Documents or other file management application to delete some files and try again.

➤ Photo

1.View photos

1. Select Album in standby mode or the main menu.
2. Select a folder.
3. Photos are shown in thumbnail images. Click the thumbnail to select the photos you need to view and enter the full screen interface of the photo

2.Play video

1. Select Album in standby mode or the main menu.
2. Select a folder.
3. Select the video to play and tap Play.

➤ Album

Show all pictures

➤ Discover

Image classification

File Manager

Learn to open all the pictures, movies, music, sound files and other types of files stored on your phone and memory card quickly, and you can search the files.

1. In the main menu, select File Manager.
2. Select Folder → File.
In the folder, select the function in the lower left of the phone or press the Function button to have the following options:
 - ✧ New Folder: Create a new folder.
 - ✧ Select a file or folder: Select all or certain files to copy, delete, cut or rename.
 - ✧ Show hidden files: The hidden files are displayed in the list.

✧ Sort by: Name or time.

FM Radio

Wear your earpieces of radio before searching for channels.

Glossary:

Channel list: Display the list of FM radio channels. You can select to play one of them. (the list can contain 20 channels maximum)

Search: Select this option to automatically search for channels and generate the list of channels.

Loudspeaker: Press the button to use the radio loudspeaker.

 and : Tap to move to another channel.

Note

Keep track of interesting things that happen anytime, anywhere

Camera

In standby mode, enter from Applications and take pictures or record video. Camera program takes high-quality photos, special effects and more professional camera modes support shooting high-quality video.

Messaging

Learn how to create and send text messages (SMS), multimedia messages (MMS), and view or manage messages sent or received. Additional charges may be caused when send or receive messages outside the local service area. For more information, contact your service provider.



Wireless Update

System version information and version update channel

Search

Search any information on your phone

Files

Displays various file information

SIM Applications

Description of operator services

Troubleshooting

To save you time and unnecessary costs, please make the following simple check before contacting professional after-sales service.

Can't start the phone

Check if the [Power] button is pressed and held for at least 1 second.

Check if the battery is exhausted, if yes please charge the phone.

Message displays when the phone is started

Enter the PUK code: If wrong PIN code is entered for three times consecutively, the SIM card will be locked, and you need to enter the PUK code provided by the operator.

SIM card error

ESTALUKY

Unlimited Talk Coverage

Metal surface of SIM card has dirt; wipe the metal contacts with clean cloth.

SIM card is not installed properly; install the SIM card correctly according to the instructions.

SIM card is damaged; contact your network service provider.

Unable to connect to the network

Signal is weak; please move to where the signal is strong and retry.

Beyond the coverage area of network service provider

Invalid SIM card; contact your network service provider.

Can't make calls

Make sure you tap the Call key after dialing.

Please confirm whether the call is forbidden due to arrears.

Please make sure the SIM card is valid.

Check whether the call barring function is enabled.

Call quality is poor

Check if the volume is appropriate.

Radio waves can't be communicated effectively in poor reception areas such as tall buildings or basements.

Can't answer calls

Make sure your phone is on and connected to the network.

Please confirm whether the call is forbidden due to arrears.

Please make sure the SIM card is valid.

Check whether the call barring function is enabled.

Can't be heard

Make sure the microphone is turned on.

Keep the microphone in the lower part of the phone close to your mouth.

Standby time is short

The standby time depends on the system settings of the network, and may be in a poor

ESTALUKY

Unlimited Talk Coverage

reception area. When the signal is weak, the phone will continue to emit to look for base station, which consumes a lot of battery power and shortens the standby time. Please move to a place with strong signal or temporarily turn off the phone.

Can't charge

Contact is poor; check if the plug is connected properly.

Dirt accumulated; clean the wiring port of the phone and battery with a soft clean cloth.

Change the charging environment when charging in an environment below 0°C or above 45°C.

The charger is damaged and needs to be replaced.

If the instructions above do not help you solve your problem, record your phone's model and serial number, authorization or warranty information, and a clear description of the problem, and then contact your local dealer.

Remark: This operating system only supports official system updates. If you install any third-party ROM or modify the system software through cracking, it may cause system instable or other safety risks and hazards, and you shall assume the responsibility for such behaviors.



FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Smart Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: TE610 (FCC ID: 2AVAF-E618) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.733W/kg and when properly worn on the body is 0.742W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components



in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.