



# MULTI-COLORED LED WIRELESS PARTY SPEAKER



## Model BB2716 Instruction Manual

1

Thank you for your purchase of our new **Multi-Colored Led Wireless Party Speaker**. We hope you are satisfied with your product. Please make sure to read this instruction manual carefully before using your speaker.

- Package Contains**
- a. Wireless Party Speaker
  - b. USB charging cable
  - c. Remote control
  - d. Instruction manual
  - e. 3.5mm AUX cable
  - f. Microphone



2

Thank you for your purchase of our new **Multi-Colored Led Wireless Party Speaker**. We hope you are satisfied with your product. Please make sure to read this instruction manual carefully before using your speaker.

### Product features

- Ultra-low distortion amplifying circuit
- Digital karaoke, treble and bass independent adjustment
- Built-in MP3 encoding supporting U disk
- Unique acoustic appearance design
- Professional treble and bass gain controlling circuit
- Built-in battery for outdoor activities
- Built-in professional wireless microphone system
- Professional high-effective loud-speaking unit
- Compatible to DVD/VCD/PC and other sound sources
- Suitable for adaptor and charging
- Intelligent power switch charging circuit

### Warning

1. Do not place objects on top of the device, as objects may scratch the device.
2. Do not expose the device to dirty or dusty environments.
3. Do not insert any foreign objects into the device.
4. Do not expose the device to strong magnetic or electrical field.
5. Do not use the device in the rain.
6. Please check with your Local Authority or retailer for proper disposal of electronic products.
7. Do not disassemble the device. Only a certified service technician should perform repair.
8. The device has apertures to disperse heat. Do not block the device as it may become hot and malfunction as a result.

### Powering up your speaker

1. Plug the micro USB plug into your speaker's micro USB charging port
2. Plug the USB side of your cable into your computer or laptop's USB charging port, or into a standard USB charger (not included)
3. Make certain that your computer or laptop is powered on, or the USB charger is plugged in to begin charging.
4. The Charging indicator LED light should illuminate RED when charging and then turn to GREEN when the battery is fully charged.
5. Move the power switch to the ON position. The LED display should activate.
6. Adjust the volume control to the MIN position before connecting a device.
7. You're now ready to connect your device!

3

### FOR MAXIMUM BATTERY LIFE, IT IS IMPORTANT TO FULLY CHARGE YOUR BATTERY PRIOR TO USE.

### Connecting your BLUETOOTH™ Device

Your speaker can play almost all Bluetooth devices by simply pairing the device to the speaker. Please follow these steps to properly pair your device to your speaker.

1. Press the Mode button to choose the input signal source as BT channel when starting the machine.
2. Navigate to the Bluetooth section on your device and select "browse for devices".
3. Look for the speaker device name "BB-BT-SP" and press connect.
4. You should hear a connection sound on your speaker and your device should display "connected". When the connection is successful, "tick" tone will prompt. If the speaker can't be connected, please restart the speaker or the device and try again.
5. Play the music from your device and adjust the volume on your device.
6. Adjust the master volume level on the speaker to your desired volume level.

Fault phenomenon	Simple fault analysis	Troubleshooting
Failing to electrify	The power switch is not opened The electricity quantity of built-in battery is totally consumed	Open power switch Use power adaptor to charge the battery
No sound	Failing to input sound source Failing to establish signal line Main volume is switched to minimum U disk playing has no sound Faults with external signal source Poor contact or damage of external signal line	Change signal source Reconnect signal line Properly adjust the volume knob Inspect U disk or audio switch Change signal source Readjust or change signal line
External microphone has no sound	External microphone is not fully inserted in the jack The external microphone	Totally insert the microphone to the jack Open the switch of

4

### FCC Information FCC ID

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement  
This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help.  
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

**Warning :**  
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.



5

### Battery information

Your device is powered by a rechargeable battery. The full performance of new batteries is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Do not leave fully charged Speaker connected to a charger, overcharging may shorten their lifetime. If left unused, fully charged Speaker batteries will lose their charge over time. Never use any charger or cord that is damaged. Leaving the device in hot or cold places will reduce the capacity and lifetime of the batteries. Optimal temperature for the batteries is between 59°F and 77°F. A device with a hot or cold batteries may not work temporarily, even when the batteries are fully charged. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

### Device Safety

• Your Wireless Speaker have an internal rechargeable battery. Improper usage may result in the Speaker becoming hot, igniting or bursting and causing injury if exposed to conditions of abuse. • Do not disassemble, throw away or damage the Wireless Speaker. • Store the Wireless Speaker in a dry place, keeping them away from damp corrosive materials and environments such as salt air. • Keep the Wireless Speaker away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Speaker inside a car during hot weather. Remember a closed car acts as a green house allowing the inside to reach high temperatures. • The Wireless Speaker are not a toy. Please keep them out of the reach of young children. • Please do not discard the Wireless Speaker. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877— 273— 2925 or online at "call2recycle.org" for a battery recycling drop off location near you.

### Charging The Battery

1. Plug the charger cable into the charge port.
2. Connect the charger to a USB power source. The red indicator light will display during charging. If charging does not start, disconnect the charger plug it in again, and retry. Charging the battery fully may take hours.
3. When the battery is fully charged, the red indicator light will turn off. Disconnect the charger from the USB power source and the Speaker. The fully charged battery has power for hours of music time.
4. Important! To prevent a complete discharge of your Speaker' battery, charge them up at least every six months.

6

### Limited Warranty

ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.  
This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law.  
ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.  
Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.  
The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you.  
THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.  
This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.

Send product with \$11.95 shipping & handling fee to:  
ESI Cases & Accessories  
44 East 32nd Street New York, NY 10016  
Tech Support : (212) 883-8838  
TechSupport@ESICellular.com

7