 
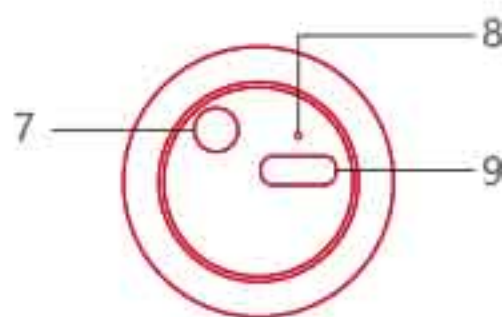 


# Product Introduction:

- Microphone
- Recording line
- Charging cable
- Quick Start Guide

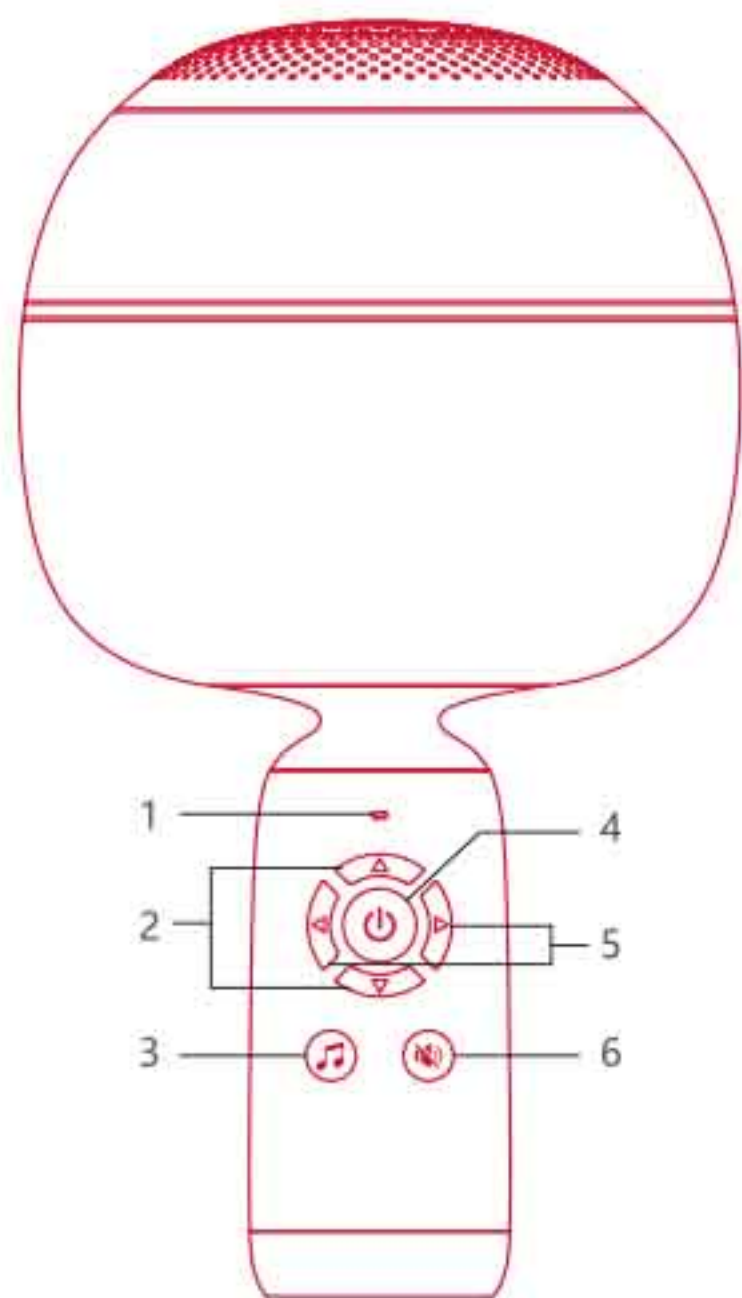

1. Blue indicator

2. Microphone volume adjustment ▲ / ▼

3. Special effect 🎵

4. Power supply/sound effect/TWS 🔌

5. Accompaniment adjustment ◀ / ▶

6. Original sound mute/Speaker mute 🚫🔊

7. 3.5mm headphone jack 🎧

8. Charging indicator

9. Type-C charging/live recording interface

# Button Function Description:

## Power button

Long press: long press for 2 seconds to Power on/off, with corresponding prompt voice.

Click on: click this button to switch the sound effect.

4 modes of sound effect: Karaoke, Professional, Popular, and Host, with corresponding prompt voice.

Double click: double click for the first time is to open the TWS to pairing, double click for the second time is to cut off TWS pairing, with corresponding prompt voice.

## Microphone volume ▲

Click on: click this button to volume up, with “beep” voice. Turn down the voice to the maximum, with “dududu” voice corresponding.

Long press: long press this button to turn up the volume continuously.

## Microphone volume ▼

Click on: click this button to volume down, with “beep” voice. Turn down the voice to the minimum, with “dududu” voice corresponding.

Long press: long press this button to turn down the volume continuously.

## Accompaniment volume ►

Click on: click this button to volume up the accompaniment, with “beep” voice. Turn up the voice to the maximum, with “dududu” voice corresponding.

Long press: long press this button to turn up the accompaniment volume continuously.

## Accompaniment volume ◀

Click on: click this button to volume down the accompaniment, with “beep” voice. Turn down the voice to the maximum, with “dududu” voice corresponding.

Long press: long press this button to turn down the accompaniment volume continuously.

## Special sound effect 🎵

Click on: click this button to change the sound effect mode, 3 types sound effect: Loli sound (Men to women, women to girls), Wali sound ( Robot sound), Monster sound, with corresponding prompt voice.

Long press: long press this button to reset the function, with corresponding prompt voice.

## Original sound mute/Speaker mute 🔇

Click on: click this button to mute original sound/speaker, with corresponding prompt voice.

Long press: long press this button to power on/off the original sound/ speaker, with corresponding prompt voice.

 
# Bluetooth Connecting:



Turn on the Bluetooth in your phone, search “Monster M97” and connect, Bluetooth lights on, pairing successfully prompt voice corresponding.


Blue indicator: when disconnected with Bluetooth, blue indicator lights blink; when connected, blue indicator lights on.

# Listening Music :

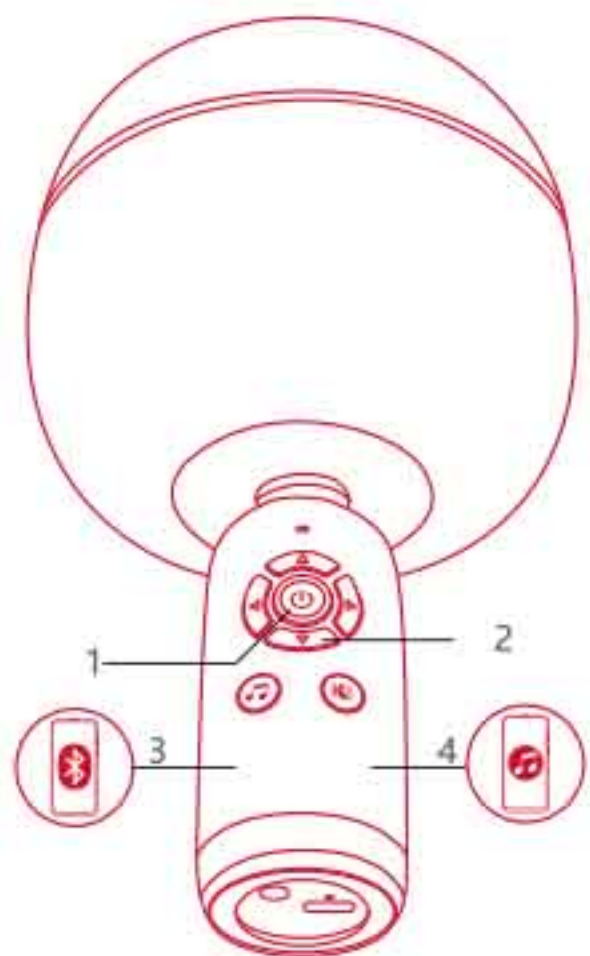

1. After long pressing the power button for 2 seconds, the blue indicator light will light up, and the boot will be successful;
2. Turn off the microphone volume to the minimum;
3. Connect the Bluetooth of the mobile phone. Turn on the Bluetooth of the mobile phone and search for the device, click "Monster M97" to connect;
4. Open the music APP, adjust the phone volume or microphone speaker volume to a suitable state;
5. Play music.

## Wireless Karaoke:

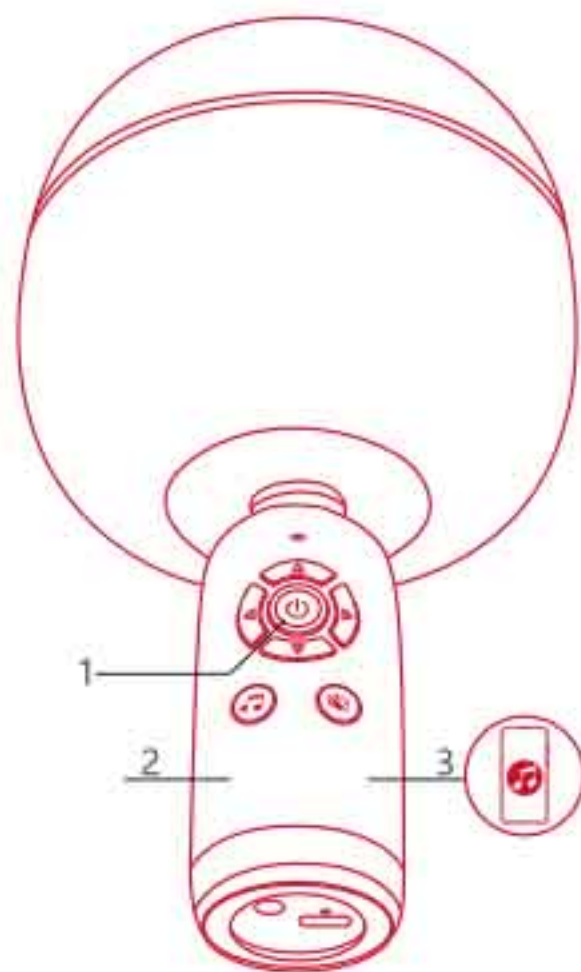 


1. After long pressing the power button for 2 seconds, the blue indicator light will light up, and the boot will be successful;
2. Connect the Bluetooth of the mobile phone. Turn on the Bluetooth of the mobile phone and search for the device, click "Monster M97" to connect;
3. Open the mobile music APP, adjust the microphone volume and speaker volume to a suitable state, switch

between different sound effects, and experience different karaoke effects;

4. Start the wireless karaoke.

## Connection Between Two Microphones:

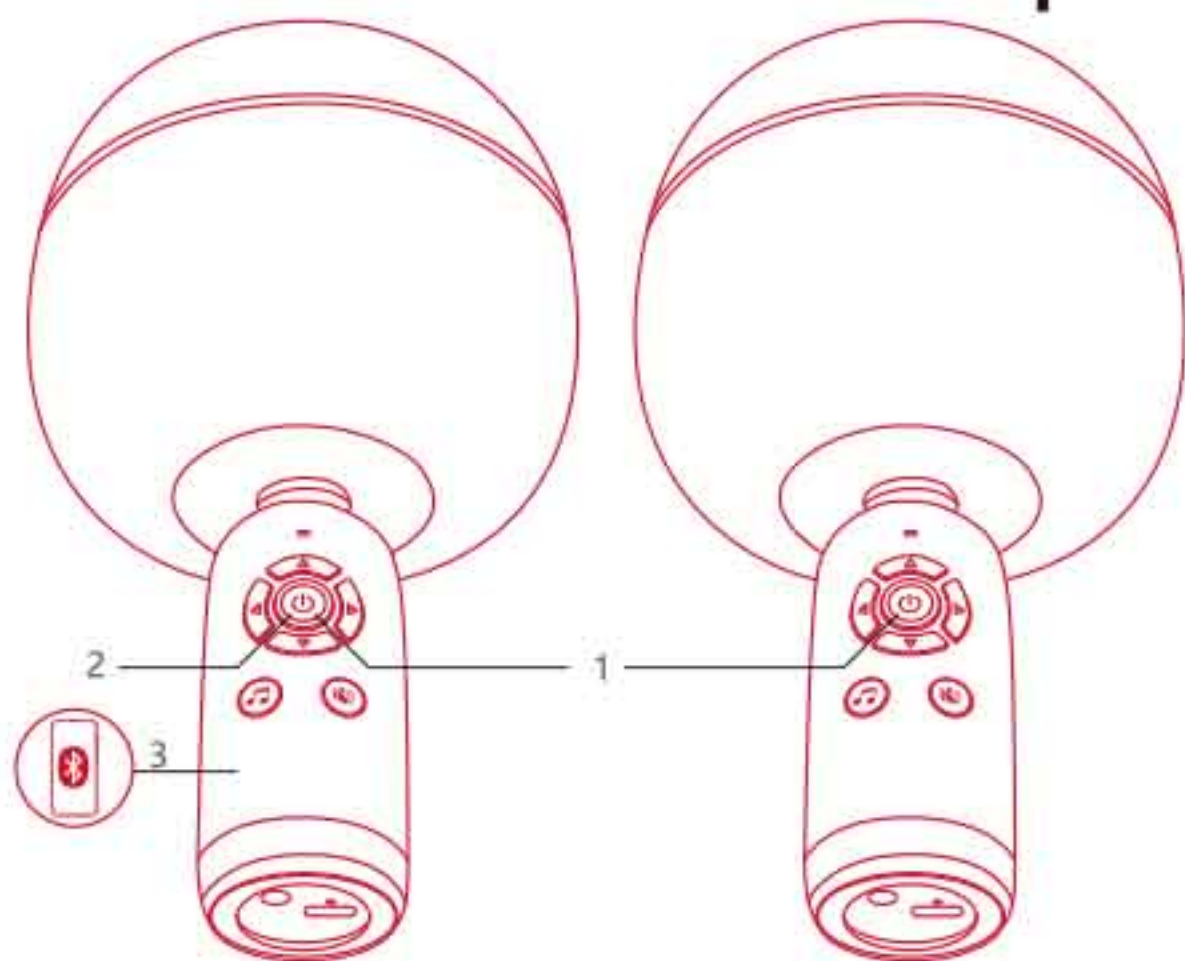 

1. Press and hold the power button of the two microphones at the same time for 2 seconds, the blue indicator light will light up, and the boot will be successful;

2. Select one of the microphones, double-click the main microphone power button to connect TWS to another microphone, and there will be a prompt after the connection is successful


3. The microphone is connected with the Bluetooth of the mobile phone. Turn on the Bluetooth of the accompaniment phone and search for the device, and click "Monster M97" to connect;

4. After the connection is successful, the accompaniment song of one microphone can be transmitted to another microphone for playback.

5. Note: Only the accompaniment can be transmitted between the microphones, not the voice of people speaking with the microphone

5. The microphone mode can only transmit accompaniment, the voice of the microphone cannot be transmitted.

## Wired Live Recording:

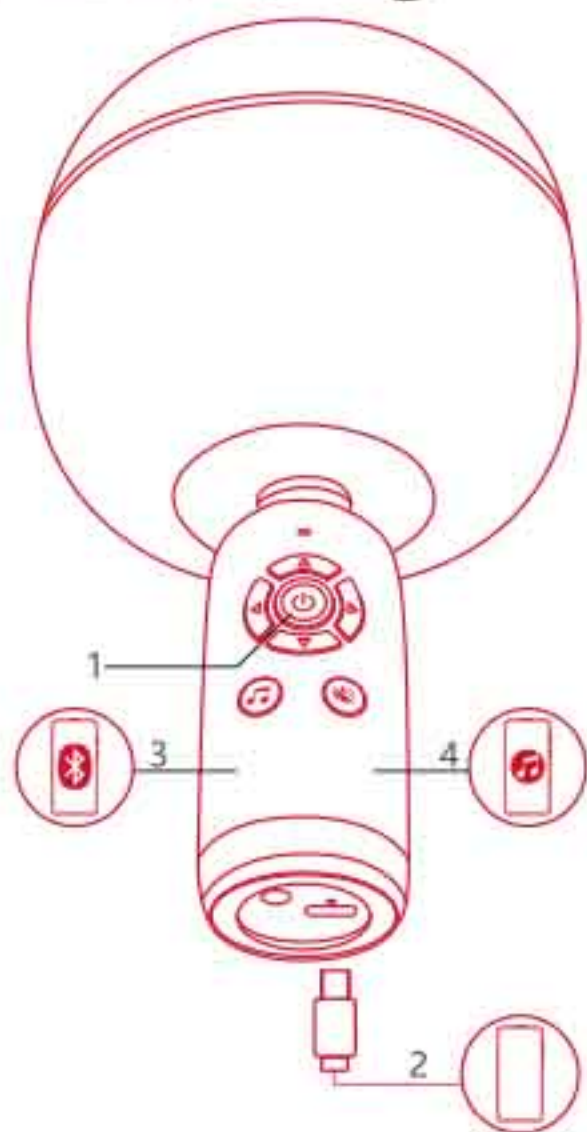 

1. After pressing and holding the power button for 2 seconds, the blue indicator light will light up, and the boot will be successful;


2. Use the recording cable to plug into the TPYE-C socket, and plug the other end into the live phone headset socket;

3. Connect the Bluetooth of the mobile phone again. Turn on the Bluetooth of the accompaniment phone and search for the device, and click "Monster M97" to connect;

4. Open the accompaniment mobile music APP, adjust the microphone volume and speaker volume to the appropriate state, switch different sound effects, and experience different karaoke effects;

5. Open the live broadcast platform of the live phone to start the wired live broadcast function.

## Charging Connect:

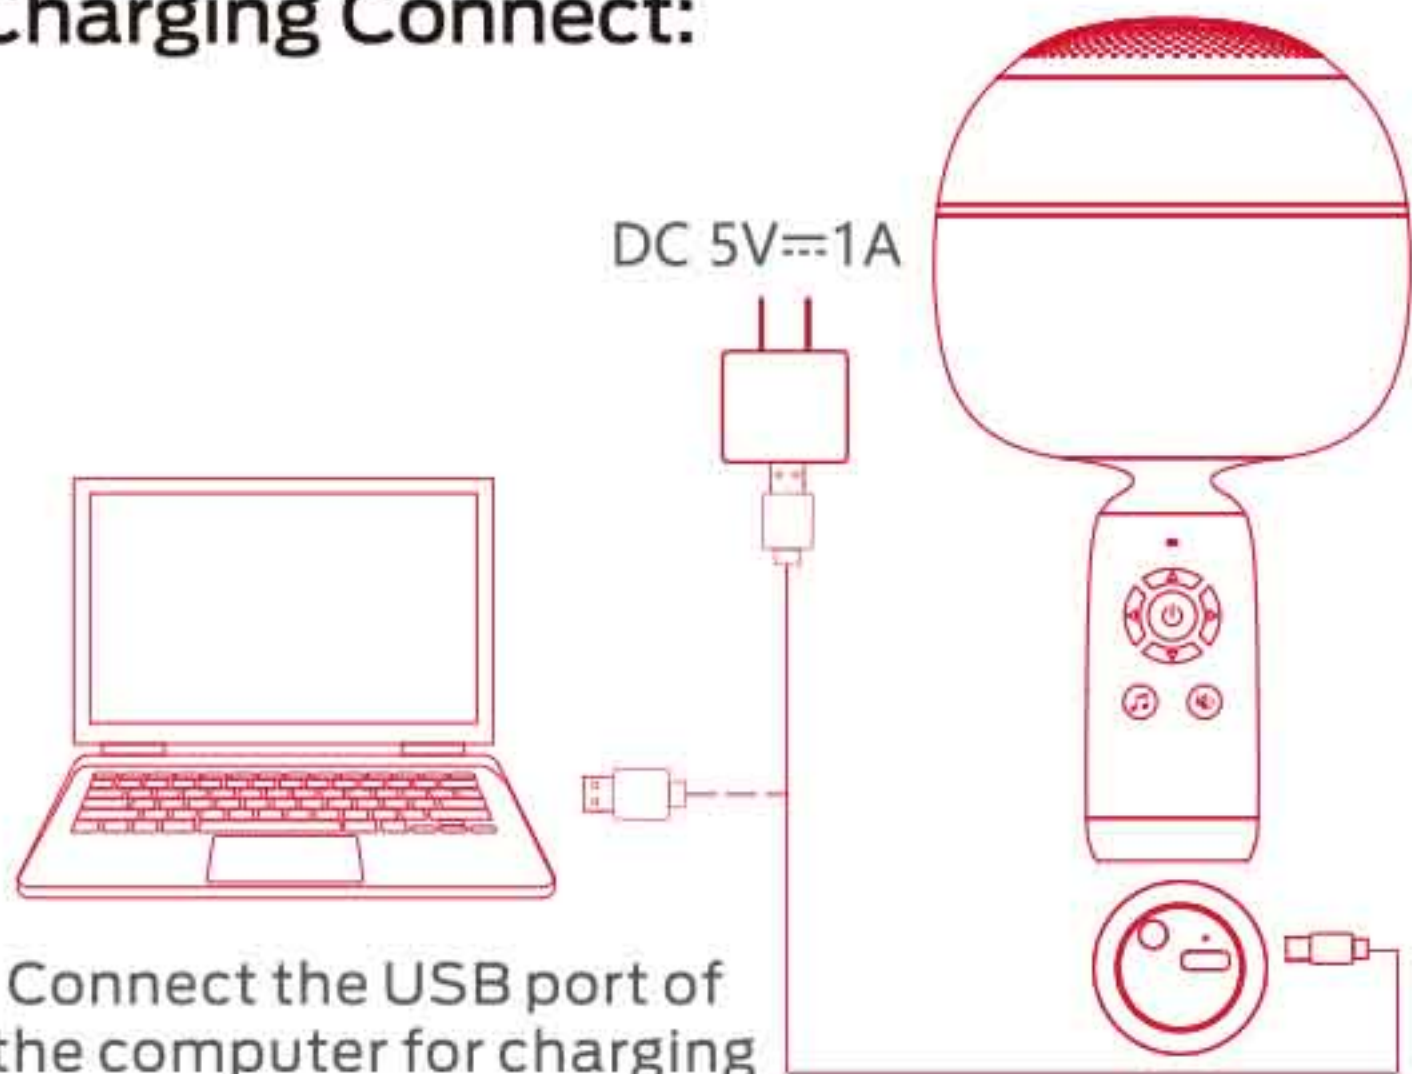 

Power indicator red lights on, full battery, lights off.

## Technical Parameter:

Pickup: dynamic microphone

Flexibility:  $-54\pm 1\text{dB}$

Charging Power: DC 5V=1A

Vocal Frequency Response: 100Hz-10kHz

Music Audio Respond: 28Hz-20kHz

Peak Power:  $2*13\text{W}$

Maximum Sound Pressure: 130dB

Wireless Distance: within 10 meter

Bluetooth Version: 5.0

Battery Capacity: 1800mAh

Power Supply Method: 3.7V lithium battery

Weight: 445g



# Faults and Solution:

Failure phenomenon	Failure cause	Solution
Microphone no voice	Power off or in low volume	Power on, adjust microphone volume
Voice breaking with Bluetooth playing	Over distance or obstacle between with Bluetooth equipment	Keep in distance Avoid obstacle
Accompaniment no voice Or with low voice	The volume of the phone or the original music file is low	Turn on the volume of the phone or the music
Bluetooth fail to connect	Over distance/obstacle/ Already be connected with another phone/ not changed to phone mode	Close to phone/ avoid Obstacle/ disconnected the other connected phone/change to the phone mode then search the connection
Fail to charging	No power in	Check the charger/ charging cable connected in right way
Power off automatically	Power off automatically	No voice or any operation in 15 mints power off automatically

## Cautious:

1. If there is a smoke or any other abnormal situation, please contact our seller or after service for an processing.
2. If inside of the machine got wet or caught in the rain, please put it in a ventilated place to dry.
3. No heating the machine in high temperature, easy to be burned or invalid the components inside.
4. No exclude in the sunshine/fire/other high temperature.

5. No throwing away, in case of falling damage.

6. Change the battery with the same battery mode.

If battery changed in a wrong way, there maybe an explosion dangerous.

7. No exposing the battery(including the battery package) in the sunshine/fire/heat or other the same situation.

## Environmental Friendly Note:

Toxic and hazardous substances or elements identification

Name	Toxic and hazardous substances or elements identification					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Plastic cover	X	○	○	○	X	○
Cover coating	X	○	○	○	○	X
PCBA board	X	○	○	○	○	○
Hardware accessory	X	○	○	X	○	○
Electronic components	X	○	○	○	○	X
Package materials	X	○	○	○	○	○

○: Indicates that the content of the toxic and hazardous substance in the homogeneous material of the part is below the limit required by the standard of SJ/T11363-2006.

×: Indicates that the content of the toxic and hazardous substance in the homogeneous material of the part is over the limit required by the standard of SJ/T11363-2006.

Notes: This product is 80% environmental friendly made from toxic free and safe material, the part with toxic and hazardous substance and elements can't be replaced by the toxic free and safe material because of the globally limited technology.

### FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### \*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

---

---